



SIGNAGE SCHEDULE			
SIGN NUMBER	SIGNAGE TYPE	SIGNAGE TEXT	NOTES
001	DIR-1	-	-
002	INF-1	-	-
003	REG-2	-	-
004	DM-1	SOUTH ELEVATORS	-
004A	PRO-1	ELEVATORS	-
005	REG-1	STAIR #9	-
006	REG-3	SEE NOTE 1	-
007	INF-6	EXIT	-
008	INF-3	-	-
008A	RD-1	252	-
009	RD-1	253	-
010	RD-1	254	-
010A	INF-3	-	-
011	DM-1	EXIT	-
011A	DM-1	SOUTH WING	-
012	INF-2	FIRE EXTINGUISHER	-
012A	PRO-1	FIRE EXTINGUISHER	-
013	RD-1	2510	-
014	RD-1	2566	-
014A	INF-3	-	-
015	RD-1	2512	-
016	RD-1	2514	-
017	RD-1	2515	-
017A	DIR-2	-	-
018	INF-6	EXIT	-
019	DM-1	2516	-
020	RD-1	2517	-
020A	PRO-2	2517/CHECK-IN	-
021	RD-1	2518	-
022	RD-1	2519	-
023	RD-1	2520	-
024	RD-2	2521	-
025	RD-1	2522	-
026	RD-1	2523	-
026A	INF-3	-	-
027	RD-1	2524	-
028	RD-2	2525	-
028A	INF-2	FIRE EXTINGUISHER	-
028B	PRO-1	FIRE EXTINGUISHER	-
029	RD-1	2526	-
030	RD-2	2525	-
031	RD-1	2528	-
032	INF-6	EXIT	-
033	RD-1	2530	-
034	RD-1	2532	-
035	RD-1	2534	-
036	RD-1	2533	-
037	REG-1	STAIR #10	-
037A	REG-3	SEE NOTE 2	-
037B	REG-2	EXIT	-
037C	INF-6	EXIT	-
038	INF-2	2535	-
039	INF-2	FIRE EXTINGUISHER	-
039A	PRO-1	FIRE EXTINGUISHER	-
040	RD-2	2535	-
041	RD-1	2536	-
041A	INF-3	-	-
042	RD-1	2538	-
043	RD-1	2540	-
044	RD-1	2542	-
045	RR-2	RESTROOMS	-
045A	PRO-1	RESTROOMS	-
045B	RD-1	2543	-
046	RD-1	2544	-
047	RR-3	2547	-
047A	RD-1	2547	-
048	RD-1	2546	-
049	RD-1	2551	-
050	RD-2	2551	-
051	INF-2	FIRE EXTINGUISHER	-
051A	PRO-1	-	-
052	RD-1	2550	-
053	RD-2	2551	-
054	RD-1	2552	-
055	RD-1	2555	-
055A	INF-3	-	-
056	RD-1	2554	-
057	RD-1	2556	-
058	RD-1	2558	-
059	RD-1	2560	-
059A	RD-1	2560A	-

NOTE:
WHERE NO TEXT APPEARS IN
SCHEDULE PROVIDE PER SIGN
ELEVATION.

SIGNAGE SCHEDULE			
SIGN NUMBER	SIGNAGE TYPE	SIGNAGE TEXT	NOTES
060	INF-6	EXIT	-
061	REG-3	-	-
061A	RD-1	2562	-
062	PRO-1	RESTROOMS	-
063	RR-2	2564	-
063A	RD-1	2564	-
064	RD-1	2566	-
065	PRO-2	2566/CHECK-IN	-
066	INF-1	-	-
067	REG-2	-	-
068	DM-1	SOUTH ELEVATORS	-
068A	PRO-1	ELEVATORS	-
069	REG-1	STAIR #9	-
070	REG-3	SEE NOTE 3	-
071	INF-6	EXIT	-
072	RD-1	3W20	-
073	INF-6	EXIT	-
074	DIR-3	3W22	-
074A	DIR-3	-	-
075	DIR-4	-	-
076	INF-1	-	-
077	REG-2	-	-
078	DM-1	SOUTH ELEVATORS	-
078A	PRO-1	ELEVATORS	-
079	REG-1	STAIR #9	-
080	REG-3	SEE NOTE 4	-
081	INF-6	EXIT	-
082	RD-1	4W18A	-
083	RD-1	4W17	-
084	RD-1	4W18B	-
085	RD-1	4W19	-
086	INF-6	EXIT	-
087	DIR-5	-	-
088	INF-1	-	-
089	REG-2	-	-
090	DM-1	SOUTH ELEVATORS	-
090A	PRO-1	ELEVATORS	-
091	REG-1	STAIR #9	-
092	REG-3	SEE NOTE 5	-
093	INF-6	EXIT	-
094	RD-1	5W17	-
095	RD-1	5W19	-
096	INF-6	EXIT	-
097	DIR-6	-	-
097A	REG-3	-	-
097B	DIR-7	-	-
098	INF-1	-	-
099	REG-2	-	-
100	DM-1	SOUTH ELEVATORS	-
100A	PRO-1	ELEVATORS	-
101	REG-1	STAIR #9	-
102	REG-3	SEE NOTE 6	-
103	INF-6	EXIT	-
104	RD-1	-	-
105	DIR-8	-	-
106	INF-1	-	-
107	REG-2	-	-
108	DM-1	SOUTH ELEVATORS	-
108A	PRO-1	ELEVATORS	-
109	REG-1	STAIR #9	-
110	REG-3	SEE NOTE 7	-
111	INF-6	EXIT	-
112	DIR-9	-	-
113	INF-1	-	-
114	REG-2	-	-
115	DM-1	SOUTH ELEVATORS	-
115A	PRO-1	ELEVATORS	-
116	REG-1	STAIR #9	-
117	REG-3	SEE NOTE 8	-
118	INF-6	EXIT	-

NOTE:
WHERE NO TEXT APPEARS IN
SCHEDULE PROVIDE PER SIGN
ELEVATION.

1 SIGN TYPE PRO-1

2 SIGN TYPE PRO-2

3 SIGN TYPE RR-1

4 SIGN TYPE RR-2

5 SIGN TYPE RR-3

6 SIGNAGE FRAME DETAIL

7 SIGN TYPE DM-1 & DM-2

8 SIGNAGE FRAME DETAIL

9 SIGN TYPE RR-1

10 SIGN TYPE RR-2

11 SIGN TYPE RR-3

12 SIGN TYPE RR-4

13 SIGN TYPE RR-5

14 SIGN TYPE RR-6

15 SIGN TYPE RR-7

16 SIGN TYPE RR-8

17 SIGN TYPE RR-9

18 SIGN TYPE RR-10

19 SIGN TYPE RR-11

20 SIGN TYPE RR-12

21 SIGN TYPE RR-13

22 SIGN TYPE RR-14

23 SIGN TYPE RR-15

24 SIGN TYPE RR-16

25 SIGN TYPE RR-17

26 SIGN TYPE RR-18

27 SIGN TYPE RR-19

28 SIGN TYPE RR-20

29 SIGN TYPE RR-21

30 SIGN TYPE RR-22

31 SIGN TYPE RR-23

32 SIGN TYPE RR-24

33 SIGN TYPE RR-25

34 SIGN TYPE RR-26

35 SIGN TYPE RR-27

36 SIGN TYPE RR-28

37 SIGN TYPE RR-29

38 SIGN TYPE RR-30

39 SIGN TYPE RR-31

40 SIGN TYPE RR-32

41 SIGN TYPE RR-33

42 SIGN TYPE RR-34

43 SIGN TYPE RR-35

44 SIGN TYPE RR-36

45 SIGN TYPE RR-37

46 SIGN TYPE RR-38

47 SIGN TYPE RR-39

48 SIGN TYPE RR-40

49 SIGN TYPE RR-41

50 SIGN TYPE RR-42

51 SIGN TYPE RR-43

52 SIGN TYPE RR-44

53 SIGN TYPE RR-45

54 SIGN TYPE RR-46

55 SIGN TYPE RR-47

56 SIGN TYPE RR-48

57 SIGN TYPE RR-49

58 SIGN TYPE RR-50

59 SIGN TYPE RR-51

60 SIGN TYPE RR-52

61 SIGN TYPE RR-53

62 SIGN TYPE RR-54

63 SIGN TYPE RR-55

64 SIGN TYPE RR-56

65 SIGN TYPE RR-57

66 SIGN TYPE RR-58

67 SIGN TYPE RR-59

68 SIGN TYPE RR-60

69 SIGN TYPE RR-61

70 SIGN TYPE RR-62

71 SIGN TYPE RR-63

72 SIGN TYPE RR-64

73 SIGN TYPE RR-65

74 SIGN TYPE RR-66

75 SIGN TYPE RR-67

76 SIGN TYPE RR-68

77 SIGN TYPE RR-69

78 SIGN TYPE RR-70

79 SIGN TYPE RR-71

80 SIGN TYPE RR-72

81 SIGN TYPE RR-73

82 SIGN TYPE RR-74

83 SIGN TYPE RR-75

84 SIGN TYPE RR-76

85 SIGN TYPE RR-77

86 SIGN TYPE RR-78

87 SIGN TYPE RR-79

88 SIGN TYPE RR-80

89 SIGN TYPE RR-81

90 SIGN TYPE RR-82

91 SIGN TYPE RR-83

92 SIGN TYPE RR-84

93 SIGN TYPE RR-85

94 SIGN TYPE RR-86

95 SIGN TYPE RR-87

96 SIGN TYPE RR-88

97 SIGN TYPE RR-89

98 SIGN TYPE RR-90

99 SIGN TYPE RR-91

100 SIGN TYPE RR-92

101 SIGN TYPE RR-93

102 SIGN TYPE RR-94

103 SIGN TYPE RR-95

104 SIGN TYPE RR-96

105 SIGN TYPE RR-97

106 SIGN TYPE RR-98

107 SIGN TYPE RR-99

108 SIGN TYPE RR-100

109 SIGN TYPE RR-101

110 SIGN TYPE RR-102

111 SIGN TYPE RR-103

112 SIGN TYPE RR-104

113 SIGN TYPE RR-105

114 SIGN TYPE RR-106

115 SIGN TYPE RR-107

116 SIGN TYPE RR-108

117 SIGN TYPE RR-109

118 SIGN TYPE RR-110

119 SIGN TYPE RR-111

120 SIGN TYPE RR-112

121 SIGN TYPE RR-113

122 SIGN TYPE RR-114

123 SIGN TYPE RR-115

124 SIGN TYPE RR-116

125 SIGN TYPE RR-117

126 SIGN TYPE RR-118

127 SIGN TYPE RR-119

128 SIGN TYPE RR-120

129 SIGN TYPE RR-121

130 SIGN TYPE RR-122

131 SIGN TYPE RR-123

132 SIGN TYPE RR-124

133 SIGN TYPE RR-125

134 SIGN TYPE RR-126

135 SIGN TYPE RR-127

136 SIGN TYPE RR-128

137 SIGN TYPE RR-129

138 SIGN TYPE RR-130

139 SIGN TYPE RR-131

140 SIGN TYPE RR-132

141 SIGN TYPE RR-133

142 SIGN TYPE RR-134

143 SIGN TYPE RR-135

144 SIGN TYPE RR-136

145 SIGN TYPE RR-137

146 SIGN TYPE RR-138

147 SIGN TYPE RR-139

148 SIGN TYPE RR-140

149 SIGN TYPE RR-141

150 SIGN TYPE RR-142

151 SIGN TYPE RR-143

152 SIGN TYPE RR-144

153 SIGN TYPE RR-145

154 SIGN TYPE RR-146

155 SIGN TYPE RR-147

156 SIGN TYPE RR-148

157 SIGN TYPE RR-149

158 SIGN TYPE RR-150

159 SIGN TYPE RR-151

160 SIGN TYPE RR-152