



AIR FLOW AND TEMPERATURE ZONES LEGEND

<p>(THIS SHEET ONLY)</p> <p>XXX = UN-DUCTED TRANSFER CFM</p> <p>S XXX/XXX = SUPPLY CFM OCCUPIED / UNOCCUPIED</p> <p>E XXX/XXX = GENERAL EXHAUST CFM OCCUPIED / UNOCCUPIED</p> <p>WE XXX/XXX = WET EXHAUST CFM OCCUPIED / UNOCCUPIED</p> <p>T XXX = DUCTED TRANSFER CFM</p> <p> = TEMPERATURE CONTROL ZONE WITH SENSOR AT INDICATED LOCATION</p> <p>AC XX/XX = AIR CHANGES PER HOUR MAX./MIN.</p> <p>N/A = NOT APPLICABLE</p> <p>P--/P++ = SPACE PRESSURE 0.08 TO 0.12 INCHES WATER GAGE RELATIVE TO ATMOSPHERE</p> <p>P-/P+ = SPACE PRESSURE 0.03 TO 0.06 INCHES WATER GAGE RELATIVE TO ATMOSPHERE</p> <p>PO = SPACE PRESSURE NEUTRAL OR SPACE PRESSURE NOT APPLICABLE</p>	
---	--

VA FORM 08-6231