

**Attachment #3 Vehicle Decommission List**

**Vehicle #7 Dodge Charger**

**VIN# 2C3CDXAGXCH295522**

**License Plate # G11-1599L**

	<u>PRODUCT DESCRIPTION</u>	<u>QTY</u>	<u>VISUAL</u>	<u>OPERATIONAL</u>
1)	<u>REMOVE EMBLEMS AND DECALS FROM INTERIOR</u>			
2)	<u>REMOVE EMBLEMS AND DECALS FROM EXTERIOR</u>			
3)	<u>REMOVE FRONT END POWER WIRING HARNESS</u>			
4)	<u>REMOVE UNDERHOOD ELECTRICAL □ ENGINE COMPARTMENT</u>			
5)	<u>REMOVE INTERIOR CENTER CONSOLE</u>			
6)	<u>REMOVE INTERIOR FLOORPLATE</u>			
7)	<u>REMOVE INTERIOR FACEPLATES</u>			
8)	<u>REMOVE INTERIOR CONSOLE ACCESSORIES</u>			
9)	<u>REMOVE INTERIOR PRISONER SEAT</u>			
10)	<u>REMOVE INTERIOR PRISONER CAGE</u>			
11)	<u>REMOVE INTERIOR WINDOW BARS</u>			
12)	<u>REMOVE INTERIOR DOOR PANELS</u>			
13)	<u>REMOVE INTERIOR LIGHTBAR</u>			
14)	<u>REMOVE INTERIOR RADAR ANTENNA</u>			
15)	<u>REMOVE INTERIOR CONTROLLER</u>			
16)	<u>REMOVE INTERIOR SIREN/PA</u>			
17)	<u>REMOVE INTERIOR 12V OUTLETS</u>			
18)	<u>REMOVE INTERIOR GUN RACK</u>			
19)	<u>REMOVE INTERIOR SCANNER</u>			
20)	<u>REMOVE INTERIOR RADIOS</u>			
21)	<u>REMOVE INTERIOR MIC CHIPS</u>			
22)	<u>REMOVE EXTERIOR PUSHBAR</u>			
23)	<u>REMOVE EXTERIOR PUSHBAR LIGHTS</u>			
24)	<u>REMOVE EXTERIOR SIREN SPEAKER</u>			
25)	<u>REMOVE TRUNK TRAY</u>			
26)	<u>REMOVE COMPUTER □ TRUNK</u>			
27)	<u>REMOVE RADAR HEAD - TRUNK</u>			
28)	<u>REMOVE GUN RACK - TRUNK</u>			
29)	<u>REMOVE ANTENNAS □ REAR AREA</u>			
	<u>INSTALL THE FOLLOWING COMPONENTS PER FACTORY CONDITIONS</u>			
1)	<u>DRIVER, PASSENGER, AND REAR PASSENGER SEAT BELTS</u>			
2)	<u>DOOR SKINS</u>			
3)	<u>REAR SEAT</u>			
4)	<u>CENTER CONSOLE</u>			

**Attachment #3 Vehicle Decommission List**

**Vehicle #8 Dodge Charger**

**VIN# 2C3CDXAGXCH295523**

**License Plate # G11-1617L**

	<u>PRODUCT DESCRIPTION</u>	<u>QTY</u>	<u>VISUAL</u>	<u>OPERATIONAL</u>
1)	<u>REMOVE EMBLEMS AND DECALS FROM INTERIOR</u>			
2)	<u>REMOVE EMBLEMS AND DECALS FROM EXTERIOR</u>			
3)	<u>REMOVE FRONT END POWER WIRING HARNESS</u>			
4)	<u>REMOVE UNDERHOOD ELECTRICAL □ ENGINE COMPARTMENT</u>			
5)	<u>REMOVE INTERIOR CENTER CONSOLE</u>			
6)	<u>REMOVE INTERIOR FLOORPLATE</u>			
7)	<u>REMOVE INTERIOR FACEPLATES</u>			
8)	<u>REMOVE INTERIOR CONSOLE ACCESSORIES</u>			
9)	<u>REMOVE INTERIOR PRISONER SEAT</u>			
10)	<u>REMOVE INTERIOR PRISONER CAGE</u>			
11)	<u>REMOVE INTERIOR WINDOW BARS</u>			
12)	<u>REMOVE INTERIOR DOOR PANELS</u>			
13)	<u>REMOVE INTERIOR LIGHTBAR</u>			
14)	<u>REMOVE INTERIOR RADAR ANTENNA</u>			
15)	<u>REMOVE INTERIOR CONTROLLER</u>			
16)	<u>REMOVE INTERIOR SIREN/PA</u>			
17)	<u>REMOVE INTERIOR 12V OUTLETS</u>			
18)	<u>REMOVE INTERIOR GUN RACK</u>			
19)	<u>REMOVE INTERIOR SCANNER</u>			
20)	<u>REMOVE INTERIOR RADIOS</u>			
21)	<u>REMOVE INTERIOR MIC CHIPS</u>			
22)	<u>REMOVE EXTERIOR PUSHBAR</u>			
23)	<u>REMOVE EXTERIOR PUSHBAR LIGHTS</u>			
24)	<u>REMOVE EXTERIOR SIREN SPEAKER</u>			
25)	<u>REMOVE TRUNK TRAY</u>			
26)	<u>REMOVE COMPUTER □ TRUNK</u>			
27)	<u>REMOVE RADAR HEAD - TRUNK</u>			
28)	<u>REMOVE GUN RACK - TRUNK</u>			
29)	<u>REMOVE ANTENNAS □ REAR AREA</u>			
	<u>INSTALL THE FOLLOWING COMPONENTS PER FACTORY CONDITIONS</u>			
1)	<u>DRIVER, PASSENGER, AND REAR PASSENGER SEAT BELTS</u>			
2)	<u>DOOR SKINS</u>			
3)	<u>REAR SEAT</u>			
4)	<u>CENTER CONSOLE</u>			