


NOTES:
1. DRAIN ALL LOW POINTS AS INDICATED ABOVE

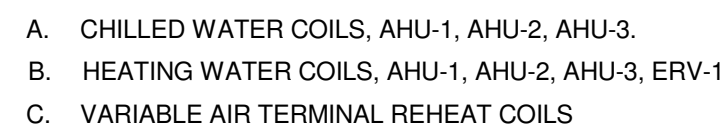

NOTES:
1. VENT ALL HIGH POINTS INDICATED ABOVE.
2. IF AUTOMATIC AIR VENTS ARE USED, PIPE DISCHARGE TO DRAIN


DRAIN VALVE AND AIR (HYDRONIC SYSTEMS)



NTS



NTS

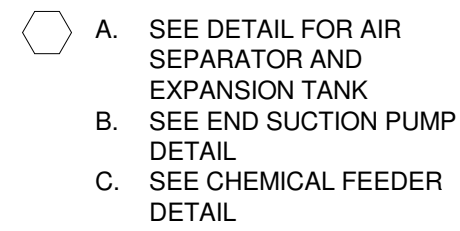


ITS



NTS




3 NTS

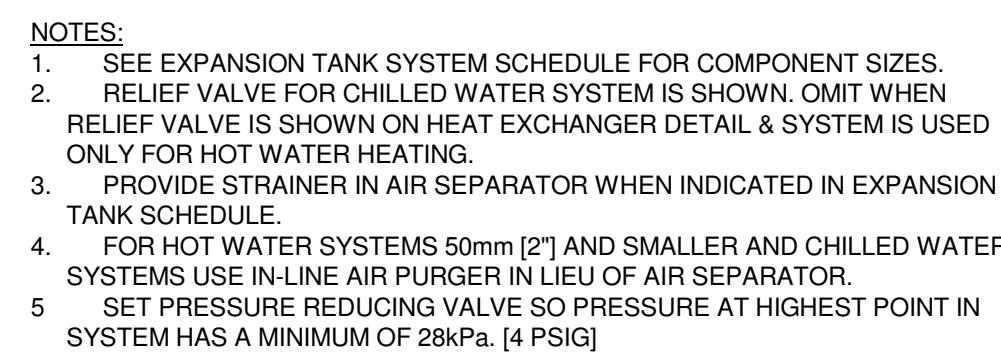


NTD



NTS

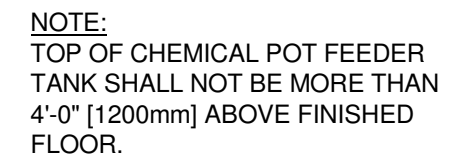

4 NTS

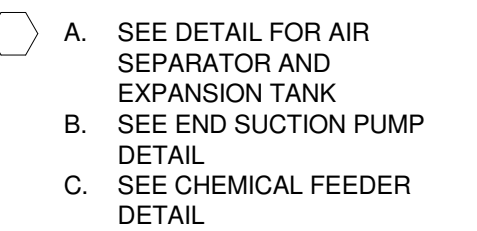

NTS

[illegible]