




POINT	NAME	UNIT	TYPE	STATUS	ALARM	TROUBLE	REMARKS
1	TEMPERATURE	°F	ANALOG	ON-OFF	NO	NO	
2	PRESSURE	PSI	ANALOG	ON-OFF	NO	NO	
3	PERCENT	%	ANALOG	ON-OFF	NO	NO	
4	SETPOINT ADJUSTMENT	°F	ANALOG	ON-OFF	NO	NO	
5	DDC POINT ADD		ANALOG	ON-OFF	NO	NO	
6	STATUS ON/OFF		ANALOG	ON-OFF	NO	NO	
7	STATUS OPEN/CLOSED		ANALOG	ON-OFF	NO	NO	
8	AIR FLOW STATUS		ANALOG	ON-OFF	NO	NO	
9	ALARM CONTACT STATUS		ANALOG	ON-OFF	NO	NO	
10	OFF-ON		ANALOG	ON-OFF	NO	NO	
11	OPEN-CLOSE		ANALOG	ON-OFF	NO	NO	
12	LOCK OUT		ANALOG	ON-OFF	NO	NO	
13	HIGH ANALOG		ANALOG	ON-OFF	NO	NO	
14	LOW ANALOG		ANALOG	ON-OFF	NO	NO	
15	HIGH BINARY		ANALOG	ON-OFF	NO	NO	
16	LOW BINARY		ANALOG	ON-OFF	NO	NO	
17	SENSOR FAIL		ANALOG	ON-OFF	NO	NO	
18	FLOW FAIL		ANALOG	ON-OFF	NO	NO	
19	EQUIPMENT FAIL		ANALOG	ON-OFF	NO	NO	
20	DIAGNOSTICS		ANALOG	ON-OFF	NO	NO	
21	PROBLE		ANALOG	ON-OFF	NO	NO	
22	SCHEDULING		ANALOG	ON-OFF	NO	NO	
23	DEMAND LOGGING		ANALOG	ON-OFF	NO	NO	
24	RESET		ANALOG	ON-OFF	NO	NO	

ARCHITECTS  
H.A.W.A.I.I  
1001 S. King Street, Suite 300  
Honolulu, Hawaii 96813  
Phone: (808) 521-1000  
Fax: (808) 521-1000

DDC SYSTEM POINTS LIST  
REV TO DATE

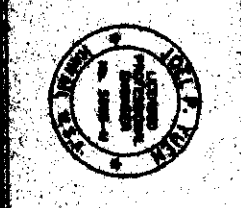

DDC SYSTEM POINTS LIST  
REV TO DATE

REVISIONS  
NO. 30  
DATE 11/8/84  
BY H.A.W.A.I.I

