Heat Exchange 3rd Floor

E

E MANUAL
LVE

VE

HC-2)

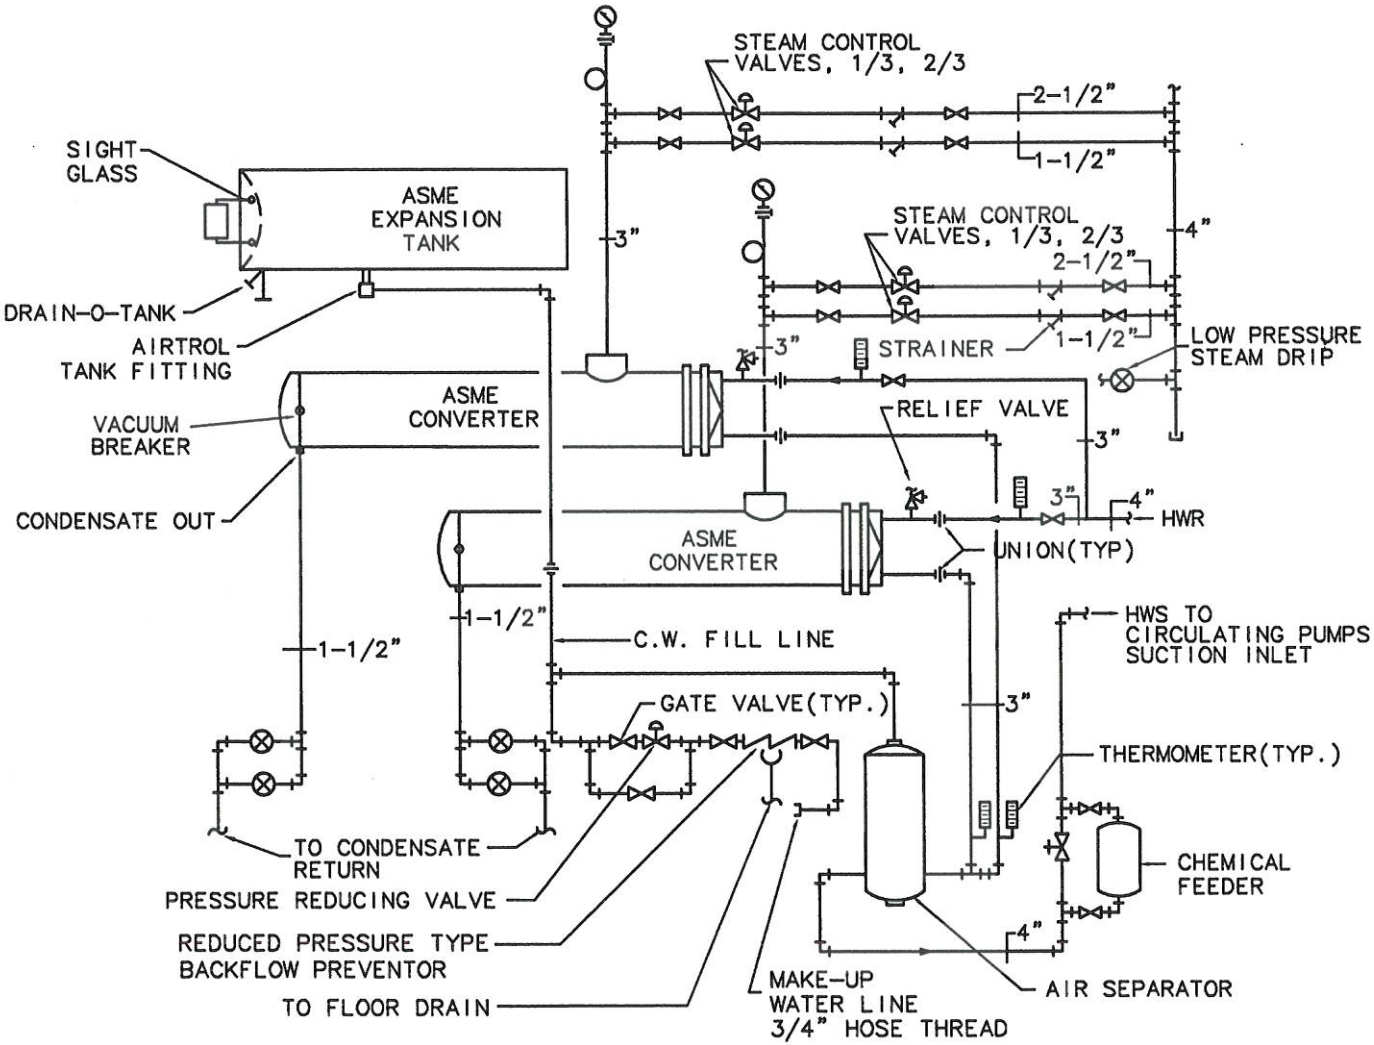

CONVERTER SCHEMATIC

NO SCALE