



Install 5/8" type X  
gyp board over  
existing wood  
ceiling. Tape finish  
and paint.


Paint existing walls  
inside new  
electrical closet.

Grout fill existing  
penetrations



Grout fill existing  
penetrations



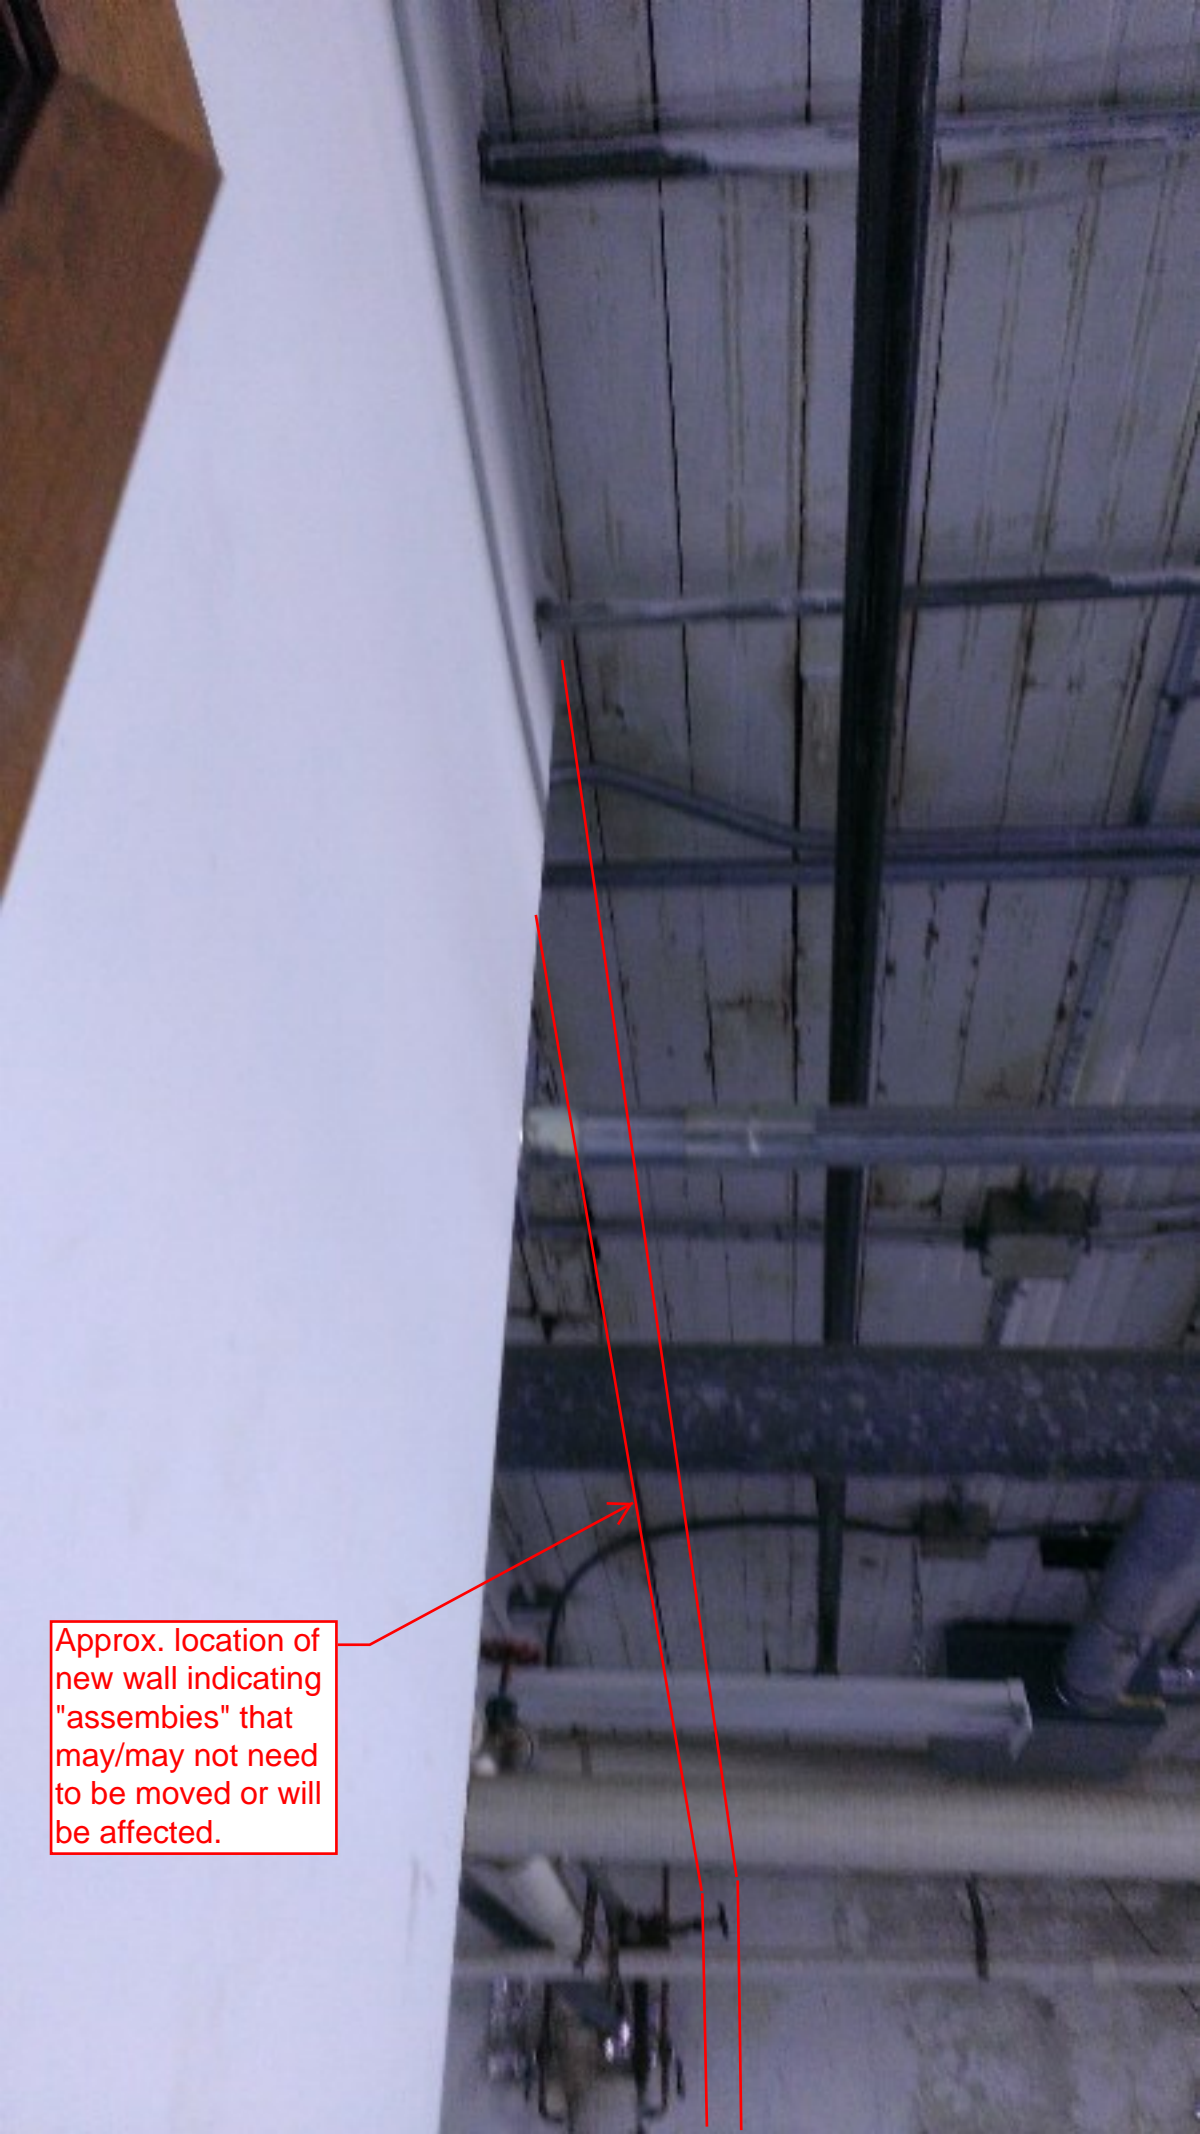


Approx. location of new wall indicating "assemblies" that may/may not need to be moved or will be affected.



Drywall patch  
existing  
penetrations

Grout fill existing  
penetrations



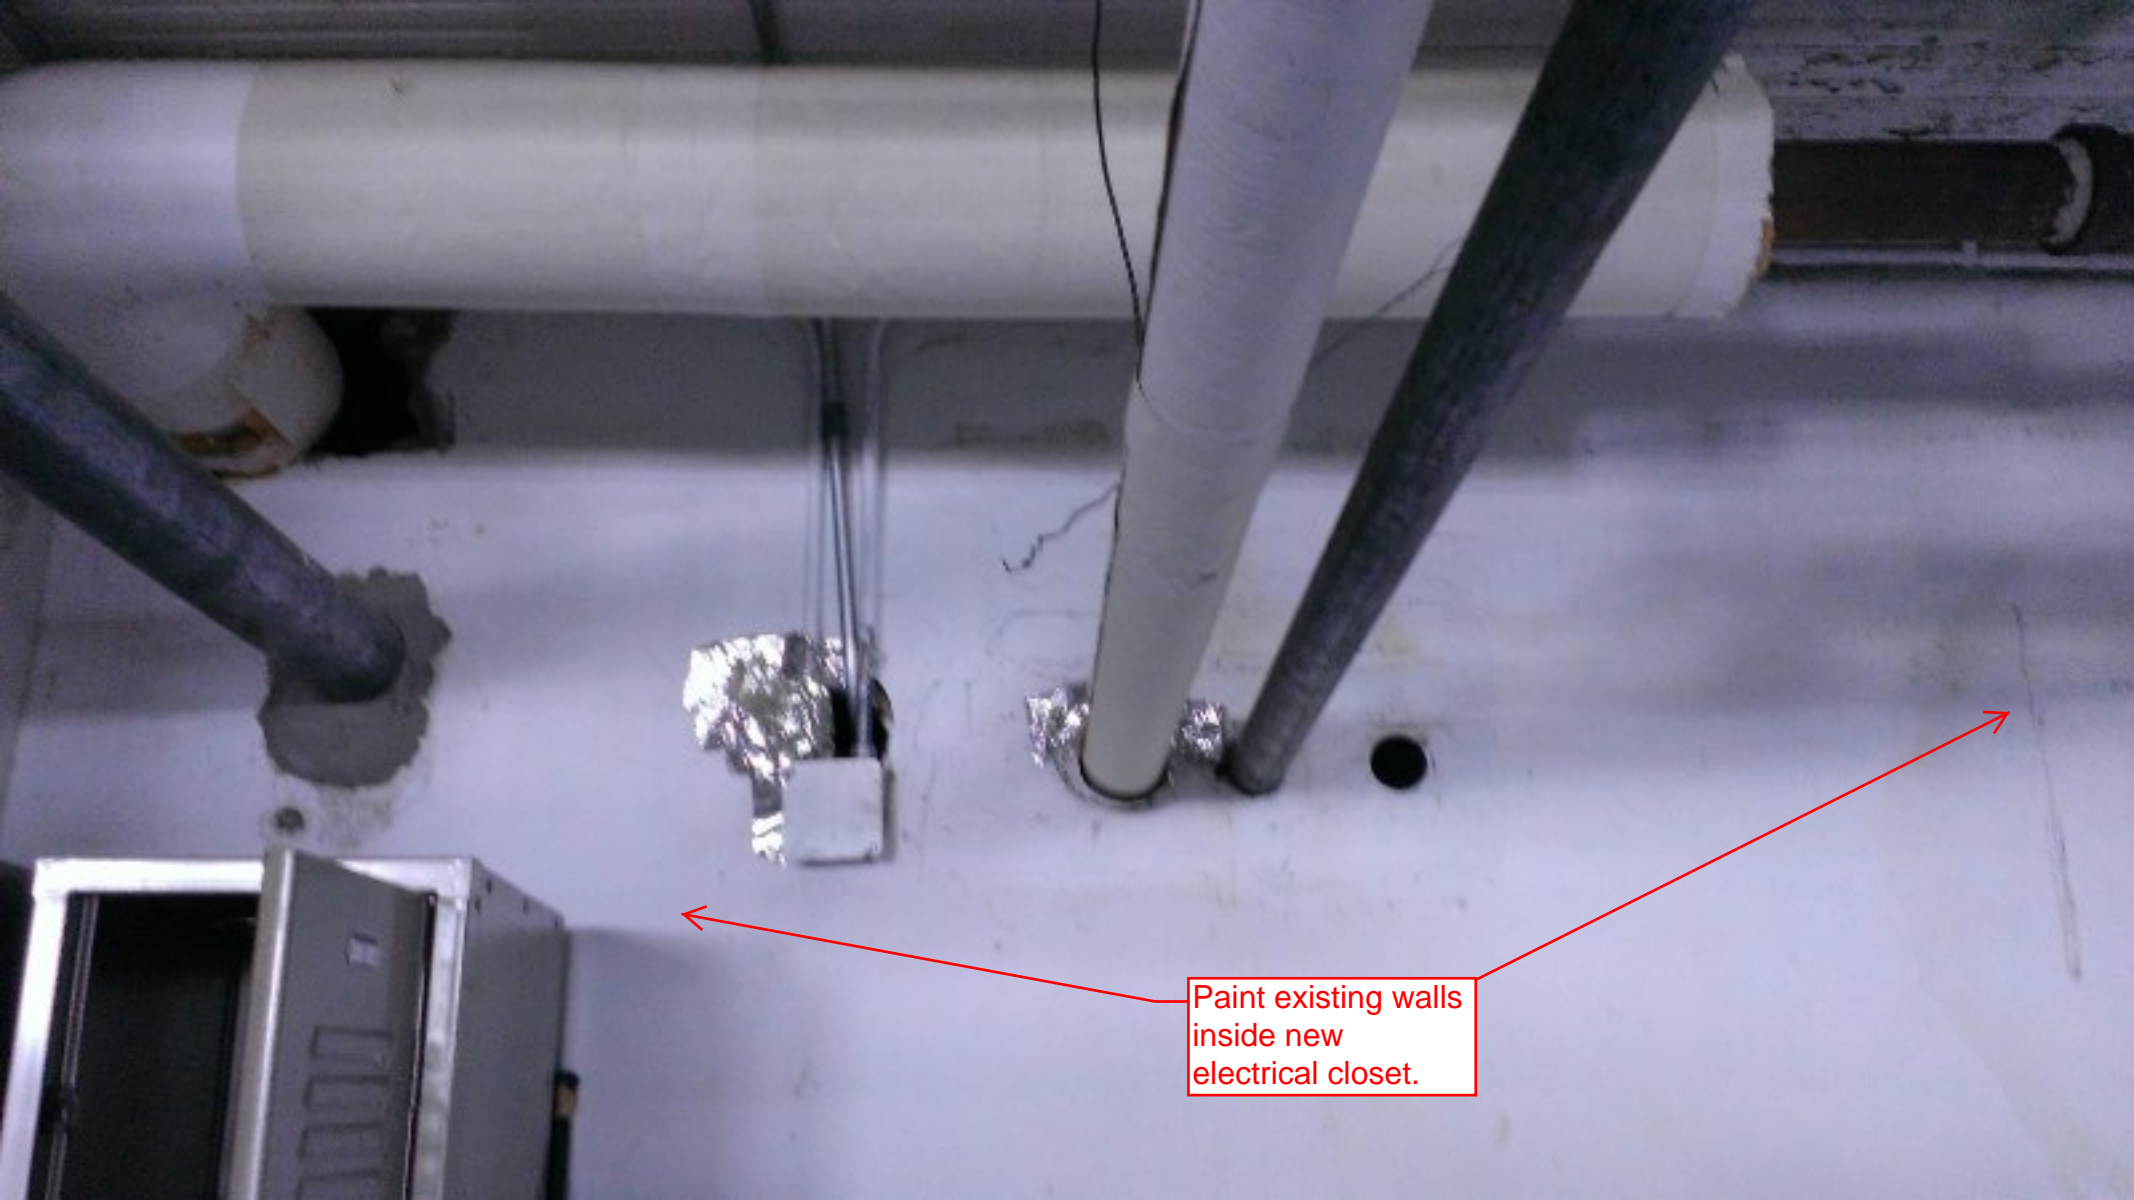


Paint existing walls  
inside new  
electrical closet.



Grout fill existing penetrations

Paint existing walls inside new electrical closet.



Grout fill existing  
penetrations





Paint existing walls  
inside new  
electrical closet.





Install 5/8" type X  
gyp board over  
existing wood  
ceiling. Tape finish  
and paint.

Paint existing walls  
inside new  
electrical closet.