


MATCHLINE G-G

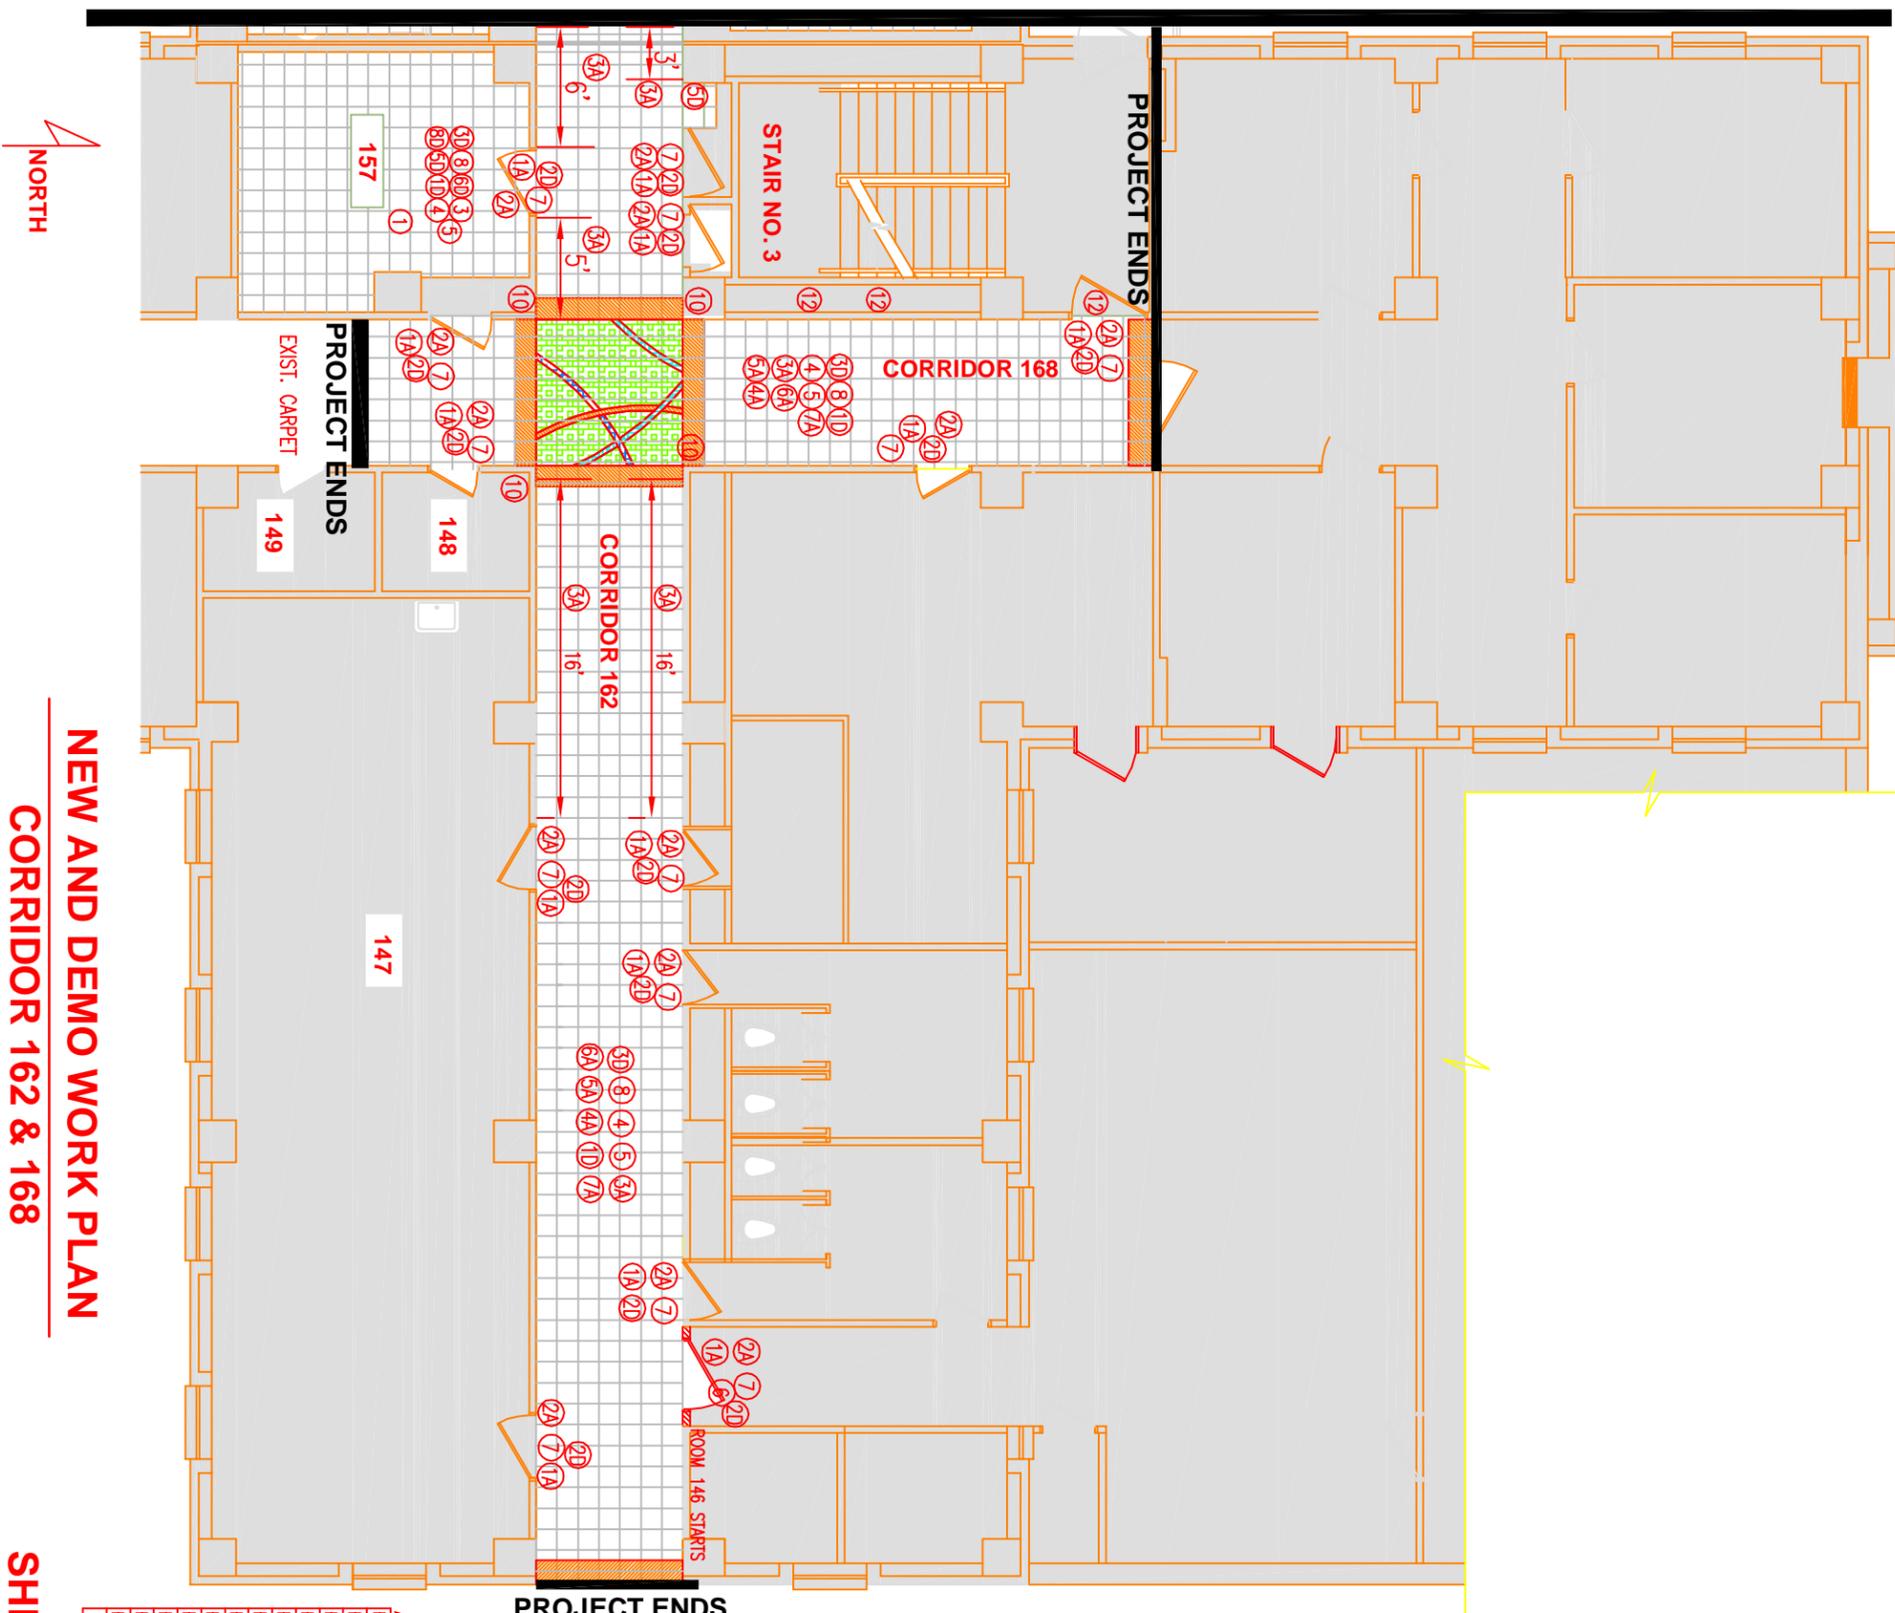

NEW AND DEMO WORK PLAN CORRIDOR 162 & 168

SHEET 107

APPROX. ROOM SIZES	
ROOM #	SQ. FT.
RM. 157	157
RM. 144	311
RM. 143A	140
RM. 143B	135
RM. 143C	134
RM. 143D	130
RM. 143E	135
RM. 146G	84
RM. 146F	83
RM. 146	511
RM. 146E	74

NEW WORK NOTES

- (1A) PROVIDE AND INSTALL INPRO DOOR FRAME GUARDS, TYPE: CUSTOM FORMED WITH JOP STOP
- (2A) PROVIDE AND INSTALL INPRO DOOR PROTECTION KICKPLATES, TYPE: MODEL 10, K41
- (3) NOT USED
- (4) SAND, PREP AND PAINT WALLS AND DOOR JAMBS 1-COAT PRIMER, 2-COATS SEMI-GLOSS SHERWIN WILLIAMS HARMONY PAINT. COLOR TO BE DETERMINED BY THE CONTR.
- (5) CONTRACTOR TO TEXTURE WALLS WITH KNOCK DOWN FINISH.
- (6) PROVIDE AND INSTALL NEW WALL AS SHOWN ON PLANS, CEILING LEVELING OR ALUM AS NEED.
- (7) PROVIDE AND INSTALL NEW WOOD DOORS, "BEST" HARDWARE, QUALITY & FINISH TO MATCH EXISTING DOORS IN CORRIDOR 163, RM 109 OR RM 107
- (8) PROVIDE AND INSTALL NEW CEILING TILES THROUGHOUT. BRAND: BAROQUE, ITEM # BET-167 24"x24"x5/8", TRIM EDGE. QUI-IN HOLES FOR FIRE SPRINKLERS, SPEAKERS, ETC.
- (9) CONTRACTOR WILL LEVEL EXIST. CEILING GRID.
- (9) PROVIDE AND INSTALL LAMINATE COUNTERTOPS, TYPE: WILSONART 182K-35 SEDONA SPART
- (10) PROVIDE AND INSTALL INPRO CORNER GUARD FROM FLOOR TO CEILING, TYPE: 1508H
- (11) PROVIDE AND INSTALL NEW UPPER AND LOWER CABINETS, WITH SINK, COUNTERTOP, BACKSPLASH.
- **SEE MORE DETAILS ON THIS SHEET
- (12) SAND, PREP AND PAINT DOOR AND JAMBS 2-COATS SHERWIN WILLIAMS HARMONY SEMI-GLOSS

DEMO WORK NOTES

- (1D) REMOVE ALL VINYL WALL COVERING.
- (2D) REMOVE EXISTING DOORS AND HARDWARE.
- (3D) REMOVE EXISTING CEILING TILES THROUGHOUT.
- (4D) DEMO EXISTING WALL AS SHOWN ON PLANS.
- (5D) REMOVE ALL CERAMIC TILE FROM WALLS.
- (6D) REMOVE ASBESTOS CONTAINING FLOOR TILE LAYERS, MASTIC AND REMOVE ALL RESIDUE PREP OR LEVEL FLOOR AS NEEDED FOR NEW FLOORING.
- (7D) DEMO EXISTING CABINET, PATCH OR REPAIR WALLS.
- (8D) REMOVE TERRAZO AT ALL WALLS TO A 90 DEGREE ANGLE TO ACCEPT THE NEW CONE BASE REMOVE CARPET AND GLUE.
- (9D) REMOVE CARPET AND GLUE.

ALT #1 IN CORRIDORS & RM 157 OR ALT #3

- (4A) REMOVE ASBESTOS CONTAINING FLOOR TILE LAYERS, MASTIC AND REMOVE ALL RESIDUE. PREP OR LEVEL FLOOR AS NEEDED FOR NEW FLOORING
- (5A) PROVIDE AND INSTALL NEW VCT AS SHOWN ON THE PLANS. (SEE VCT FINISH LEGEND, SHEET 108)
- (6A) REMOVE TERRAZO AT ALL WALLS TO A 90 DEGREE ANGLE TO ACCEPT THE NEW CONE BASE
- (7A) PROVIDE AND INSTALL NEW 4" CONE BASE, 1/8" THICK, 4" STRAIT PIECES
- (8A) REMOVE BILLIHOUSE CERAMIC TILE ALONG THE BASE FROM THE WALLS OR CONE BASE.
- (9A) REMOVE ALL CARPET AND GLUE.

ALTERNATE #2

- (3A) PROVIDE AND INSTALL INPRO 3500 SERIES HANDRAIL, TYPE AND QUALITY TO MATCH EXISTING HANDRAIL ON CORRIDOR 163. (SEE DIMENSIONS PROVIDED ON PLANS AS LOCATION OF HANDRAIL)

LEGEND

- NEW FULL HEIGHT WALL
- EXISTING TO REMAIN NOT IN CONTRACT
- EXISTING WALL TO BE REMOVED

REFERENCE MATERIAL AND FINISH LEGEND SHEET 108