


- NOTES
1. GRIND (E) SIDEWALK THE DEPTH OF THE TRUNCATED DOME PAD.
 2. INSTALL TRUNCATED DOME PADS WITH ADHESIVE AND FASTENERS AS PER MANUFACTURER SPECIFICATIONS.

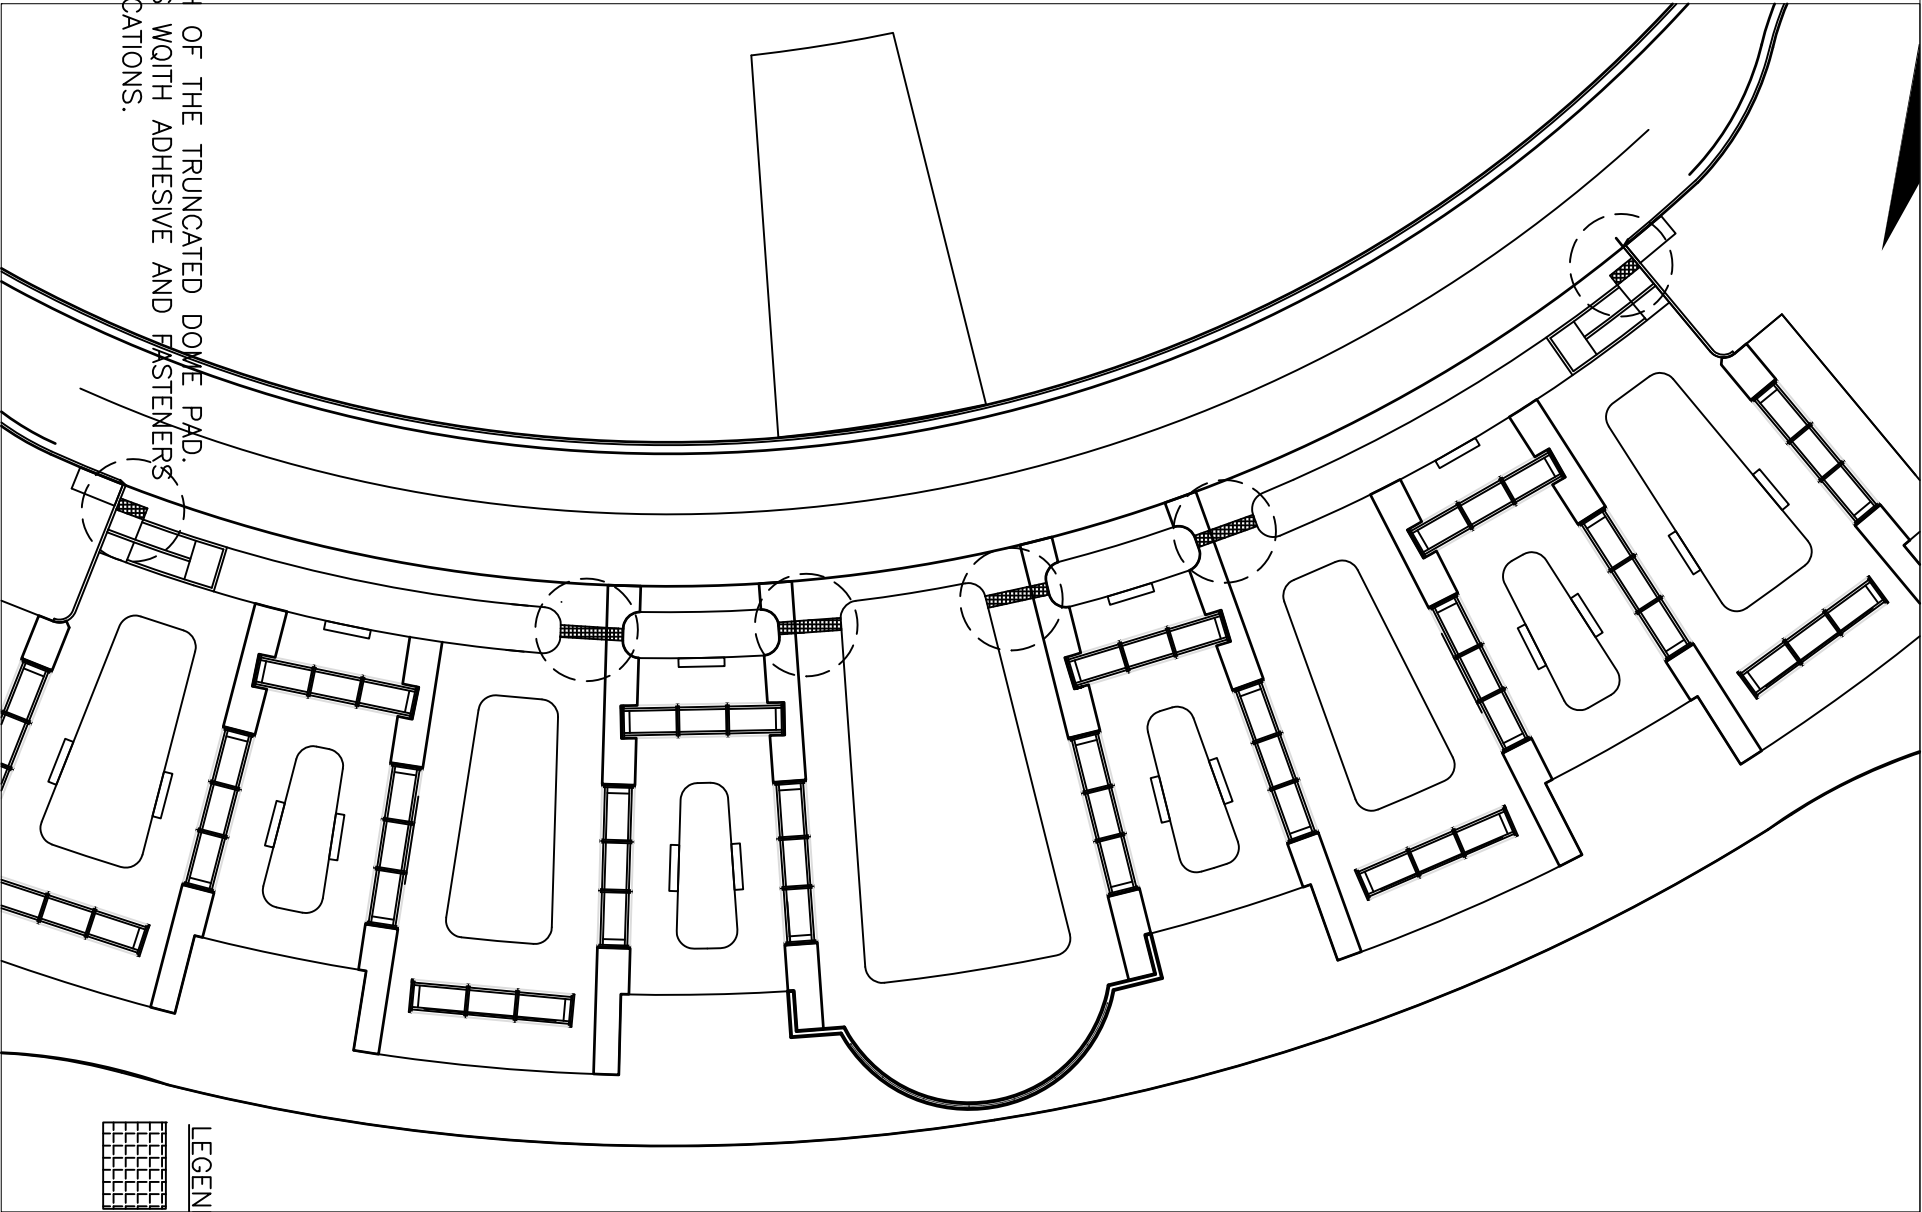

LEGEND

NEW TRUNCATED DOME

COLUMBARIUM #2

COLUMBARIUM #1