


GENERAL INTERIOR ELEVATION NOTES

1. REFER TO SHEET 1.A101 FOR FLOOR FINISH PLAN.
2. REFER TO SHEET 1.AE501 FOR CASEWORK SECTIONS AND DETAILS.
3. REFER TO SHEET 1.A601 FOR ROOM FINISH SCHEDULE AND FINISH LEGEND.
4. REFER TO 1.AE601 AND 1.A102 FOR PAINT INFORMATION.

KEY NOTES

1. INSTALL NEW 1/2" CORIAN SOLID SURFACE 4'-0" HEIGHT WALL CLADDING W/ EASED EDGE AT EXPOSED EDGE.
2. INSTALL NEW 1/2" CORIAN SOLID SURFACE SHOWER WALL W/ KERDI BOARD BEHIND, REFER TO E1 THIS SHEET FOR MORE DETAILS.
3. PRIME AND PAINT WALL, REFER TO FINISH PLAN 1.A601 FOR MORE INFORMATION.
4. REFINISH EXISTING DOOR AND FRAME, REFER TO 1.AE601. PROTECT HARDWEAR.
5. INSTALL EPOXY RESINOUS FLOOR W/ 6" INTEGRAL COVE BASE, REFER TO DETAIL A1/1.AE501.
6. SHOWER CURTAIN TRACK, REMOVE AND REINSTALL AFTER ALL WORK IS COMPLETE.
7. EXISTING PLUMBING FIXTURE, REMOVE AND REINSTALL AFTER ALL WORK IS COMPLETE.

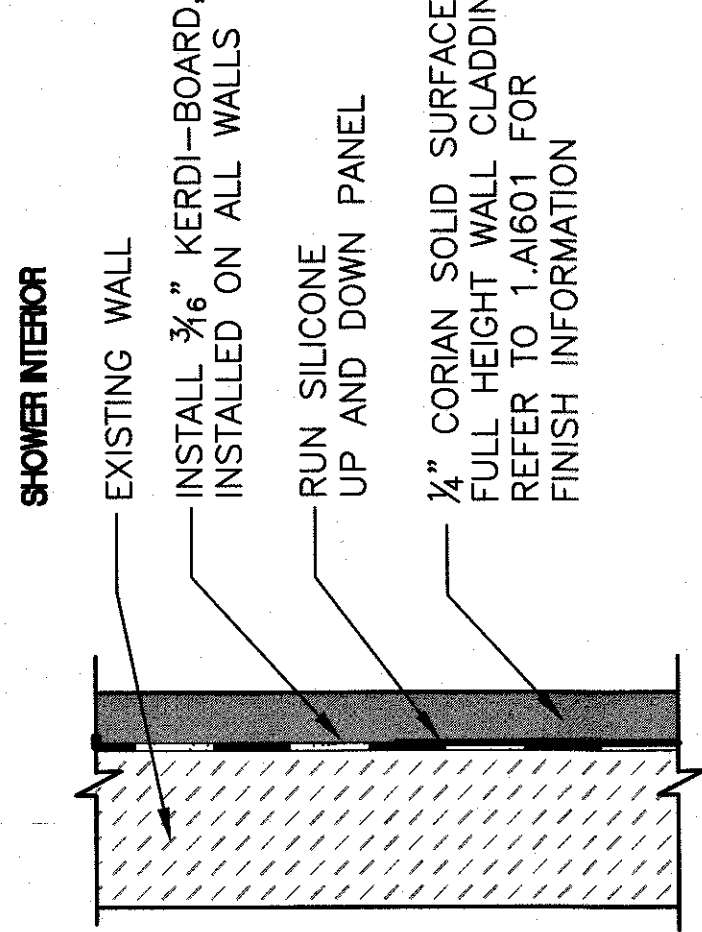

B6
NTS
SHOWER WALL DETAIL (TYP)

B2
1/2" = 1'-0"
BATHROOM ELEVATION TYP.

