

NOTES:

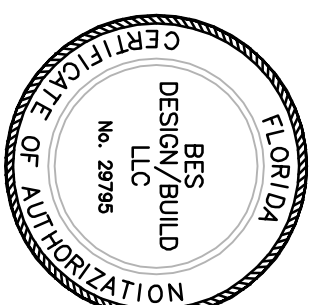
1. RISES DIAGRAM IS INTENDED AS A SCHEMATIC AND MAY NOT REPRESENT THE ACTUAL PHYSICAL LOCATION OR CORRECT GRAPHIC REPRESENTATION OF FUTURE TO BE INSTALLED. PLEASE REFER TO THE PLUMBING PLAN AND SCHEDULE FOR MORE INFORMATION.
2. USE WASTE WATER FROM LAUNDRY AS POWER FOR FLOOR DRAINS.
3. SS CLEANOUTS TO BE INSTALLED EVERY 50 FEET AND IN TURNS OF 45° OR GREATER.

FINAL SUBMISSION  
APRIL 6, 2012

IF SHEET IS LESS THAN (30"x42") IT IS A REDUCED PRINT; SCALE ACCORDINGLY

P601

# 1 PLUMBING RISER DIAGRAM - SANTARY SEWER

[illegible]