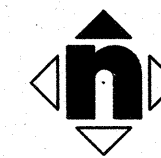


- ## KEY NOTES
- 1 COMBINATION ROOF/OVERFLOW DRAIN. CONNECT NEW 3" RD LINE TO (E) 3" RD LINE IN ATTIC. PROVIDE NEW 3" OD LINE IN ATTIC AND ROUTE AS SHOWN ON SHEET PP102.
  - 2 COMBINATION ROOF/OVERFLOW DRAIN. 3" RD & OD CONNECTIONS. SEE SHEET PP103 FOR CONTINUATION.
  - 3 HOSE BIBB ON ROOF. SEE SHEET PP103 FOR CONTINUATION OF ¾" CW.

|   |
|---|
| <b>PLUMBING FIXTURE NOTE</b>                        |
| REFER TO SHEET PP600 FOR PLUMBING FIXTURE SCHEDULE. |

1 PENTHOUSE PLUMBING REMODEL FLOOR AND ROOF PLAN  
SCALE: 1/8" = 1'-0"

[illegible]