

BASEMENT DETAIL 1 - DEMOLITION PLAN AREA 3




CODED NOTES:

- 1 REMOVE EXISTING STEAM TRAPS COMPLETE.
- 2 INSTALL NEW STEAM TRAP/PUMP AND ASSOCIATED PIPING. CONNECT PIPING TO EXISTING CONDENSATE RISER. SEE DETAIL 3 ON SHEET 1-43 FOR PIPING SCHEMATIC.

CONSULTANTS:

**FREDRICK, FREDRICK & HELLER
ENGINEERS, INC.**
672 EAST ROYALTON ROAD
BROADVIEW HTS., OHIO 44147
TEL (440) 546-8888
FAX (440) 546-8888

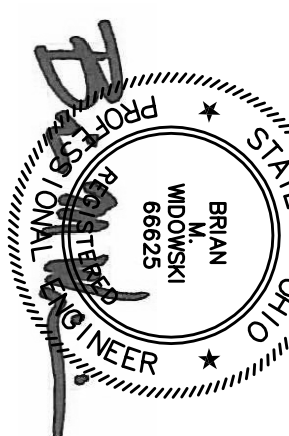

ARCHITECT:

Drawing title
**BASEMENT STEAM/CONDENSATE
PIPING DETAILS**

Project Title
STEAM TRAP MONITORING
INSULATION AND PIPING
UPGRADES

WF-W

JWF

4-03

**Office of
Facilities
Management**

