


LOWER CABINET:  
VERTICAL LAMINATE: PIONITE NEUTRAL NET - AG060 SUEDE  
HORIZONTAL TOP: STARON MOSAIC DALMATION - QD212  
UPPER CABINET:  
WILSONART CHORDONNAY - 7955-38  
EXISTING CABINET  
VERTICAL LAMINATE: PIONITE NEUTRAL NET - AG060 SUEDE

1. INSTALL SOLID SURFACE COUNTER IN CONTROL AREA.
2. INSTALL UPPER AND LOWER CABINETS – SITE VERIFY EXISTING OPENING.
3. HOLE IN COUNTER FOR DIRTY LINEN RECEPTACLE
4. ACCESSIBLE SINK AND FAUCET – SEE PLUMBING...
5. CHANGE COLOR OF THE FINISH ON EXISTING CABINET TO MATCH NEW COLOR SCHEME REPLACE PLASTIC LAMINATE
6. CABINET DOOR TO LINEN RECEPTACLE WITH PVC EDGE BANDING.
7. PANEL COVER UNDER SINK TO BE REMOVABLE, INSIDE DIMENSION TO BE 3'-0" CLEAR. USE PINTOX SCREWS FOR ATTACHMENT.
8. SOLID SURFACE COUNTER TOP
9. REMOVABLE PANEL WITH INTEGRATED TOE KICK
10. 1/2" PLASTIC LAMINATE FACED DOOR WITH PVC EDGE BANDING
11. 1/2" ADJUSTABLE SHELF WITH PVC EDGE BANDING
12. SOLID SURFACE BACK SPLASH, THE BACK BEHIND AND TO THE SIDE OF THE SINK TO EXTEND FROM THE COUNTER TOP TO THE UPPER CABINETS.
13. COVED FLOORING
14. ACCESSIBLE SINK W/ PIPE INSULATION
15. PROVIDE DRAIN, STOP AND TRAP COVER.
16. PROVIDE CABINET LOCK
17. HOLE IN CABINET FOR DISPENSING MEDICAL GLOVES.
18. MILLWORK GLOVE BOX HOLDER 3'x5'x10" INSIDE DIMENSION
19. 1/2" PLYWOOD BASE
20. PLASTIC LAMINATE FACED COMPUTER SHELF
21. PLASTIC LAMINATE FACED COMPUTER SHELF BRACE
22. SOLID SURFACE BACK SPLASH
23. PVC EDGE BAND
24. BACK SPLASH
25. LINE OF CABINET SPLASH

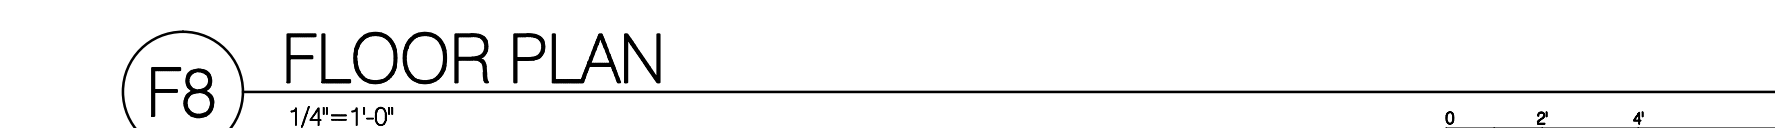

OFFICE OF  
CONSTRUCTION  
AND FACILITIES  
MANAGEMENT

 Department of  
Veterans Affairs