

- KEYED NOTES
- 01 EXIST SHUT OFF VALVES - IN CHASE.
 - 02 EXIST SHUT OFF VALVES AT 1ST FLOOR CEIL IN BRANCH TAKEOFF FROM MAIN.
 - 03 LOCATE EXIST. SHUT OFF VALVES IN CHASE OR ABOVE CEIL.
 - 04 USE EXISTING ACCESS DOOR.

LOCATION-NEW WORK NOTES-DESCRIPTIONS

- L1 EXIST WALL MOUNTED LAVATORY WITH FAUCET AND SHUT OFF VALVES. INSTALL MIXING VALVE BENEATH LAV, AND CONNECT TO EXIST FIXTURE FAUCET VALVES. INSTALL NEW POINT OF USE MIXING VALVE - TYPE I. REFERENCE INSTALL. DETAIL FOU-1
- L2 SAME AS TYPE L1 EXCEPT INSTALL BENEATH LAV IN CASEWORK.
- SV # IN WALL OR CHASE NEW SHOWER VALVE-REMOVE EXIST. # IDENTIFIER INDICATES SIZE. (1-3/4", 2-1/2", 3-1") PROVIDE ACCESS TO NEW SHOWER VALVE FROM FRONT OR REAR AS INDICATED. PROVIDE ACCESS PANEL OR DOOR AS INDICATED. PROVIDE NEW PIPING AS REQ'D. ENLARGE OPENING AT EXIST SHOWER VALVE AS REQ'D TO INSTALL NEW. REPAIR DAMAGE TO EXISTING SURFACES AS REQUIRED TO INSTALL NEW ACCESS PLATE OR DOOR.
- NHS RSH EXISTING FIXED SHOWER HEAD, REMOVE HEAD AND SPOUT PIPE. INSTALL NEW HAND SHOWER HOSE AND HEAD. INSTALL VAC CONNECTION, AND SLIDER BAR FOR HAND SHOWER HEAD.
- EHS RSC EXIST HAND SHOWER HEAD AND HOSE. CONNECTED TO SHOWER SPOUT PIPE. REMOVE SPOUT AND INSTALL VAC CONN. RECONNECT HOSE AND HAND SHOWER HEAD.
- S/HS RSC EXIST HAND SHOWER HEAD AND HAND HOSE. CONNECTED TO SHOWER SPOUT PIPE. REMOVE SPOUT AND INSTALL VAC CONN. RECONNECT HOSE AND HAND SHOWER HEAD.

EXISTING OR NEW DEVICES OR ITEMS TOTAL ASD TO BE INSTALLED 30

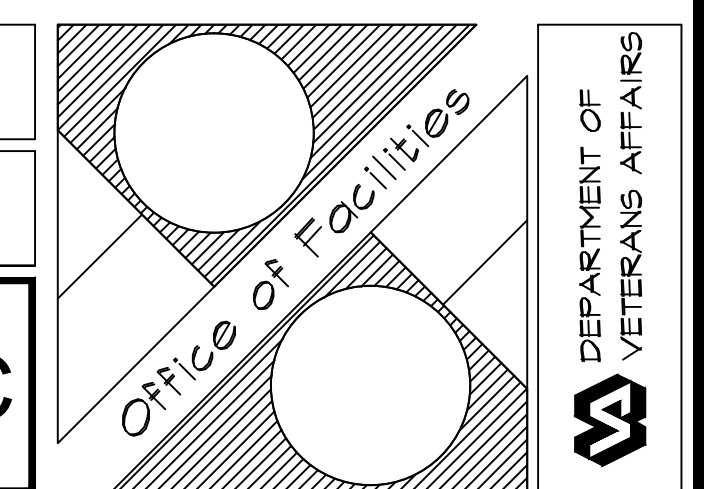
- SH HS EXIST SHOWER HEAD AND HAND SHOWER HEAD/HOSE.
- TS EXIST TUB WITH SPOUT
- TS SH EXIST TUB W/SPOUT AND SHOWER HD
- TS HSH EXIST TUB W/SPOUT AND HAND SHOWER HD AND HOSE
- NAD # NEW ACCESS DOOR AD - # SIZE -WALL ACCESS. # 1-16X16/ 2-24"X24"/SIZE 3-12"X12"/O- OTHER SIZE LOCATE WHERE SHOWN.
- AD EXISTING ACCESS DOOR TO REMAIN
- R AD EXIST AD TO BE REMOVED
- NAP ASV NEW CONTROL SIDE COVER PLATE AT NEW SHOWER VALVE. WITH OPENING FOR SHOWER VALVE, AND OPENINGS FOR ATTACHMENT. PROVIDE SIZE TO FIT. SECURE AND SEAL REFERENCE SPEC.
- SV # ASSE 1016 SV TYPE T/P NEW IN WALL SHOWER VALVE-REMOVE EXIST. CONNECT TO IN WALL PIPE PROVIDE PIPE & CONNECTIONS. REPAIR WALL SURF AS REQD INSTALL PER MFG. REFERENCE WORK NOTE
- SH EXIST FIXED SHOWER HEAD
- HSH EXISTING HAND SHOWER HEAD AND HOSE.

GENERAL NOTES

- 01 INSTALL ALL ITEMS AS INDICATED TO BE NEW OR TO BE RELOCATED.
- 02 REMOVAL AND REPLACEMENT OF EXISTING SHOWER VALVES IS TO BE FROM THE REAR OR BACK SIDE OF EXIST VALVE, WHERE NEW ACCESS DOORS ARE SHOWN.

PROJECT 598-17-105

APPROVED: MEDICAL CENTER DIRECTOR	APPROVED: FACILITY PLANNER	APPROVED: SERVICE CHIEF
APPROVED: ASSOCIATE DIRECTOR	APPROVED: CHIEF ENGINEER	APPROVED: SERVICE CHIEF
APPROVED: ASSISTANT DIRECTOR	APPROVED: SERVICE CHIEF	APPROVED: SERVICE CHIEF

DRAWING TITLE	PROJECT TITLE	DATE	
LR WORK LOCATION PLAN & DETAILS	CORRECT LEGIONELLA PROBLEMS	1/2017	
QUAD 3C-NLR	BUILDING NUMBER BITO-NLR	CHECKED KS	
	LOCATION V.A.M.C. NLR DIVISION	DRAWN RS	
		PROJECT NUMBER 598-17-105	
		DRAWING NO. ASD-3C	
		Dwg 4 of 4	