

## Gun Lock Instructions

This cable-type gun locking system is designed to help you keep your firearm stored in a safe condition. This lock does not relieve the handler of the firearm from always paying strict attention to gun safety rules. For protection from theft, the use of a safe or other secure system designed to secure your firearms is recommended. Always observe all of these warnings and instructions when using this gun lock.

**READ THE OWNER'S MANUAL SUPPLIED WITH YOUR FIREARM. KEEP FIREARMS AND AMMUNITION STORED SEPARATELY AND SECURELY. KEEP FIREARMS AND AMMUNITION OUT OF THE REACH OF CHILDREN.**


**THIS LOCK IS FOR USE AS AN AID TO YOUR SAFETY MEASURES. GUN LOCKS ARE NOT A SUBSTITUTE FOR SAFE FIREARM HANDLING AND STORAGE. SAFETY AND SAFE FIREARMS HANDLING IS EVERYONE'S RESPONSIBILITY.**

The use of this lock will help prevent your firearm from being used (discharged) by unauthorized persons. This lock is not designed to prevent theft. Strict safety practices should always be followed even when your gun is locked.

### GUN LOCK INSTALLATION

1. Unload all ammunition in a safe manner as explained in your firearm owner's manual.
2. Visually inspect the chamber, feed mechanism and magazine to assure yourself the firearm is completely unloaded.
3. With the key provided, unlock the lock, leaving the key in the open position.
4. Thread the loose end of the cable through the firearm as shown in the applicable figure.
5. Align the loose end of the cable with the receptacle in the lock body.
6. Push the end of the cable into the receptacle and turn the key to the locked position.
7. Pull on the lock body to test the connection with the cable to ensure the unit is locked properly.
8. Write down your key number and keep it in a secure location in the event you lose your key and need a replacement.

Figure 1

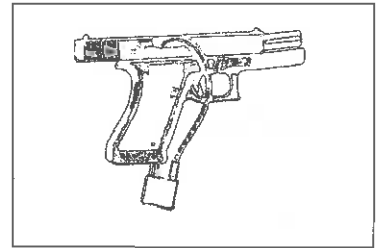

### **WARNING: NEVER INSTALL ON A LOADED FIREARM**

**WARNING: STORE THE GUN LOCK KEY IN A SEPARATE LOCATION FROM YOUR FIREARM. ALL FIREARMS SHOULD BE STORED AWAY FROM CHILDREN.**

**DO NOT WORK THE ACTION WITH THE LOCK IN PLACE, THIS WILL RESULT IN UNNECESSARY ABUSE OF THE LOCK AND THE FIREARM. REPLACE THE LOCK IF THE PROTECTIVE PLASTIC COATING IS SEPARATED FROM THE STEEL CABLE OR FROM THE TRIGGER LOCK FACE.**

**WARNING: THIS PRODUCT CONTAINS CHEMICALS, INCLUDING LEAD, KNOWN TO THE STATE OF CALIFORNIA TO CAUSE BIRTH DEFECTS AND OTHER REPRODUCTIVE HARM.**

Model No. CL012014 (California Department of Justice Approved Firearm Safety Device)

DAC Technologies  
Little Rock, Arkansas 72210  
800-920-0098  
sales@dactec.com

# CABLE-STYLE GUN LOCK INSTALLATION INSTRUCTIONS

This lock consists of an armored steel cable with one end permanently secured to a keyed padlock. When lock is properly installed, the firearm is unloaded and the lock prevents the firearm's action from closing. **This safety device meets the requirements of the American Society for Testing and Materials (ASTM) and the California Department of Justice.**

The cable-style lock supplied in this Project ChildSafe® safety kit should be used in addition to, and not as a substitute for, safe firearms handling and storage methods. As a firearms owner, it is YOUR RESPONSIBILITY to know how to safely handle and securely store your firearms. Please read the Project ChildSafe safety booklet included in this kit and your firearm's owner's manual for safe handling and storage methods.

## **! GUN LOCK SAFETY TIPS**

- Keep cable and lock outside of trigger guard at all times.
- Always push cable into padlock and turn key until securely locked. After removing key, tug on cable to ensure connection is secure.
- Store key to the gun lock and the firearm separately. Be sure to store key in a location inaccessible to unauthorized persons, particularly children.
- Do not work the firearm's action with the lock in place. This may damage the lock and/or the firearm.
- If the lock's protective coating becomes damaged or separated from the steel cable or the lock face, replace the lock.

**ABOUT LOCKING DEVICES:** No single lock will fit all firearms. The lock supplied in this Project ChildSafe safety kit will fit the actions of many commonly owned firearms (see installation instructions below). If the Project ChildSafe lock does not fit your firearm, we urge you to contact the manufacturer of your firearm to find out the type of lock recommended for it. A local firearms retailer or law enforcement agency can help you as well. Project ChildSafe urges you to find the appropriate locking device for your firearm so you can securely store your firearm in your home.

**REMEMBER:** No firearm's safety or lock can be a substitute for safe, careful gun handling and storage. This lock is intended to discourage unauthorized access to a firearm, particularly by young children. This lock may be defeated by a determined individual using tools or other aggressive means and may not prevent intentional misuse of a firearm.

**! WARNING:** Before installing this or any gun lock, be sure the firearm is completely UNLOADED and the safety is on SAFE. When installing the lock, keep your finger off the trigger and always have the firearm pointing in a safe direction.

Below are examples of lock installation procedures for common firearm actions.

**TO UNLOCK:** Turn key clockwise. Remove loose end of cable from padlock and thread it through UNLOADED firearm as explained and shown below. **TO LOCK:** With key turned to farthest clockwise position, insert loose end of cable into padlock. Turn key counterclockwise and remove key. Check that cable is secure.


### **Autoloading Pistols**

With the slide locked back and magazine removed, insert the cable through the ejection port and out the magazine well. **To lock:** With key turned to farthest clockwise position, insert loose end of cable into padlock. Turn key counterclockwise and remove key. Check that cable is secure.




### **Revolvers**

With the cylinder open, insert the cable through the barrel, or through an empty cylinder chamber. **To lock:** With key turned to farthest clockwise position, insert loose end of cable into padlock. Turn key counterclockwise and remove key. Check that cable is secure.

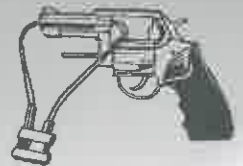

### **Bolt Action Rifles**


Open the action (lock it open if your firearm has a bolt hold-open device) and remove the magazine. Insert the cable through the ejection port and out the magazine well. **To lock:** With key turned to farthest clockwise position, insert loose end of cable into padlock. Turn key counterclockwise and remove key. Check that cable is secure.

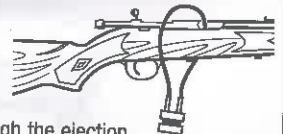

OR

Remove the bolt from the rifle. Insert the cable through the ejection port and out through the end of the receiver assembly. **To lock:** With key turned to farthest clockwise position, insert loose end of cable into padlock. Turn key counterclockwise and remove key. Check that cable is secure.

### **Autoloading and pump-action shotguns**

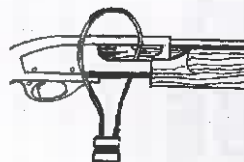

With the bolt in the locked open position, insert the cable through the ejection port and out the loading port. **To lock:** With key turned to farthest clockwise position, insert loose end of cable into padlock. Turn key counterclockwise and remove key. Check that cable is secure.




Copyright ©2008

National Shooting Sports Foundation, Inc.



*"This project was supported by Grant No. 2008-JD-BX-0513 awarded by the Bureau of Justice Assistance. The Bureau of Justice Assistance is a component of the Office of Justice Programs, which also includes the Bureau of Justice Statistics, the National Institute of Justice, the Office of Juvenile Justice and Delinquency Prevention, and the Office for Victims of Crime. Points of view or opinions in this document are those of the author and do not represent the official position or policies of the United States Department of Justice."*


Content of this brochure copyright ©2008 by the National Shooting Sports Foundation, Inc. All rights reserved. No part of this booklet may be reproduced in any manner whatsoever without the express written consent of the National Shooting Sports Foundation, except in the case of brief excerpts to articles. All inquiries should be addressed to the National Shooting Sports Foundation, 11 Mile Hill Road, Newtown, CT 06470.

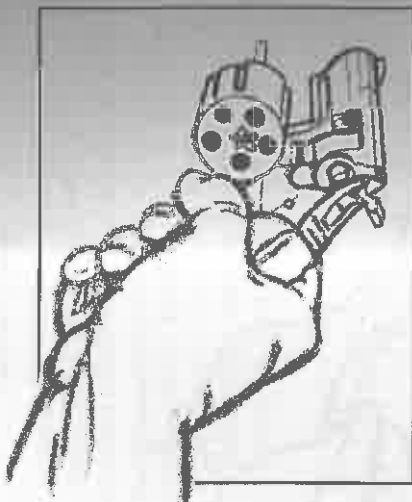

**A**s a firearms owner, it is your responsibility to know how to properly handle any firearm you own and also to know how to secure your firearm(s) in a safe manner in your home. Project ChildSafe® has been created to help you accomplish these very important safety goals.


If for any reason you feel uncomfortable with or are unable to accept these responsibilities, we strongly urge you not to own a firearm.

## Handling Firearms in a Safe Manner

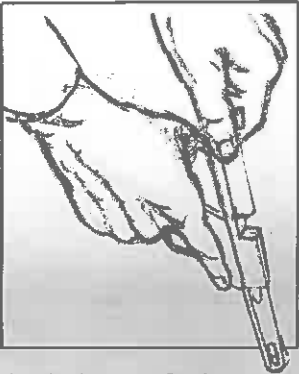


Firearms safety begins with understanding and carefully following all the rules of safe gun handling. Before handling any firearm, you should be familiar with the following safety procedures:

- ❑ Be sure you know how the firearm operates. Not all firearms are the same. Know how to safely open and close the action of the firearm and know how to safely remove any ammunition from the gun or from the gun's magazine. The manufacturer's name and location are on every gun – write them for free safety and operating instructions.
- ❑ Always keep a gun pointed in a safe direction, even when handling an unloaded gun. A "safe direction" means that the gun is pointed so that even if it were to fire it would not result in an injury.

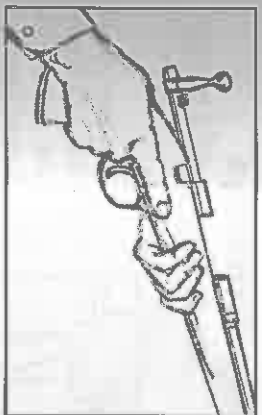

- ❑ Never assume that a firearm is unloaded. Whenever you pick up a gun, the first thing you should do is to point it in a safe direction and make sure it is unloaded. Open the action and look into the chamber(s), which should be clear of ammunition. If the gun has a magazine, carefully remove it before opening the action. Then open the action to be sure the chamber is clear of ammunition.
  - ❑ Always keep your finger off the trigger, even when handling an unloaded gun. When holding a gun, rest your finger outside the trigger guard or along the side of the gun. The only time you should touch the trigger is when you are at a shooting range or other safe shooting location and you are actually ready to fire.
- Remember, nearly all firearms accidents in the home can be prevented simply by making sure that guns are kept unloaded and locked up, with ammunition secured in a separate location.**

## Storing Firearms in a Safe Manner

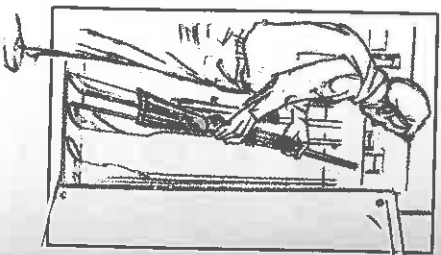


As a firearms owner, you must make absolutely sure that guns in your home are stored so that they are not accessible to children or other unauthorized persons. Hiding a gun in a closet, drawer or similar location is *not* safe storage. Children are extremely curious and might find a gun in your home that you thought was safely hidden or inaccessible.

As with most aspects of home safety, your objective as a firearm owner is to put in place a series of simple precautions (multiple safeguards) that together help create a secure environment for firearms in the home. Each of these precautions is designed to provide an additional barrier against unauthorized use.

### Key guidelines for safe storage include:

- ✓ Unloaded firearms should be stored in a locked cabinet, safe, gun vault or storage case. Be sure to place a locked storage case in a location inaccessible to children.

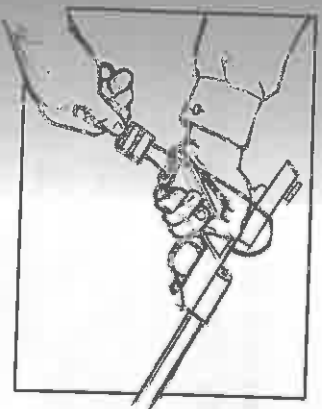


- ✓ Unloaded firearms can also be secured with a gun locking device that renders the firearm inoperable. A gun lock should be used as an additional safety precaution and not as a substitute for locked storage. If firearms are disassembled, parts should be securely stored in separate locations.

- ✓ Store ammunition in a locked location separate from firearms.

- ✓ Always re-check firearms carefully and completely to confirm that they are "still" unloaded when you remove them from storage. Accidents could occur if a family member has loaned or borrowed a gun and then carelessly returned it to storage while it was still loaded.

## ***Firearms Kept for Home Security***

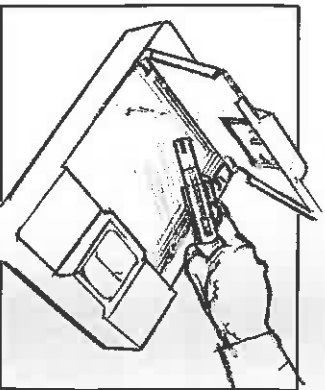

The decision to maintain a firearm in the home for self-protection is a serious, personal matter. Unlike passive safety devices, such as alarm systems, firearms used for home protection require significantly more involvement by

the owner. Any added safety benefit that may be derived from a firearm depends in large measure on the owner's commitment to appropriate training and a clear understanding of safe handling and storage rules. Are your security concerns realistic and consistent with local crime rates? Do other adults in your household support the decision to maintain a gun in the home? If they will have access to the firearm, will they join you in a firearms training and safety program? What precautions will be practiced to safeguard children? Do risk factors such as drug and alcohol abuse exist within your household? In addition, issues such as individual temperament, reaction to emergency situations, and specific family circumstances should also enter in the decision.






If you must have quick access to a loaded firearm in your home, you need to take special safety measures. Keeping a gun to defend your family makes no sense if that same gun puts your family members or visitors to your home at risk. Many home firearms accidents occur when unauthorized individuals – often visitors – discover loaded firearms that were carelessly left out in the open.

If you choose to keep a firearm for home security, your objective should be to create a situation in which the firearm is readily available to you, yet inaccessible or inoperative to others. Special lockable cases that can be quickly opened only by authorized individuals are options to consider.

You must exercise full control and supervision over a loaded gun at all times. This means the gun must be unloaded and placed in secure storage whenever you leave the gun in your home or elsewhere. Secure ammunition separately.

**Your most important responsibility is ensuring that unsupervised children cannot encounter loaded firearms. The precautions you take must be completely effective. Anything less invites tragedy and is a serious violation of your responsibility as a gun owner.**

# Options for Securely Storing Firearms

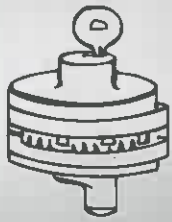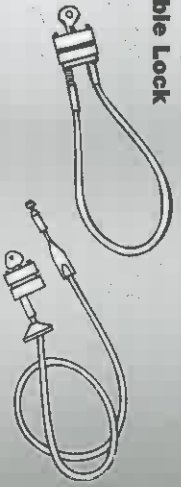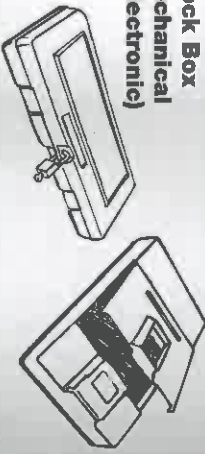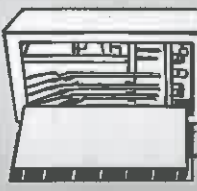METHOD	FEATURES	COMMENTS
<b>Trigger Lock</b> 	<p>Widely available, can effectively block trigger but does not prevent loading.</p>	<p><b>⚠ Caution:</b> should never be used on a loaded gun because it can cause the gun to fire under certain circumstances; can't be used on lever-action firearms; keys and combinations must be kept away from children and other unauthorized persons.</p>
<b>Cable Lock</b> 	<p>Widely available, can be used on most firearms, can also be used to lock a gun to a solid object.</p>	<p>Be sure to install according to directions, not around trigger; keys and combinations must be kept away from children; cable can be cut.</p>
<b>Lock Box (Mechanical &amp; Electronic)</b> 	<p>Conceals and protects guns.</p>	<p>Provides secure storage for loaded or unloaded firearm, but in electronic models batteries will need replacement; depending on size, locked box can be stolen; keys and combinations must be kept away from children and other unauthorized persons.</p>
<b>Gun Safe</b> 	<p>Most secure storage for multiple guns.</p>	<p>Certain models are heavy, expensive; keys and combination must be kept away from children and other unauthorized persons.</p>
<b>Disassembling Gun</b> 	<p>Creates a condition where gun cannot be fired.</p>	<p>Not possible with all guns; requires knowledge of correct assembly and disassembly procedures; don't lose the parts.</p>



## A MESSAGE FOR YOUR CHILDREN

Young people are naturally curious about firearms and, as a result, may be tempted to "play" with a firearm they find. Make sure young people in your home are aware of and understand the safety guidelines described below.

1. Don't go looking for guns in your house or a friend's house. Don't let other kids look for guns in your house.
2. If you find a gun in your house – or anywhere else – STOP! Leave it alone. Don't touch it. Don't let anyone else touch it. Leave the area and be sure to tell an adult at once.
3. Even if a gun looks like a toy, don't touch it. Some real guns may look like toy guns, so don't take a chance. Leave the area and immediately tell an adult.

**REMEMBER... IF YOU FIND A GUN, DON'T PICK IT UP, JUST LEAVE IT ALONE, AND GO TELL AN ADULT RIGHT AWAY!**

## GENERAL FIREARM SAFETY TIPS

- Keep all firearms locked in a safe place, away from children and other unauthorized persons.
- Store ammunition under lock and key, separately from firearms.
- Read and understand the owner's manual that came with your firearm.
- Follow safe gun handling practices: keep muzzle pointed in a safe direction; keep fingers off the trigger; and keep the firearm unloaded when not in use.



**National Shooting Sports Foundation**  
 11 Mile Hill Road, Newtown, CT 06470-2359  
 203/426-1320 • Fax: 203/426-1245  
[www.projectchildsafe.org](http://www.projectchildsafe.org)



[www.psn.gov](http://www.psn.gov)