



A.	CONTRACTOR TO COORDINATE ALL SHUTDOWNS AND OUTAGES WITH COR 2 WEEKS PRIOR TO COMMENCEMENT OF WORK.
B.	THE CONTRACTOR SHALL VISIT THE SITE PRIOR TO BIDDING AND PERFORM A FIELD SURVEY IN ORDER TO CONFIRM LOCATION AND SIZES OF EXISTING PLUMBING SERVICES.
C.	THE CONTRACTOR MAY SUBMIT THEIR BASE BID ON ALTERNATE PIPING LAYOUT . PROVIDING IT COMES WITH THE FOLLOWING.
	1. FIELD SURVEY HAS BEEN COMPLETED AND PROPOSED PIPING LAYOUT WILL NOT CONFLICT WITH EXISTING EQUIPMENT OR WILL NOT DISRUPT PRESENTLY OCCUPIED AREAS.
	2. CONTRACTOR HAS REVIEWED PLANS FOR COORDINATION WITH NEW ARCHITECTURAL , HVAC AND ELECTRICAL TRADES TO AVOID COLLISIONS.
	3. NEW PIPING SHALL NOT CONNECT TO EXISTING PIPING OF A LESSER SIZE.
	4. INSTALLATION COMPLIES WITH NATIONAL , STATE AND LOCAL CODES AND STANDARDS.
D.	CONTRACTOR TO ROUTE MEDICAL GAS PIPING THROUGH HEADWALL UNIT AND MAKE FINAL CONNECTION TO OUTLETS AS REQUIRED.
E.	ROUTE MEDICAL GAS PIPE AND DROP THROUGH INTERSTITIAL SPACE TO MEDICAL GAS OUTLETS.
F.	REFER TO DRAWING PD102DA FOR DEMOLITION WORK.
G.	CONTRACTOR TO MAKE FINAL CONNECTIONS TO OWNER FURNISHED EQUIPMENT.
H.	REFER TO DRAWING P001 FOR PLUMBING MEDICAL GAS GENERAL NOTES.

1. NEW MEDICAL GAS ALARM PANEL.
2. MEDICAL GAS ZONE CONTROL VALVE CABINET. REFER TO DETAIL D5P501.
3. CONNECT 3/4" OXYGEN TO EXISTING 1" OXYGEN AND 3/4" MEDICAL AIR TO EXISTING 3/4" MEDICAL AIR.
4. EXISTING 2" MEDICAL VACUUM, 3/4" MEDICAL AIR AND 1 1/2" OXYGEN RISERS.
5. 3/4" MEDICAL VACUUM, 1/2" MEDICAL AIR AND 1/2" OXYGEN DOWN TO EXISTING HEADWALL UNIT, MAKE FINAL CONNECTIONS.
6. 3/4" MEDICAL VACUUM, 1/2" MEDICAL AIR AND 1/2" OXYGEN DOWN TO WALL OUTLETS, MAKE FINAL CONNECTIONS.
7. PRESSURE SENSORS. WIRE TO MEDICAL GAS ALARM PANEL AT NURSE STATION 3D-200.
8. NEW MEDICAL GAS ZONE CONTROL VALVE CABINET. REFER TO DETAIL A4P501.
9. BACKFEED EXISTING MEDICAL AIR AND OXYGEN TO EXISTING PAIN TREATMENT.
10. CONNECT 2" MEDICAL VACUUM TO EXISTING 2" MEDICAL VACUUM RISER.
11. CONNECT 1 1/2" MEDICAL VACUUM AND 3/4" OXYGEN TO EXISTING MEDICAL VACUUM AND OXYGEN PIPING SERVING EXISTING TREATMENT ROOMS.
12. MEDICAL GAS ZONE CONTROL VALVE CABINET. 1 1/2" MEDICAL VACUUM, 3/4" OXYGEN.


	EXISTING MED GAS TO REMAIN
	NEW MA
	NEW O
	NEW MV
	POINT OF CONNECTION
	FLOW DIRECTION
	END CAP



$1/8'' = 1'-0''$

## CONSULTANTS:

120 Vassar Dr SE Suite 100  
Albuquerque New Mexico 87106  
Tel 505 242 6880 Fax 505 242 6881

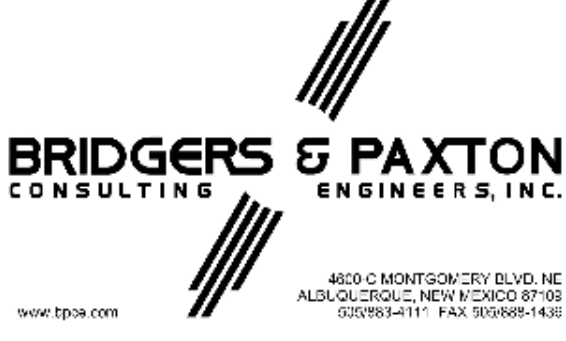

Department of  
Veterans Affairs