



Stainless Steel Closure at North face in Room 15D - Inverted U Shape at Exterior of Chase - 16 ga. (.0625) Brushed Finish - Continuous w/o joints, OD 7'-1" x 4' - 4", 1/8" radius. at 2-top corners, 1/16" longitude architectural radius bend at 3 exterior edges, Mount with SS machine screws and finishing washers 8" OC at face, Finish smooth all edges. Provide fitting for smooth transition at floor tile base. Gap to sterilizer N.G.T. 1/16". Provide continuous bead clear silicone caulk between tile wall and SS closure. Field measure to confirm dimensions on all drawings. Submit shop drawings for approval by COTR.

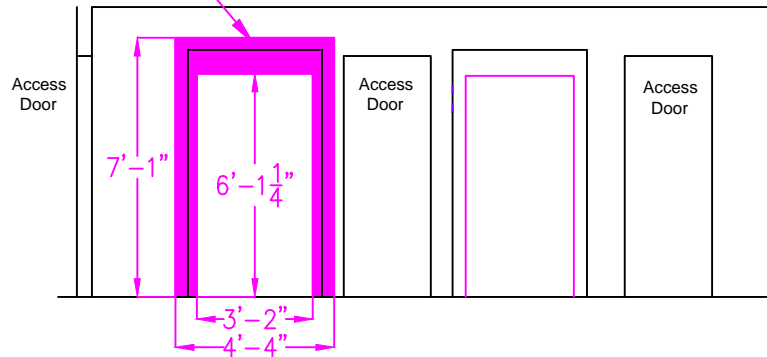

Interior Chase - Elevation in Room 15B Looking North

Stainless Steel Closure at South exterior face of chase in Room 16 - 16 ga. (.0625) Brushed Finish - Continuous w/o joints, OD 7'-1" x 4' - 4", 1/16" radius corners, 1/16" longitude architectural radius bend at 3 exterior edges, Interior 1" x 1" angle reinforcing @ 16" O.C. w/ spot weld. 2" x 2" x 8" interior mounting brackets w/ bolt to secure and aid removal. Secure exterior face with SS machine screws and finishing washers 8" OC at face, finish smooth all edges. Provide fitting for smooth transition at floor tile base. Provide continuous bead clear silicone caulk between tile wall. Gap to sterilizer N.G.T. 1/16". Field measure to confirm dimensions on all drawings. Submit shop drawings for approval by COTR.

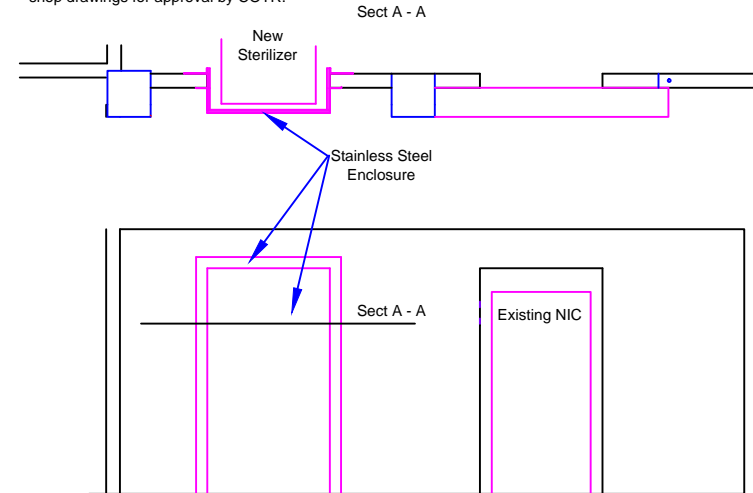

Exterior of Chase - Elevation in Room 16 Looking North

NO.	DATE	DESCRIPTION
REVISIONS		
CLOSURE PANELS		
B34G SPD GETINGE STERILIZER		
WCC	09/30/2011	DATE
	2941	DRAWING NUMBER
	3 OF 6	SHEET
	528A5-12-508	PROJECT NUMBER
V.A. MEDICAL CENTER		
CANANDAIGUA, NY 14424		

