

## GENERAL NOTES:



## (SPS EQUIPMENT LOCATIONS)

- CONTRACTOR SHALL COORDINATE EXACT MOUNTING LOCATIONS OF ALL SPS EQUIPMENT PRIOR TO ELECTRICAL ROUGH-IN. EXACT MANUFACTURER OF SPS EQUIPMENT TO BE DETERMINED BY VA.
- LOCATIONS OF ELECTRICAL DISCONNECTS, OUTLETS, ETC. ARE DIAGRAMMATIC, AND SHOULD BE FIELD COORDINATED FOR BEST POSSIBLE MOUNTING LOCATION FOR ACCESS AND NOT TO INTERFERE WITH EQUIPMENT.
- CONTRACTOR SHALL SEAL CONDUIT ENDS INSIDE DEVICE BOX AFTER CONDUCTORS ARE PULLED IN. SEAL DEVICE BOX INTERIOR TO COMPLETELY CLOSE AIRTIGHT ALL HOLES AND OPENINGS. USE 100% SILICONE CAULK, DEVICE COVER PLATES SHALL BE COMPLETELY GASKETED. TYPICAL FOR ALL RECEPTACLES, LIGHT SWITCHES, DATA OUTLETS, JUNCTIONS BOXES AND DEVICE BOXES.

## NEW WORK KEYED NOTES:

## (THIS SHEET ONLY)

- MAKE ALL CONNECTIONS TO EXISTING NORMAL POWER RECEPTACLE CIRCUIT LEFT ABANDONED IN THIS SPACE.
- PROVIDE MOTOR-RATED SWITCH FOR POWER CONNECTION TO FAN COIL UNIT ABOVE CEILING. COORDINATE EXACT LOCATION AND MAKE ALL CONNECTIONS AS REQUIRED.
- POWER FOR PROJECTION SCREEN. COORDINATE EXACT MOUNTING LOCATION PRIOR TO ROUGH-IN.
- PROVIDE RECEPTACLE ABOVE CEILING FOR OVERHEAD PROJECTOR. COORDINATE EXACT MOUNTING LOCATION PRIOR TO ROUGH-IN.
- PROVIDE RECEPTACLE ADJACENT CATV/MATV OUTLET. COORDINATE EXACT MOUNTING LOCATION PRIOR TO ROUGH-IN.
- PROVIDE DEDICATED 15 AMP, 220V RECEPTACLE FOR WATER PURIFICATION SYSTEM. COORDINATE EXACT MOUNTING LOCATION TO BE WITH 3' OF EXACT EQUIPMENT INSTALLED LOCATION. COORDINATE WITH EXACT MANUFACTURER FOR PLUG/RECEPTACLE CONFIGURATION.
- PROVIDE DEDICATED 15 AMP, 115V RECEPTACLE FOR WATER PURIFICATION SYSTEM. COORDINATE EXACT MOUNTING LOCATION TO BE WITH 3' OF EXACT EQUIPMENT INSTALLED LOCATION. COORDINATE WITH EXACT MANUFACTURER FOR PLUG/RECEPTACLE CONFIGURATION.
- 30 AMP/3 POLE/NEMA 3R NON-FUSED DISCONNECT. MAKE ALL CONNECTIONS TO EQUIPMENT AS REQUIRED. PROVIDE NAMEPLATE FOR EQUIPMENT FEEDING.
- 60 AMP/3 POLE/NEMA 3R NON-FUSED DISCONNECT. MAKE ALL CONNECTIONS TO EQUIPMENT AS REQUIRED. PROVIDE NAMEPLATE FOR EQUIPMENT FEEDING.
- DEDICATED RECEPTACLE FOR MEDIVATOR.
- COORDINATE EXACT MOUNTING LOCATIONS PRIOR TO ROUGH-IN.
- PROVIDE QUADRAPLEX RECEPTACLE ON SO CORD, SUSPEND FROM CEILING TO APPROXIMATELY 4' ABOVE FINISHED FLOOR. COORDINATE EXACT LOCATION WITH WORK STATIONS PRIOR TO INSTALLATION.
- NO WORK IN THIS SPACE.
- 30 AMP/2 POLE/NEMA 3R NON-FUSED DISCONNECT. MAKE ALL CONNECTIONS TO EQUIPMENT AS REQUIRED. PROVIDE NAMEPLATE FOR EQUIPMENT FEEDING.
- TRANSFORMER X3EXL SHALL BE PAD MOUNTED IN THIS APPROXIMATE LOCATION, WITH TRANSFORMER X3LP MOUNTED ABOVE ON A SUPPORT PLATFORM.
- PROVIDE 3/4" FULL LENGTH PLYWOOD BACKBOARD ON ALL WALLS. PAINT GRAY.
- POWER CONNECTION TO INFRARED CONTROLLED FAUCET. MAKE ALL CONNECTIONS AS REQUIRED.
- SEE NEW WORK ELECTRICAL PLAN ROOM 318, THIS SHEET.
- RECEPTACLE PROVIDED ABOVE CEILING FOR CCTV/SECURITY CAMERAS. COORDINATE EXACT LOCATIONS PRIOR TO ROUGH-IN.

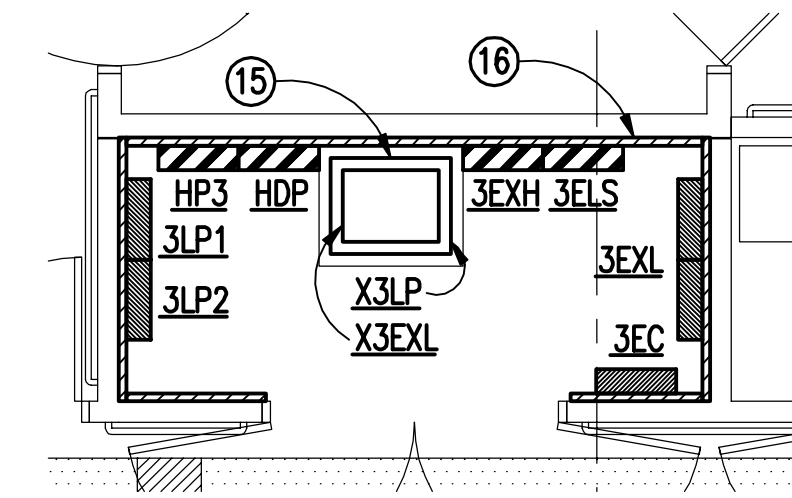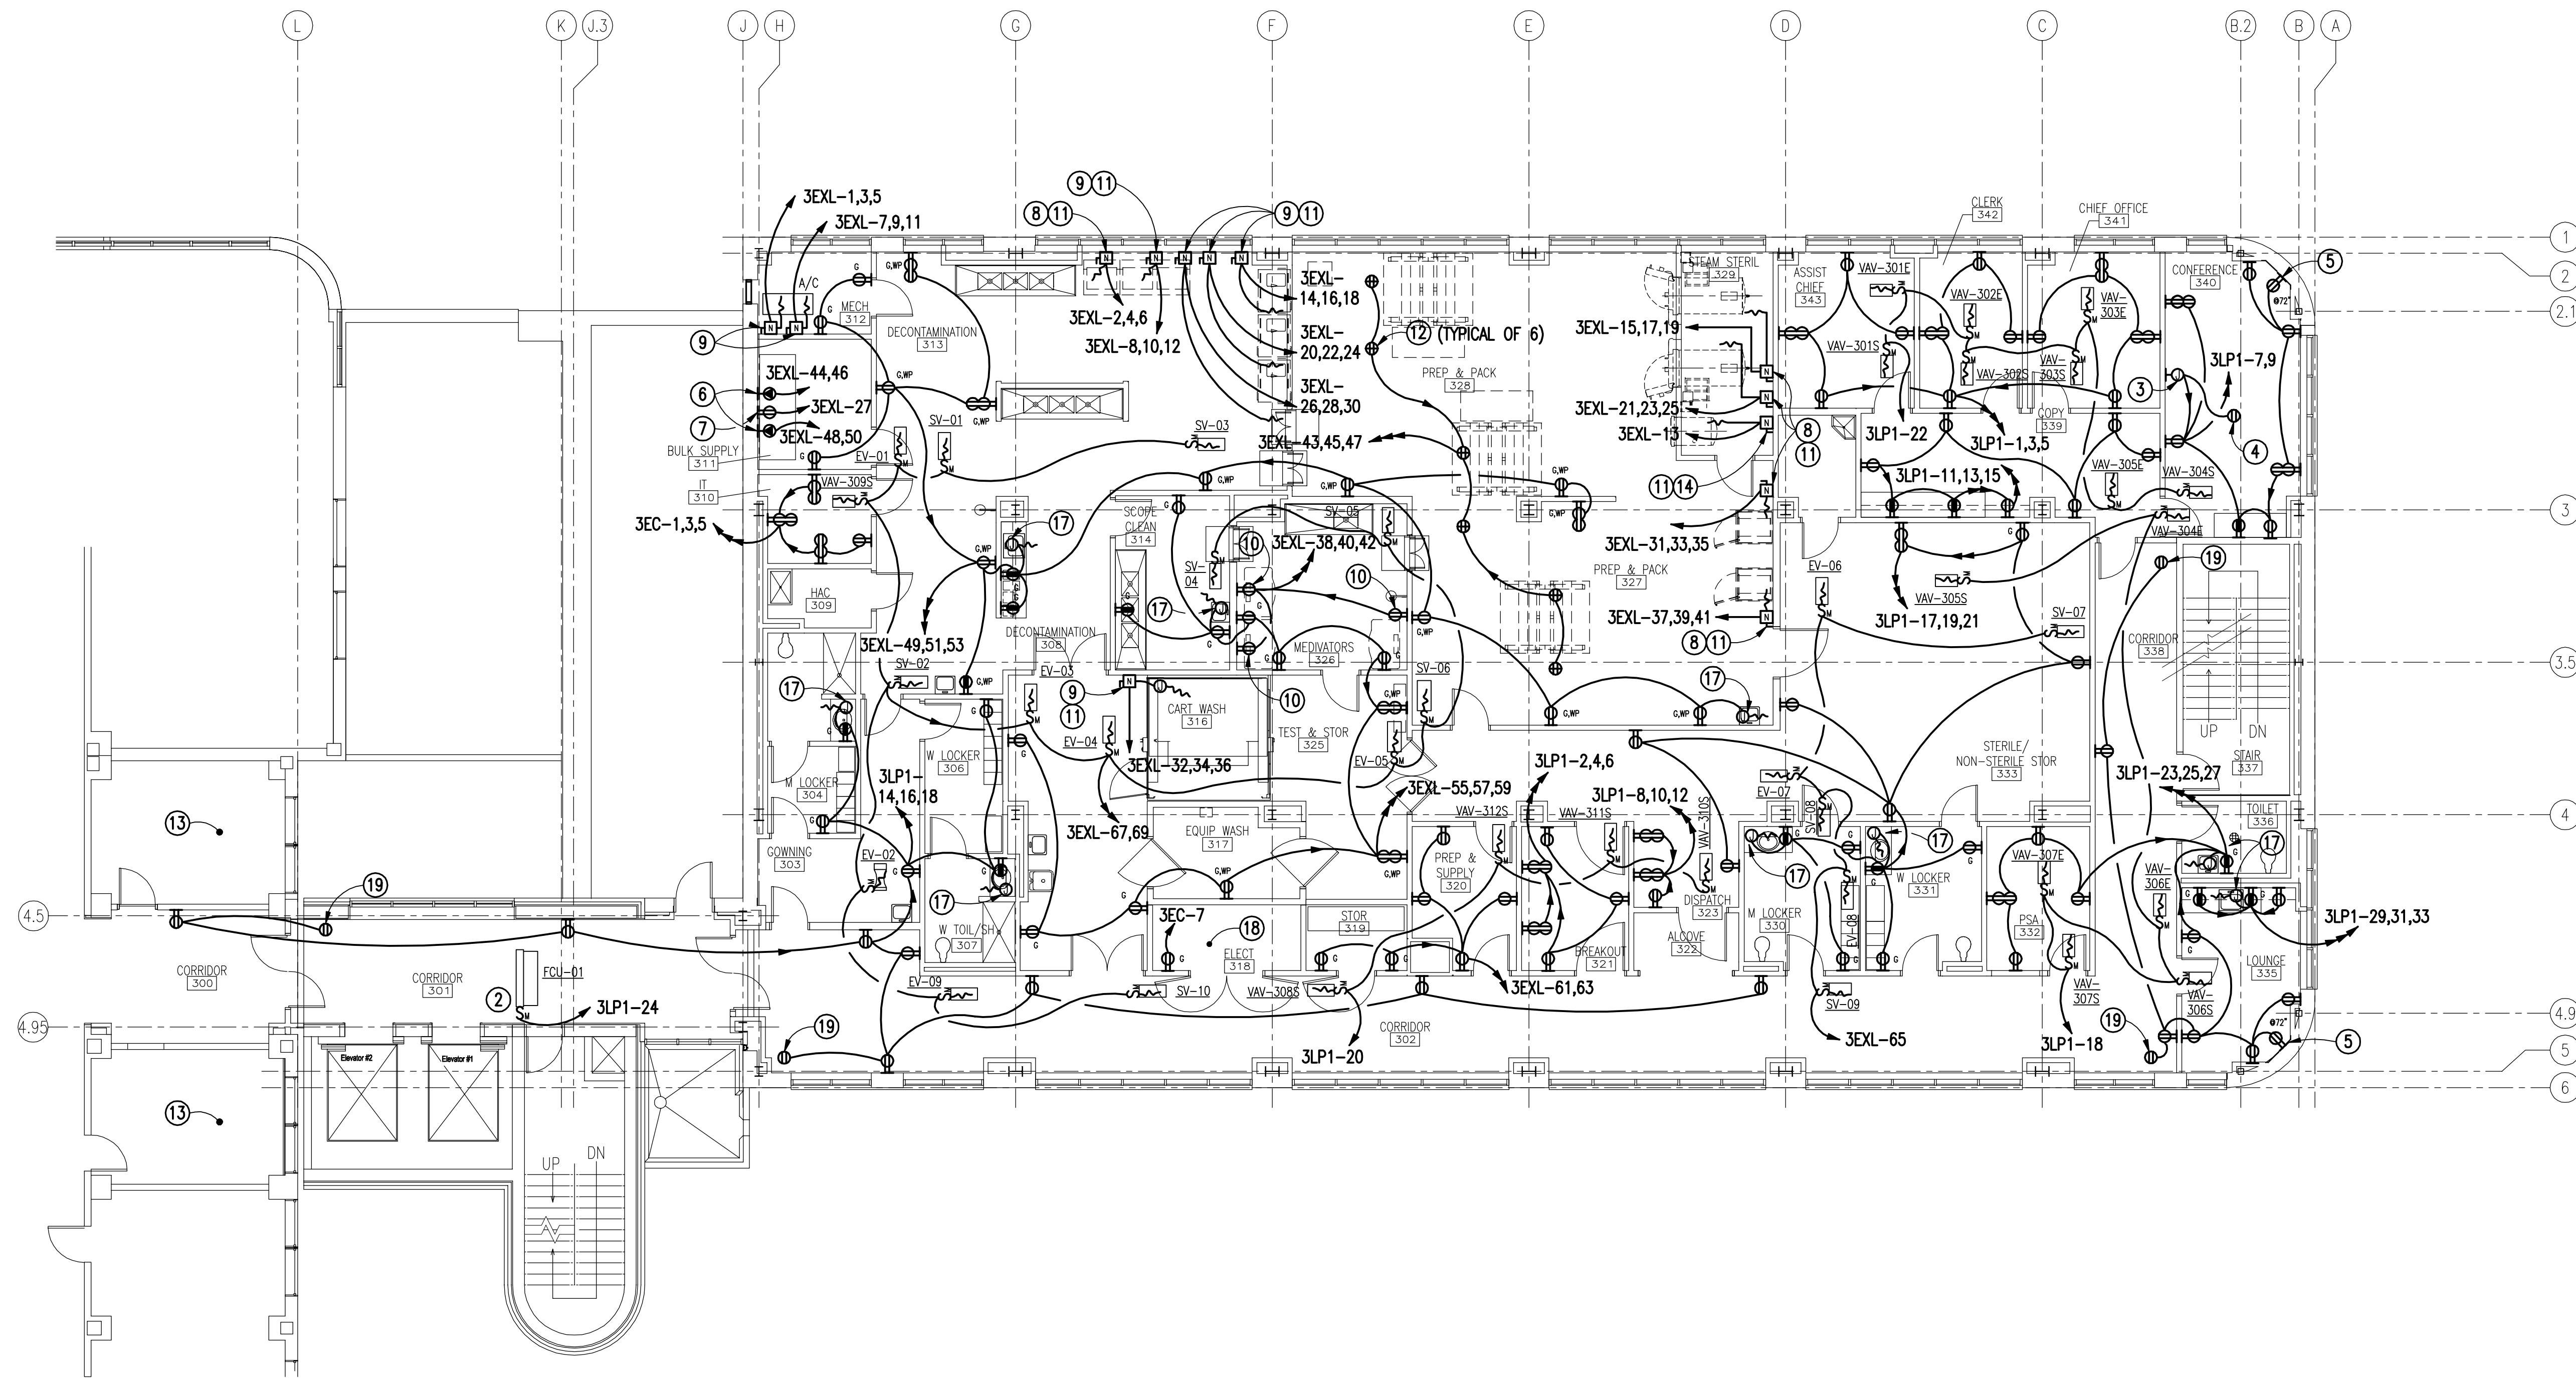


NEW WORK ELECTRICAL PLAN ROOM 318

SCALE: 1/4" = 1'-0"


NEW WORK  
THIRD FLOOR ELECTRICAL PLAN - POWER

SCALE: 1/8" = 1'-0"

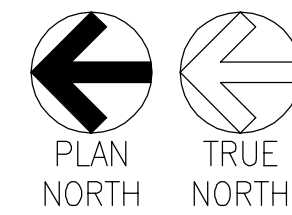

0' 8' 16'

## CONSULTANTS:

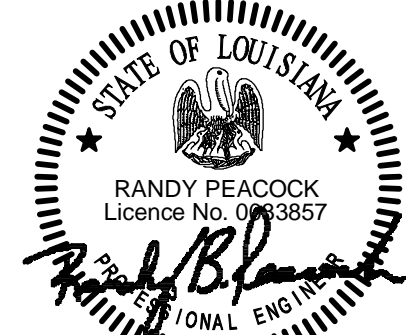**CLARK•NEXSEN**440 MARTIN LUTHER KING, JR. BLVD.  
MACON, GA 31201  
478-743-8415 FAX 478-743-8239  
WWW.CLARKNEXSEN.COM

## ARCHITECT:

590 Means Street NW, Suite 200  
Atlanta, GA 30318  
404.214.9774

## Drawing Title:

NEW WORK  
THIRD FLOOR ELECTRICAL PLAN  
POWER

Approved: Project Director

## Project Title:

EXPAND RADIOLOGY AND SPS  
OVERTON BROOKS VAMC

## Location:

SHREVEPORT, LA

Date: 04-17-2015

Checked: CBC

Drawn: SJB

## Project Number:

667-083

## Building Number:

1

## Drawing Number:

EP101

Dwg. 149 of 160

## FINAL SUBMITTAL

OFFICE OF  
CONSTRUCTION  
AND FACILITIES  
MANAGEMENT