




NEW WORK KEYED NOTES:  
(THIS DRAWING ONLY)

- 1 MAKE ALL CONNECTIONS TO EXISTING NORMAL POWER RECEPTACLE CIRCUIT LEFT ABANDONED IN THIS SPACE.
- 2 PROVIDE MOTOR-RATED SWITCH FOR POWER CONNECTION TO FAN COIL UNIT ABOVE CEILING. COORDINATE EXACT LOCATION AND MAKE ALL CONNECTIONS AS REQUIRED.
- 3 EXISTING FCU IN THIS SPACE TO BE REMOVED AND REINSTALLED IN NEW LOCATION. CONTRACTOR SHALL DISCONNECT AND EXTEND EXISTING POWER CONNECTION TO FCU IN NEW LOCATION, AND MAKE ALL CONNECTIONS AS REQUIRED.
- 4 EMERGENCY MRI EQUIPMENT/HVAC SHUT-OFF BUTTON. EXACT LOCATIONS AND REQUIREMENTS TO BE DETERMINED.
- 5 EMERGENCY CT SCAN EQUIPMENT/HVAC POWER SHUT-OFF BUTTON. EXACT LOCATIONS AND REQUIREMENTS TO BE DETERMINED.
- 6 PROVIDE RECEPTACLE ADJACENT CATV/MATV OUTLET. COORDINATE EXACT MOUNTING HEIGHT AND LOCATION PRIOR TO ROUGH-IN.
- 7 POWER CONNECTION TO INFARED FAUCET PROVIDED AT SINK. COORDINATE EXACT POWER REQUIREMENTS AND MAKE ALL CONNECTIONS AS REQUIRED.
- 8 PROVIDE SPECIAL PURPOSE OUTLET FOR ULTRASOUND EQUIPMENT.
- 9 POWER FOR PROJECTION SCREEN. COORDINATE EXACT MOUNTING LOCATION PRIOR TO ROUGH-IN.
- 10 PROVIDE RECEPTACLE ABOVE CEILING FOR OVERHEAD PROJECTOR. COORDINATE EXACT MOUNTING LOCATION PRIOR TO ROUGH-IN.
- 11 PROVIDE FLOOR BOX WITH (2) DUPLEX RECEPTACLES AND DATA/VOICE OUTLET. FLOOR BOX SHALL BE PROVIDED WITH FLUSH MOUNTED COVER, EVEN WHEN CORDS ARE PLUGGED INTO OUTLETS/JACKS. COORDINATE EXACT MOUNTING LOCATION WITH FURNITURE LAYOUT AND USER PRIOR TO ROUGH-IN. SEE SHEET ET102 FOR DATA/VOICE REQUIREMENTS. BASIS OF DESIGN IS WIREMOLD #RFB SERIES.
- 12 RECEPTACLE FOR METAL DETECTOR. COORDINATE EXACT LOCATION PRIOR TO ROUGH-IN.
- 13 PROVIDE 3/4" FULL LENGTH PLYWOOD BACKBOARD ON ALL WALLS. PAINT GRAY.
- 14 SEE LARGE SCALE PLAN, SHEET EP401.
- 15 EMERGENCY OUTLET FOR CRASH CART LOCATION.
- 16 MAKE ALL CONNECTIONS TO MOTORIZED SHUTTER FOR MRI RECEPTION AREA. PROVIDE FLUSH MOUNTED WALL SWITCH @ 48" ABOVE FINISHED FLOOR FOR CONTROL OF SHUTTER WITH LABELING ON COVERPLATE.
- 17 PROVIDE ELECTRIC STRIKE PUSHBUTTON CONTROLLED DOOR FOR ACCESS TO MRI SUITE. COORDINATE EXACT MOUNTING LOCATIONS AND MAKE ALL CONNECTIONS AS REQUIRED.
- 18 SEE NEW WORK ELECTRICAL PLAN ROOM 435, THIS SHEET.
- 19 SEE LARGE SCALE PLAN, SHEET EP401.
- 20 RECEPTACLE PROVIDED ABOVE CEILING FOR CCTV/SECURITY CAMERAS. COORDINATE EXACT LOCATIONS PRIOR TO ROUGH-IN.

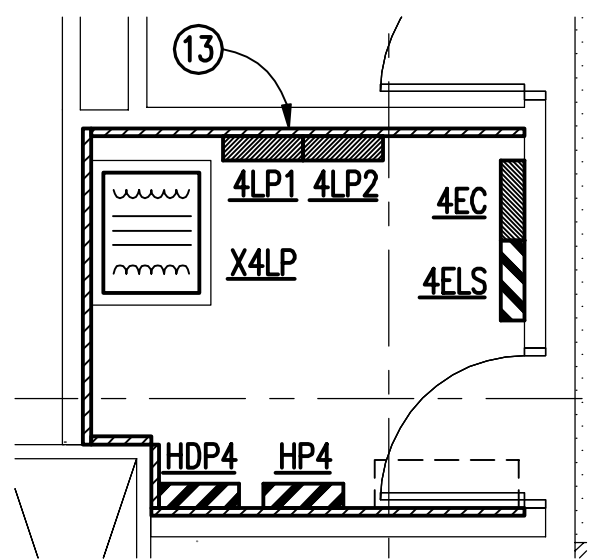


NEW WORK ELECTRICAL PLAN ROOM 435

SCALE: 1/4" = 1'-0"

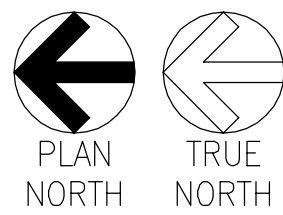


NEW WORK  
FOURTH FLOOR ELECTRICAL PLAN - POWER  
SCALE: 1/8" = 1'-0"



Revisions:	Date

CONSULTANTS:
<b>CLARK•NEXSEN</b>
440 MARTIN LUTHER KING, JR. BLVD. MACON, GA 31201 478-743-8415 FAX 478-743-8239 WWW.CLARKNEXSEN.COM

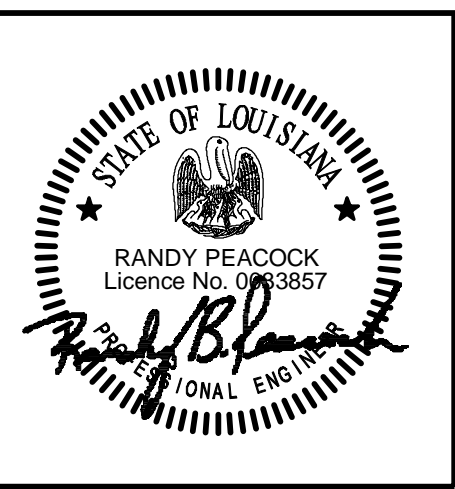

ARCHITECT:
<b>TOLAND MIZELL MOLNAR</b>
590 Means Street NW, Suite 200 Atlanta, GA 30318 404.214.9774

Drawing Title:
<b>NEW WORK FOURTH FLOOR ELECTRICAL PLAN POWER</b>
Approved: Project Director

Project Title:
<b>EXPAND RADIOLOGY AND SPS OVERTON BROOKS VAMC</b>
Location:
<b>SHREVEPORT, LA</b>
Date:
04-17-2015
Checked:
CBC
Drawn:
SJB

Project Number:
<b>667-083</b>
Building Number:
<b>1</b>
Drawing Number:
<b>EP102</b>
Dwg. 150 of 160

<b>FINAL SUBMITTAL</b>
<b>OFFICE OF CONSTRUCTION AND FACILITIES MANAGEMENT</b>
<b>VA</b>