

# Table of Contents

Project Addendum Ledger

Place after this page and updated as project revisions are distributed.

Updated 9/29/09 MRS 290

Binder 1 of 2

- 1 Manual Usage Directions
- Disclaimer / Release
- Documenting New Signs Before Ordering

- 2 Type Styles
- Symbols
- Installation Guidelines / Disclaimer
- Mounting Methods
- Sign Locations

- 3 Interior Sign Reference Guide
- Interior Sign Type Drawings

- 4 Interior Sign Message Schedule - Part 1

- 5 Interior Sign Message Schedule - Part 2

- 6 Exterior Sign Type Drawings

- 7 Exterior Sign Message Schedule

- 8 Interior Sign Location Plans
- Exterior Sign Location Plan (back pocket)

**Distribution:**

West Palm Beach VA Medical Center  
J. Roberts  
Manual - 2  
Sign Message Schedule Email

Interior Resources  
M. Britton  
Manual - 1  
Sign Message Schedule Email

2/90 Sign System  
R. Harford  
Manual - 1  
Sign Message Schedule Email

Architectural Sign Associates  
Manual - 1

# Addendum Ledger

Item	Issued Amendment	Date	Newest Version	Comment
1	Addendum Ledger	N/A	Version 1	Place after Table of Contents
2	Sign Type 1032.1	4/15/2009	Version 1	Place in section 3 of manual
3	Sign Type 1074.3	4/15/2009	Version 2	Replace existing drawing in section 3 of manual
4	Sign Types MB.1, SS.1	4/15/2009	Version 1	Place in section 3 of manual
5	Interior Sign Message Schedule, Part 1	4/15/2009	Version 2	Replace existing schedule in section 4 of manual
6	Location Plans, Floors 3-9	4/15/2009	Version 2	Replace existing plans in section 5 of manual
7	Addendum Ledger	N/A	Version 2	Replace existing copy after Table of Contents
8	Symbols Page	N/A	N/A	Replace existing copy in section 2 of manual
9	Sign Type 1032.2 & 139.1	4/17/2009	Version 1	Place in section 3 of manual
10	Sign Type 1074.4	4/18/2009	Version 2	Replace existing drawing in section 3 of manual
11	Interior Sign Message Schedule, Part 2	4/21/2009	Version 1	Place in section 4 of manual
12	Location Plans, Floors 2, 1, Basement	1/28/2009	Version 1	Place in section 5 of manual
13	Addendum Ledger	N/A	Version 3	Replace existing copy after Table of Contents
14	Sign Type 1032.2	4/22/2009	Version 2	Replace existing drawing in section 3 of manual
15	Sign Types 1053.1, 1153.1	4/22/2009	Version 1	Place in section 3 of manual
16	Addendum Ledger	N/A	Version 4	Replace existing copy after Table of Contents
17	Interior Sign Message Schedule, Part 1	4/15/2009	Version 2	Replace existing copy in section 4 of manual
18	Interior Sign Message Schedule, Part 2	4/27/2009	Version 2	Replace existing copy in section 4 of manual
19	Addendum Ledger	N/A	Version 5	Replace existing copy after Table of Contents
20	Symbols Page	N/A	N/A	Replace existing pages in section 2 of manual
21	Exterior Mounting Methods	N/A	N/A	Place in section 2 of manual
22	Exterior Sign Type Packet	6/17/2009	Version 1	Place in section 3 of manual
23	Exterior Sign Message Schedule	6/17/2009	Version 1	Place in section 4 of manual
24	Location Plans, Exterior	6/17/2009	Version 1	Place in section 5 of manual

\*Highlighted items indicated most current amendments

# Addendum Ledger

Item	Issued Amendment	Date	Newest Version	Comment
25	Addendum Ledger	N/A	Version 6	Replace existing copy after Table of Contents
26	Exterior Sign Message Schedule	7/6/2009	Version 2	Replace existing copy in section 4 of manual
Updates sent to project website and local representation only				
27	Addendum Ledger	8/13/2009	Version 7	Already in manual
28	New Exterior and Interior Sign Program Manual	N/A	N/A	Discard previous manual
	Addendum Ledger	8/19/2009	Version 8	Replace existing copy after Table of Contents
	Sign Reference Guide	N/A	N/A	Place in/Replace existing copy in Section 3 of manual
	Interior Sign Types 1050.1, 1074.1, 1074.2, 1074.3, 1074.4, 1212.1, 4545.1	8/19/2009	Versions 2 & 3	Replace existing drawings in Section 3 of manual

\*Highlighted items indicated most current amendments



# Manual Usage Directions

- Familiarize yourself with the contents of the manual by reviewing the table of contents.
- Proceed to the section of the book that contains the Message schedule. You will be presented with a spreadsheet that displays information for each sign including the sign's identification number, floor, sign type, message, mount and miscellaneous notes. Starting with sign #1, retrieve the corresponding floor map from the rear pocket of the binder and find the sign location. Each sign is located on the floor map in proximity of its intended installation. Wall signs will appear on the map as a number inside a circle. Overhead signs will appear on the map as a number inside a hexagon with a line extending from the hexagon to indicate the orientation of the sign relative to the environment. Straddling the line extending from the hexagon are the letters "A" and "B" referring to the two sides (faces) of the overhead. A wall mounted overhead will have only an "A" since it has just one side.
- Note the sign type number: each sign type has a corresponding drawing located in the "Sign Type Drawings" section of the book. These drawings contain specific information about each sign including usage, size, color, layout and more. The "Message" column of the sign message schedule displays the exact copy that is to appear on the sign organized by line number. These line numbers refer to the copy lines as indicated in the sign type drawing. Some signs messages will include graphic symbols that are indicated inside parentheses, i.e. (sym AR LF). The "sym" indicates a symbol is to be used; "AR LF" is a code referring to a particular symbol that is documented in the "Symbols" section of the manual.
- In the event your sign system includes paper inserts for names and/or titles, a data disk will be mailed or electronic files will be sent in a timely manner. The files are created in Microsoft Word or Excel and formatted to print names and/or titles onto pre-perforated paper provided by the manufacturer. For further information regarding this topic see the "How To Print Paper Inserts" section of the manual.
- The "Mount" column of the sign message schedule indicates mounting information for each sign regarding the hardware and placement specifications. The mount for each sign is indicated with a letter and a number. Refer to the "Mounting Locations" and "Mounting Methods" section of the manual for a description of the mount letters and numbers. The "Notes" column contains various information relative to each sign. Designations of "SH" refer to standard height of 60" to the centerline of the sign from the floor.
- In the future when additional signage is needed, refer to the "How To Document New Signs Before Ordering" section.

## Disclaimer/Release

Architectural Sign Associates has prepared this signage document for the facility based on standard way-finding and identity procedures. The designated titles, descriptions and usages of spaces and procedures are based upon our review of the facility and input received from the facility staff. Architectural Sign Associates shall not be held responsible for errors of designations, spellings, or message content.

Architectural Sign Associates has developed the facility signage to be compliant with the Americans With Disabilities Act (ADA) ICC/ANSI A117.1-200.3 as we understand it. As this legislation is complex and its interpretations are untested in courts of law we cannot affirm universal compliance in all situations. Conditions at the facility and direction by facility staff may have resulted in areas of visual communications where total compliance may not exist. ASA is hereby removed from responsibility regarding these issues. ASA has made every effort to develop visual communications that are non-discriminating and service all facility users.

Architectural Sign Associates only permits this book to be used in connection with the facility identified below. No part of this book may be reproduced in any form or by any electric or mechanical means including information storage and retrieval systems without permission in writing from Architectural Sign Associates.

### Acceptance of program content & disclaimer

West Palm Beach VA Medical Center

Phase (if applicable) \_\_\_\_\_

Version \_\_\_\_\_

Approval \_\_\_\_\_

Date \_\_\_\_\_

In addition to providing a purchase order, upon review of this sign manual, please sign (fill in version approved) and fax disclaimer to ASA & 2/90 Sign Systems to indicate acceptance prior to production.

### Release for fabrication

West Palm Beach VA Medical Center

Phase (if applicable) \_\_\_\_\_

Version \_\_\_\_\_

Approval \_\_\_\_\_

Date \_\_\_\_\_

## Documenting New Signs Before Ordering

### Step 1

Go to the "Sign Type Drawings" section of the sign programming manual. In the upper left hand corner of each sign drawing page is listed the "Usage" of that sign. Review the sign drawings to determine which sign type best suits your need.

### Step 2

Once you have determined the proper sign type, open the rings of the binder, remove that sign type drawing and make a copy. Replace the original drawing in the binder.

### Step 3

Each part of the sign is designated with a letter (i.e. A, B, C etc.). If you only need a specific part(s) of the sign, determine the part(s) letter. Once you've determined the part(s) letter, write the quantity under the corresponding letter(s) at the bottom of the page. If you want to order an entire sign, write the quantity in the "Entire Sign" column.

### Step 4

When ordering the entire sign please determine then mark the corresponding "mounting letter" on the bottom of the page. (See "Mounting Methods" for options)

### Step 5

On the copy of the sign type drawing, find the dimensioned sign in the center of the page. Hand print the desired copy in the white rectangles that represent size and placement of copy if applicable. Pay close attention to capitalization, spelling and placement as the copy will be manufactured exactly as you have documented. If you are ordering more than one sign or sign part with verbiage, you may need to make more copies of the drawing in order to document the verbiage for each different sign.

### Step 6

Include 2/90 Sign Systems coupon number(s) when using this method of payment.

### Step 7

Provide this documentation to 2/90 Sign Systems, Inc. when placing your order for additional signage. The fax number for 2/90 Sign Systems is 616.656.4300.





# Type Style

## Helvetica Regular

Note: This font is just a visual example and may not exactly match the specified font.

### Upper Case Characters

A B C D E F G H I J K L M N  
O P Q R S T U V W X Y Z

### Lower Case Characters

a b c d e f g h i j k l m n  
o p q r s t u v w x y z












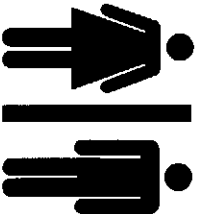





### Numerals

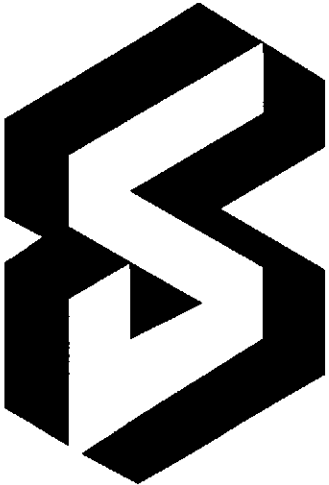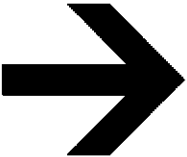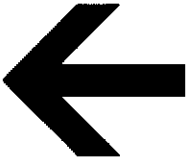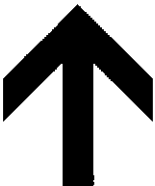1 2 3 4 5 6 7 8 9 0

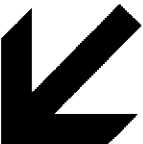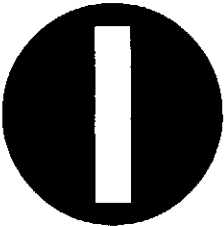



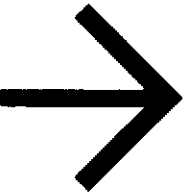
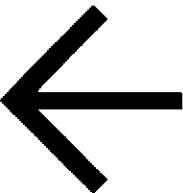

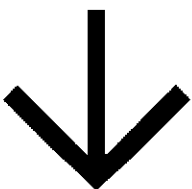

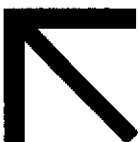


### Punctuations

.,-/'&#x

# Symbols
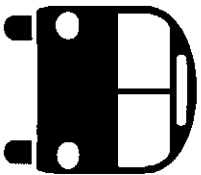
# Symbols

 <p>Bus Stop (sym BUS)</p>	 <p>Fire Hose and Fire Extinguisher (sym HFE)</p>	 <p>Fire Extinguisher (sym FE)</p>	 <p>FireStairs (sym STAIRS/FIRE)</p>
 <p>Arrow Up 1 (sym AR1 UP)</p>	 <p>Arrow Down 1 (sym AR1 DN)</p>	 <p>Arrow Left 1 (sym AR1 LF)</p>	 <p>Arrow Right 1 (sym AR1 RT)</p>
 <p>Arrow Up Left 1 (sym AR1 UL)</p>	 <p>Arrow Down Left 1 (sym AR1 DL)</p>	 <p>Arrow Up Right 1 (sym AR1 UR)</p>	 <p>Arrow Down Right 1 (sym AR1 DR)</p>

# Installation Guidelines / Disclaimer

## DISCLAIMER

Architectural Sign Associates has developed plans and sign schedules to indicate the intended sign placement locations and methods. Field conditions may require alternative locations and/or location modifications to occur. Conditions may require field determination of alternative attachment method(s) from specified mounts.

The general guidelines below should be followed. The contingency options are provided to assist in resolving field conditions.

## GENERAL GUIDELINES

- ☐ Installation shall meet all requirements of the American with Disabilities Act (ADA) ICC/ANSI A117.1-200.3
- ☐ Installation shall meet all local, state, federal building and safety codes.
- ☐ All signs installed level and plumb to within 1/64" per foot of length.
- ☐ Surfaces to be clean of dust and debris prior to installation.
- ☐ All packaging and protective coverings to be discarded in designated location.
- ☐ Hanging and Flag signs must remain 24" from sprinkler heads.
- ☐ Signs cannot visually block illuminated EXIT signs. Exit signs must be visually unobstructed from a distance of 100'.
- ☐ Locations may vary up to 1/2" left or right of designation unless field conditions require further modification.
- ☐ Locations unable to be installed in designated areas to be relocated following review by architect, sign planner or designated facility staff or representative
- ☐ Clear silicon adhesive caulk to be added inside tape area at a minimum of 2 locations for signs applied to uneven surfaces, block, concrete or wall covering surfaces. No silicone to be visible around edges of sign.

## FIELD CONTINGENCY PLACEMENT OPTIONS

The guidelines provided below are intended to assist in field condition modifications. Specific locations may require further direction from facility, planner and/or architects.

- ☐ Signs unable to achieve ADA required height location should be placed lower than the 60" centerline designation.
- ☐ Signs unable to achieve ADA standard latch position can be placed at hinge location or be positioned up to 2" from frame. Corner locations can be modified to nearest inside wall at knob side of frame. Tactile signs should NOT be placed on door as an alternative location unless designated on plan or in schedule.
- ☐ Hanging signs that obstruct Exit signs or are near sprinkler heads can be modified to opposite side of door or held further off wall surface.
- ☐ Wall Mounted overhead signs indicated as centered on bulkheads can be modified left or right as required by exit signs and other obstructions.
- ☐ Signs can be relocated with-in requirements of ADA placement to cover or obscure wall damage.

# Mounting Methods

## STANDARD:

**Method A** Pressure sensitive tape mounting intended for smooth, hard surfaces and sign areas up to 144 square inches. Add clear silicone caulking (not included) for wall covered surfaces and irregular surfaces.

**Method B** Magnetic mounting for steel surfaces.

**Method C** Velcro mounting for fabric surfaces. Use with thick fabric only.

**Method D** Screw-on mounting with expansion hardware. Recommended on all wall mounted signs larger than 144 square inches.

**Method E** Pin Mount - For use when mounting sign to fabric surfaces (i.e. cubical walls).

**Method F** Hook - Hook device in clear plastic which "hooks over" top of panel. Automatically locates sign two inches from top of panel. ORDER MUST SPECIFY PANEL MAKE AND THICKNESS.

**Method G** Freestanding - Integral aluminum desk stand, sign sizes 2", 3", 4" (height) ONLY.

**Method G\*** Black formed angled acrylic stand for oversized desk signs to be foamed taped to rear of sign

**Method H** Panel Top - For mounting on top surface of panel FOR 2" OR 4" SIGNS ONLY. Pressure sensitive. Black integral aluminum bracket, sign sizes 2", 4", 5" or 6" (height) ONLY. MAXIMUM SIGN HEIGHT OF 6" IS RECOMMENDED.

**Method I,1** Ceiling mount for standard suspended ceiling - Connects to 1" ceiling grid system using 2" white metal brackets. Signs appear to be floating below ceiling line. Flange grid ONLY.

**Method I,5** Ceiling mount for standard suspended ceiling - Connects to 1/2" ceiling grid system using 2" white metal brackets. Signs appear to be floating below ceiling line Flange grid ONLY.

**Method I\*** Modified mount for slotted track suspended ceiling grid. 2" white metal brackets suspend sign 1" from ceiling.

**Method IN** Rigid Post with integral suspended ceiling grid clip - Sign mount can be specified from 1" to 24" in 1" increments using 1/2" aluminum rod. Specify 1/2" or 1" grid system.

**Method J** Ceiling Mount (Hanging) - General purpose hanging applications for high or irregular ceilings. Hang lines tie to various points (rafters, beams, duct work, piping etc.) Hanging hardware not included, customer must supply hang line material.

**Method K** Perpendicular Wall Mount - Mounts sign at 90 degree angle to wall surface with black metal bracket.

**Method M** Ceiling Mount (Hanging) - White metal flange to secure to fixed ceiling materials (no mounting screws provided with this mount).

**Method N** Ceiling Mount (Rigid Post) - Sign mounts from ceiling using 1/2" aluminum rod. Specify length of rod.

**Method O** Fabric mount - Secure to cubicle panel by removing top cap and capturing fabric when re attaching cap. Fabric color is available in black or white. (See Mount Option 10)

**Method P** Under the Cap Mount - recommended for standard or thin signs. Top cap uses an aluminum bracket as a hook device. Mounts are designed to fit under the top cap of the panel and places the top of the sign flush with the bottom of the top cap.

**Method Q** Uneven Wall Condition - sign supplied with pressure sensitive tape (see Method A).

**Manufacturer** : to provide steel plate (.080) painted Black 704, 3/4" smaller in width and height for corresponding sign. Drill 3/16" countersunk holes (4) 3/4" from edges to center of hole.

**Installer** : to provide 3/8" Black spacers cut to appropriate size to assure sign face plumb and level.

**Method SP** High Powered Magnet Mount for steel panels.

# Exterior Mounting Methods


## STANDARD:

- D - Wall Mount** - Sign attached to structure using mechanical fasteners through mounting holes located behind sign plates in aluminum rail or through face of sign if holes are provided. Anchoring hardware not included.
- P - Base Plate** - Sign anchor bolted to concrete pad with integral aluminum mounting plates.
- X - Direct Embedment** - Diameter of hole should always be 4" larger than the diameter of the post. Hole depth is a 36" minimum (or to local frost line). Concrete should be filled level with grade.
- Y - Stud Mount** - Threaded stud screws to back of graphic. Wall is drilled to accept studs with silicone fill (not included).

# Sign Location 1

**Preferred room number sign location for ADA compliance. Mount sign on knob side of door, 2" away from door jamb, 60" (optimal) to baseline of uppermost tactile text.**


Mount location numbers appear in the "Mt." (Mount) column of each message schedule along with mount letters that specify each sign's mounting hardware (see "Mounting Methods" page for description of each mount letter code).

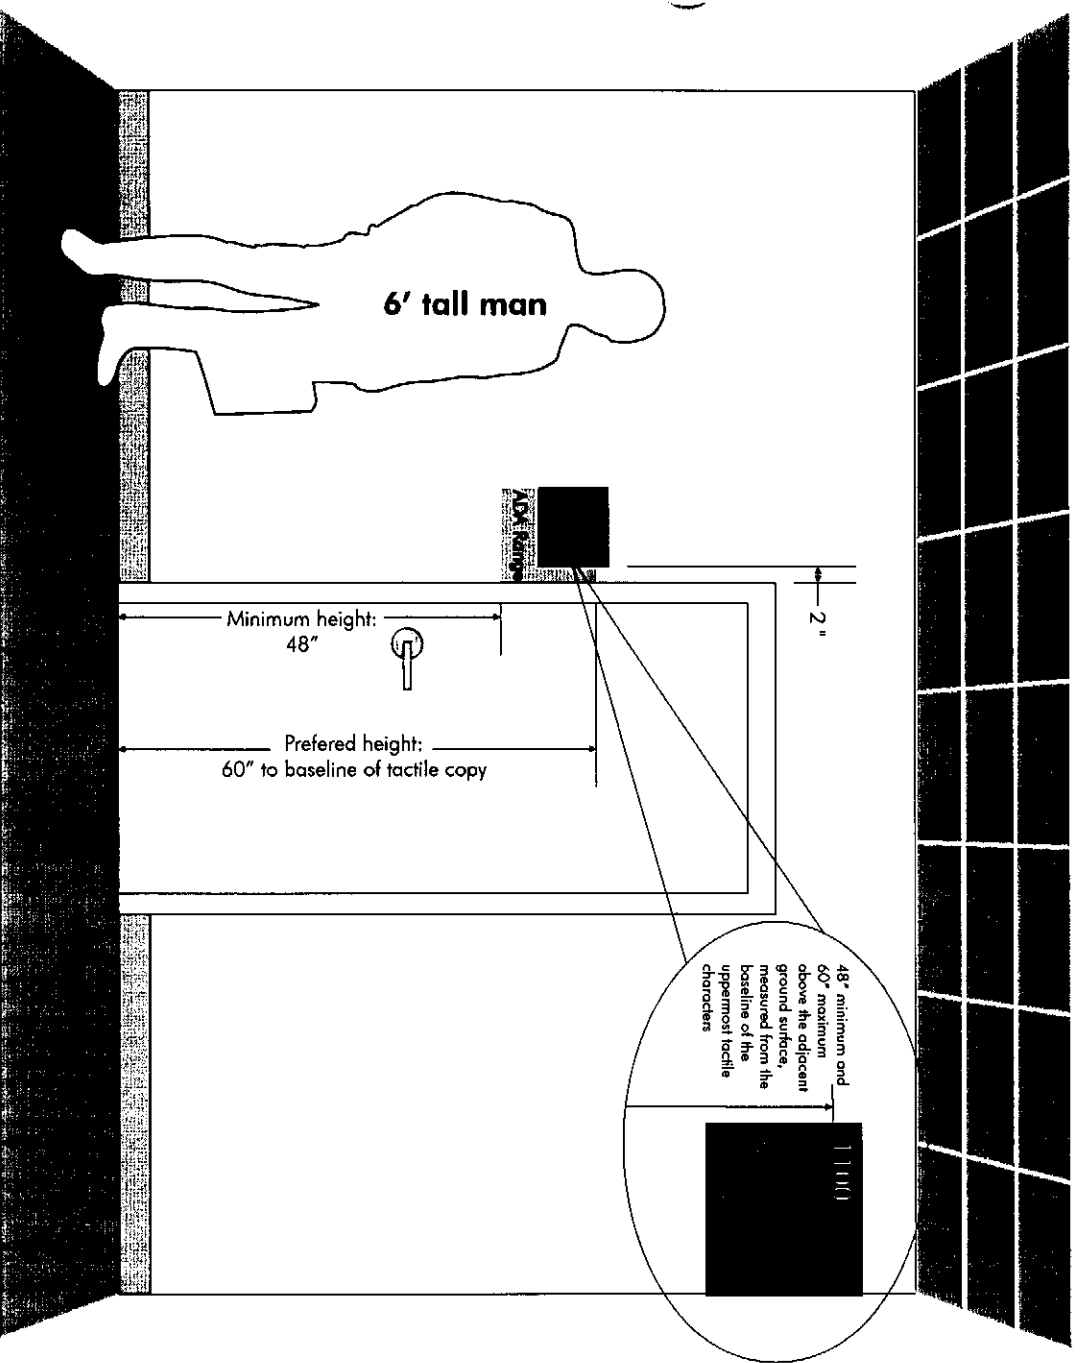

# Sign Location 2

**Preferred room number sign location for ADA compliance. Mount sign on hinge side of door, 2" away from door jamb, 60" (optimal) to baseline of uppermost tactile text. This mount is used when mount location 1 cannot be achieved.**

Mount location numbers appear in the "Mt." (Mount) column of each message schedule along with mount letters that specify each signs' mounting hardware (see "Mounting Methods" page for description of each mount letter code).

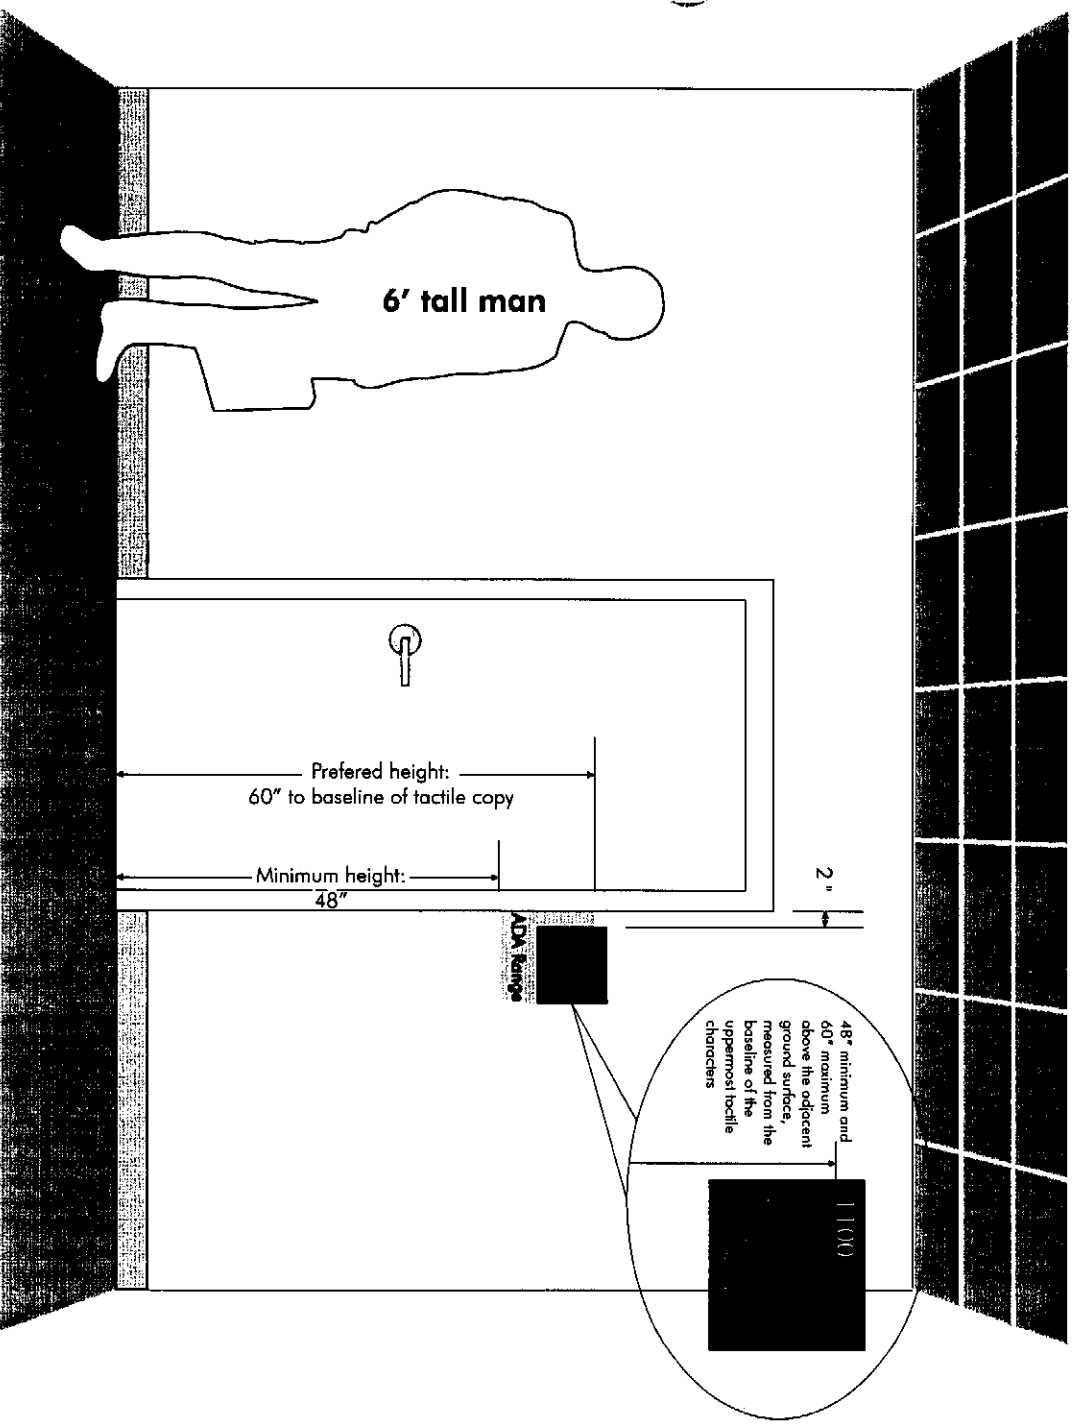




# Sign Location 3

**Center sign on door or wall area horizontally. Field adjustments may be needed to accommodate existing obstacles. Signs specified with this mount should be installed 60" on center of the sign up from the floor unless otherwise noted. Also use this location when mount locations 1 and 2 cannot be achieved.**

Mount location numbers appear in the "Mt." (Mount) column of each message schedule along with mount letters that specify each sign's mounting hardware (see "Mounting Methods" page for description of each mount letter code).

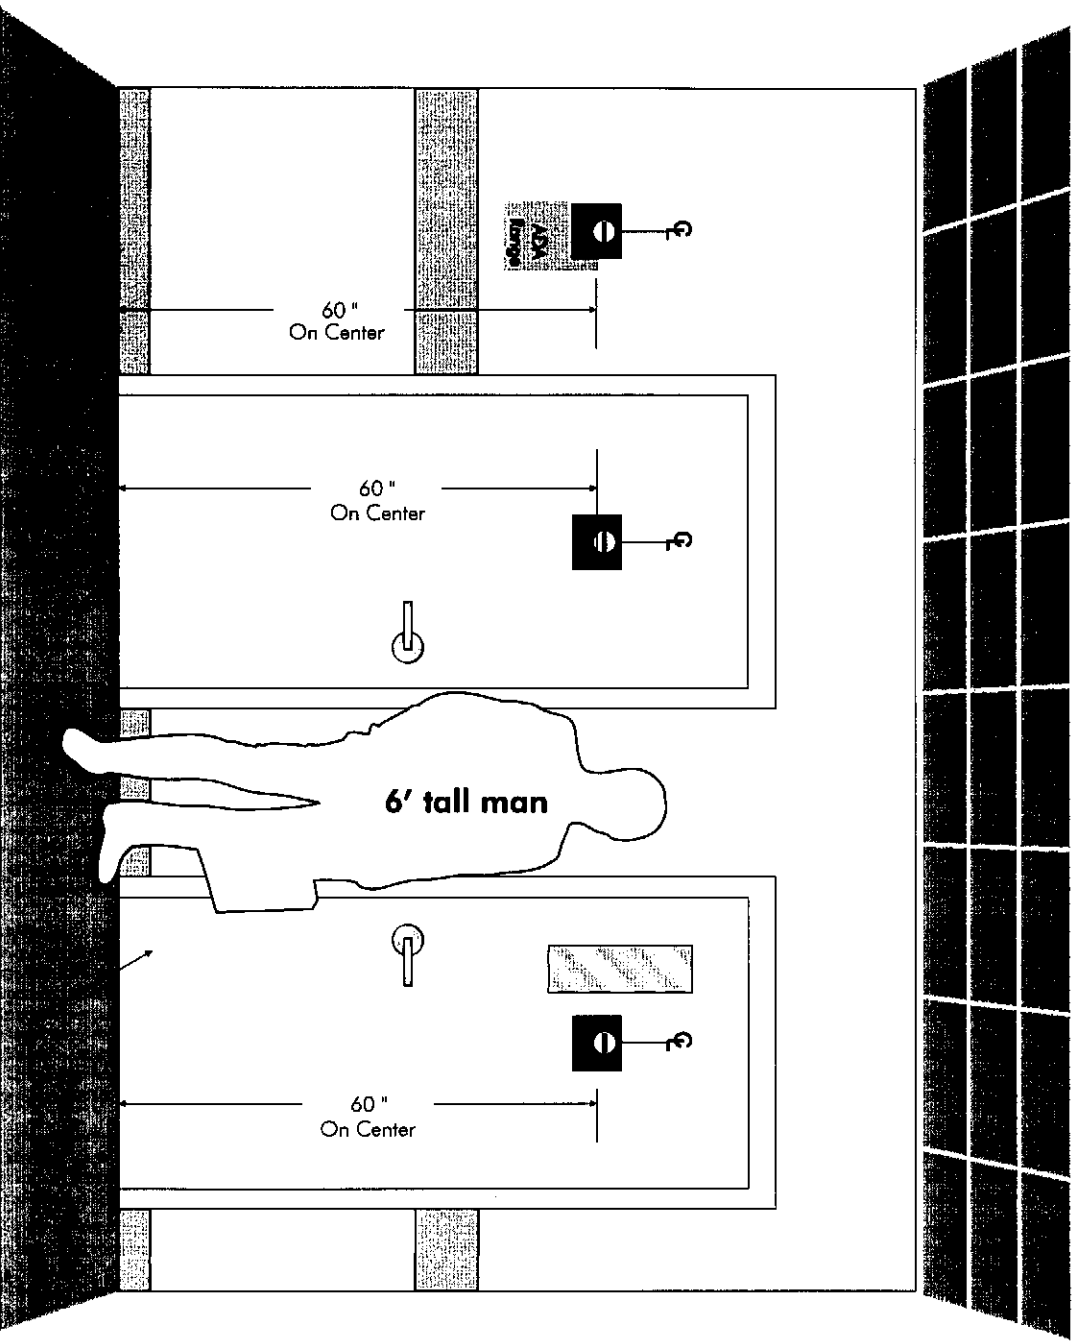

If a sign with tactile copy is in use see mounting details for Location 1

# Sign Location 4


**Special Sign Mounting Condition:  
Exact mounting instructions will be  
called out in the notes column of the  
Interior Directional Sign Message Schedule**

Mount Location numbers appear in the  
"Mt." (Mount) column of the  
"Interior Directional Sign Message Schedule"  
along with mount letters that specify each sign's  
mounting hardware (see "Mounting Methods"  
page for description of each mount letter code)

# Sign Location 5

## Sign Mounting Condition for 2 Sided Overhead Hanging Signs


Mount Location numbers appear in the Mount column of the Interior Directional Sign Message Schedule along with mount letters that specify each signs' mounting hardware (see "Mounting Methods" page for description of each mount letter code)

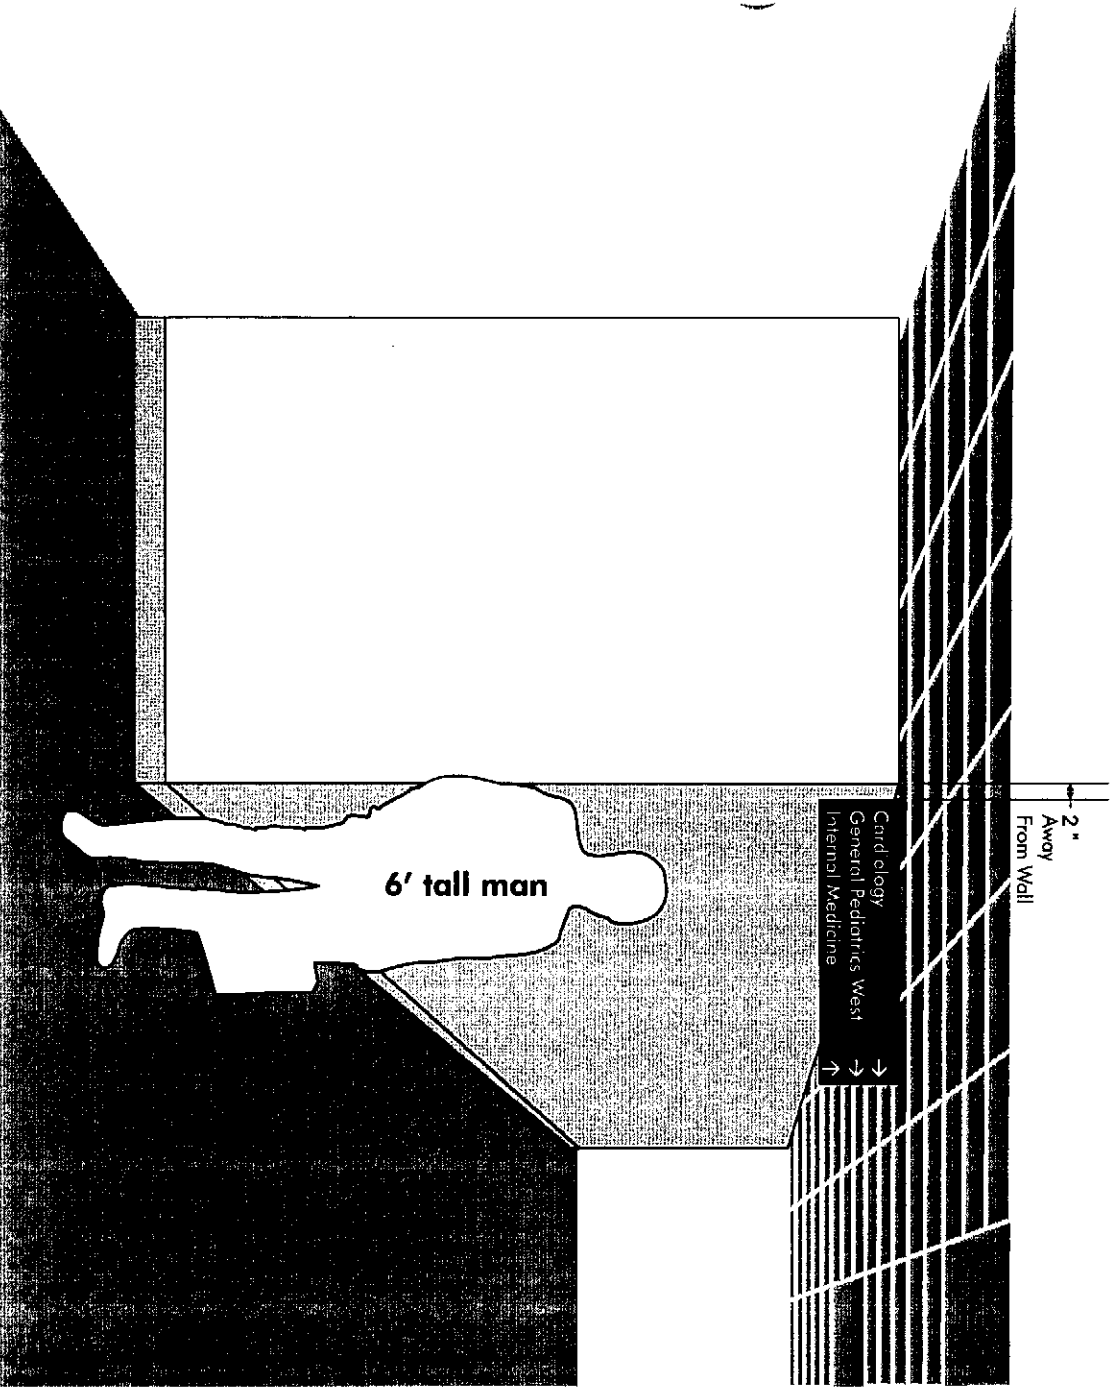

# Sign Location 6

## Sign Mounting Condition for Wall Mounted Overhead Directional and Identity Signs.

Mount Location numbers appear in the Mount column of the Interior Directional Sign Message Schedule along with mount letters that specify each sign's mounting hardware (see "Mounting Methods" page for description of each mount letter code)

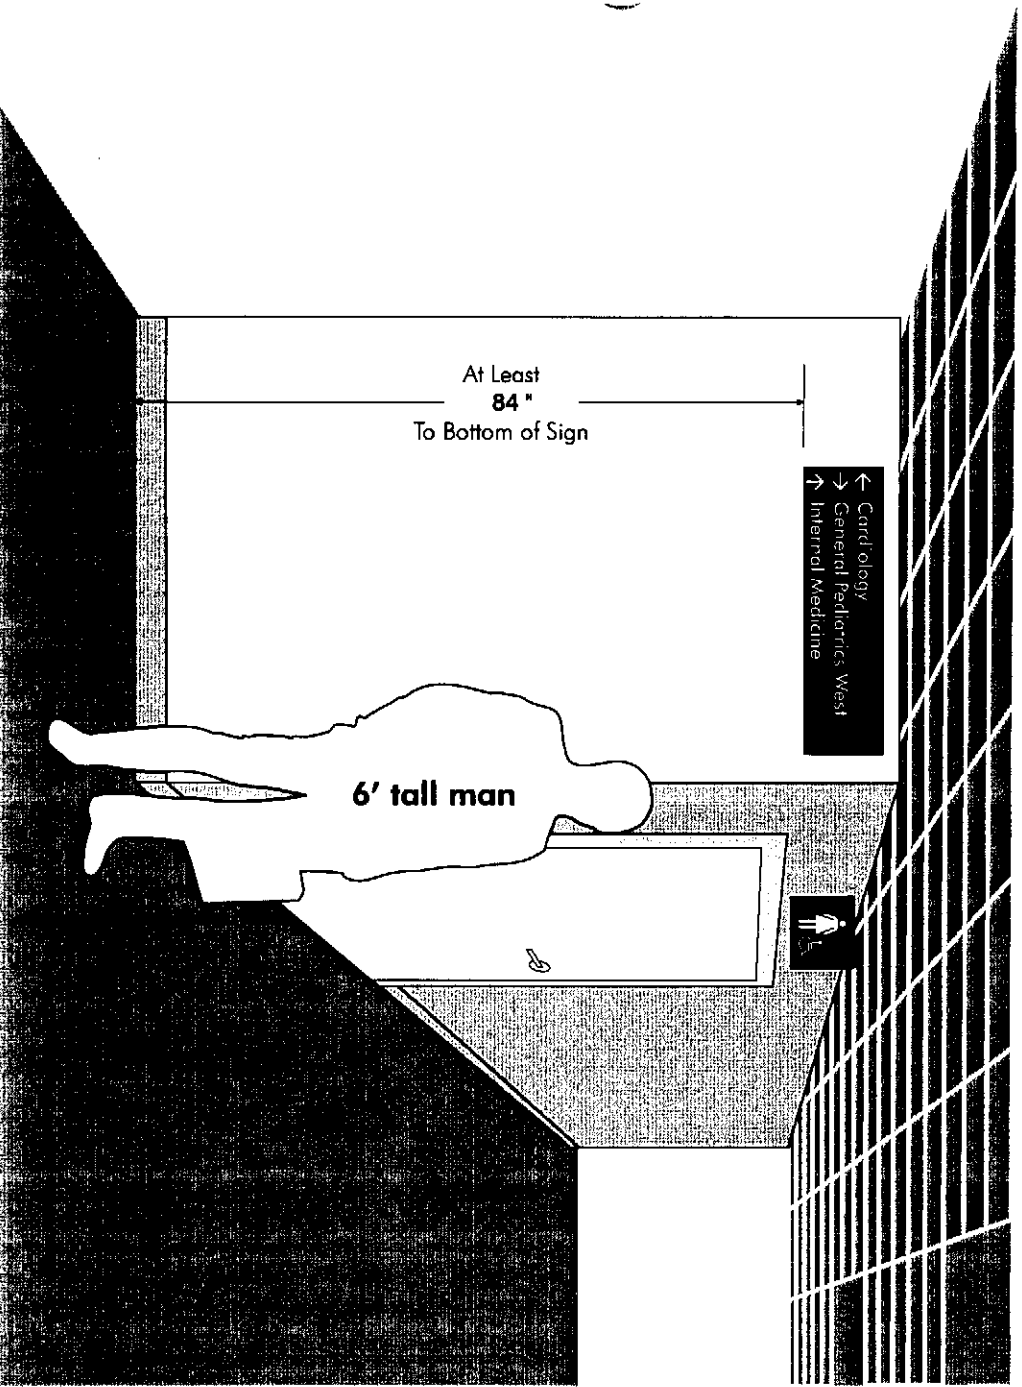


# Sign Location 7


**Mount sign on wall 2" away from corners, 60" (optimal) to baseline of uppermost tactile text.**

Mount Location numbers appear in the Mount column of the Interior Directional Sign Message Schedule along with mount letters that specify each signs' mounting hardware (see "Mounting Methods" page for description of each mount letter code)

Example A

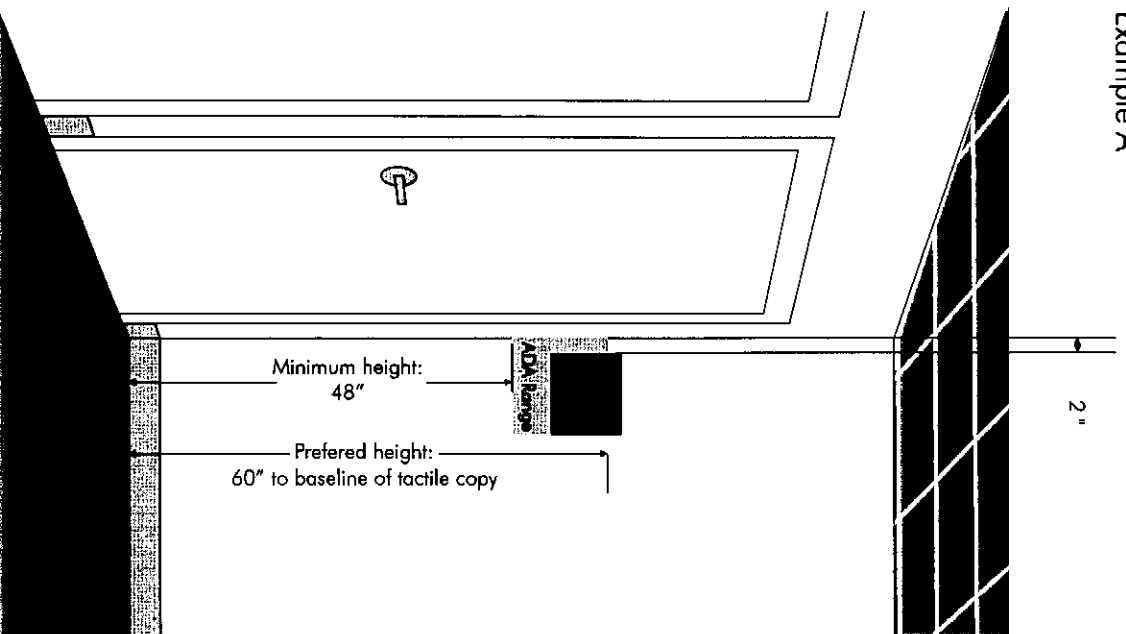

Example B

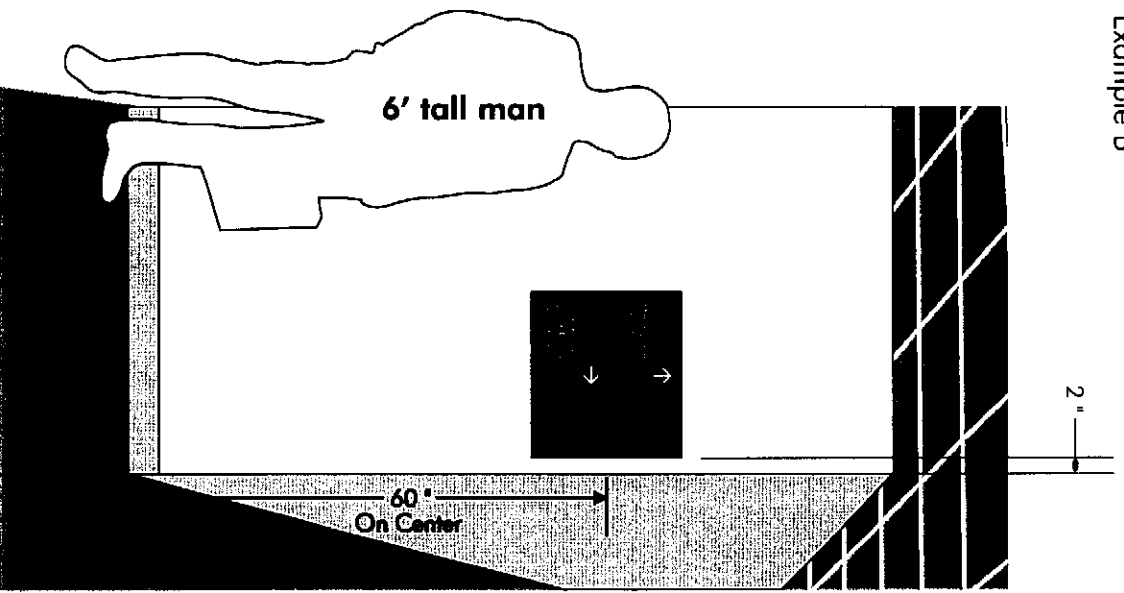


If a sign with tactile copy is in use  
see mounting details for Location 1

# Sign Location 8

## Sign Mounting Condition for 2 Sided Overhead Hanging Signs


Mount Location numbers appear in the Mount column of the Interior Directional Sign Message Schedule along with mount letters that specify each signs' mounting hardware (see "Mounting Methods" page for description of each mount letter code)

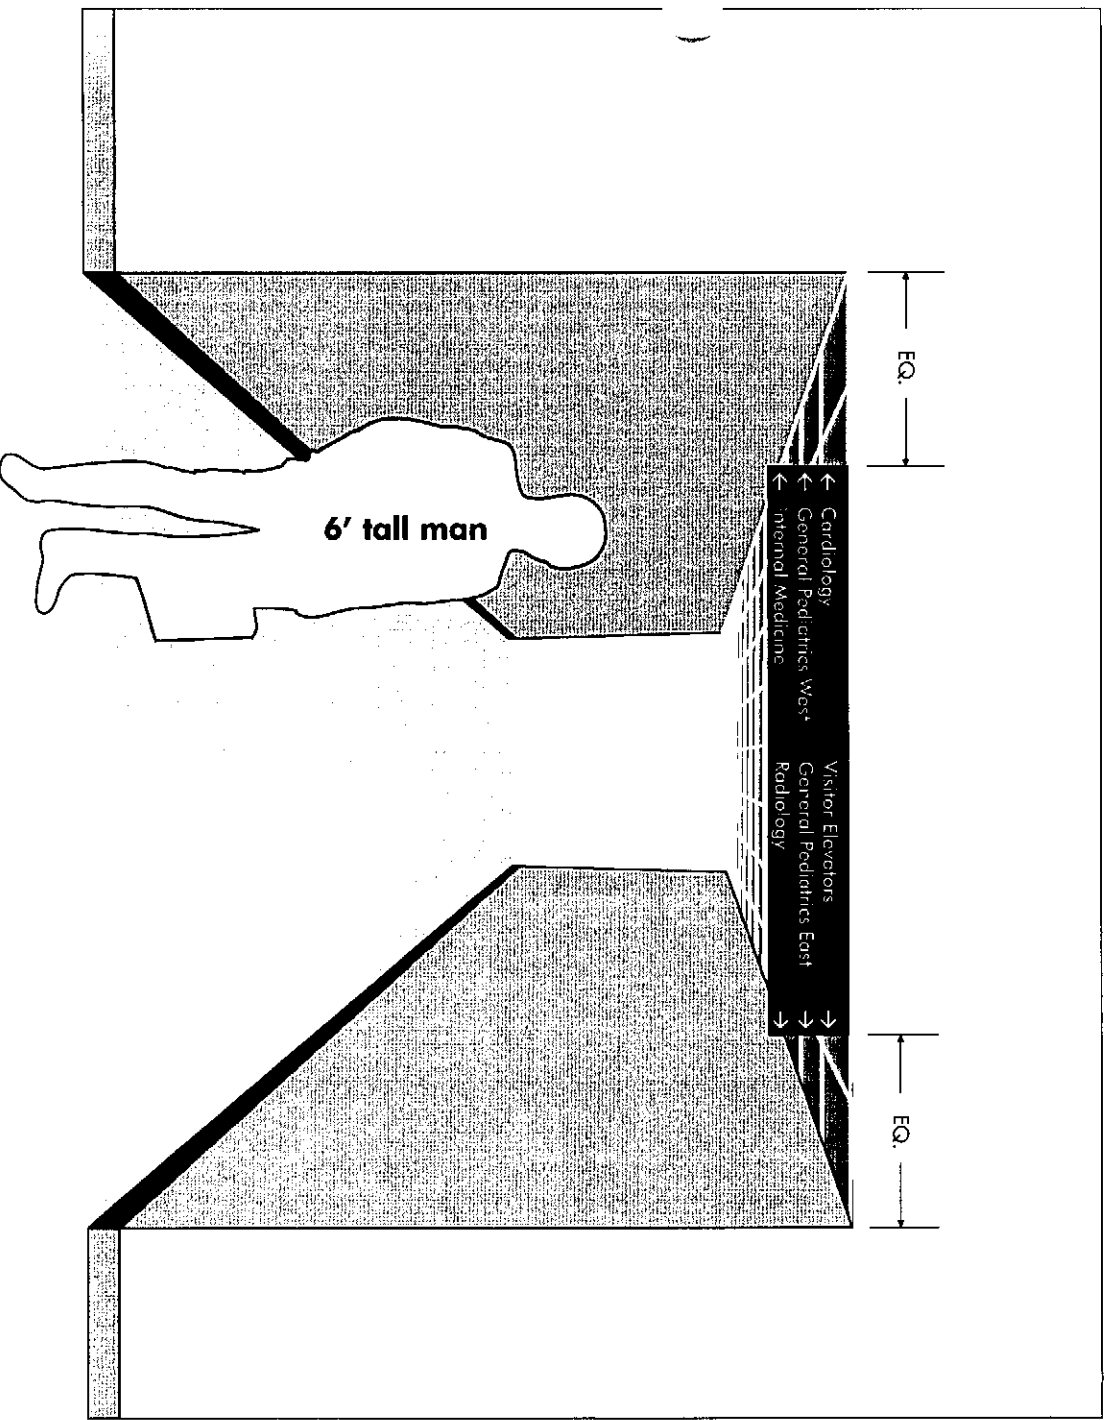

## Sign Location 9

**Mount sign on knob side of door, 2" in from edge of door. Field adjustments may be needed to accommodate existing obstacles. Signs specified with this mount should be installed 60" on center of the sign up from the floor unless otherwise noted.**

Mount location numbers appear in the "Mt." (Mount) column of each message schedule along with mount letters that specify each sign's mounting hardware (see "Mounting Methods" page for description of each mount letter code).

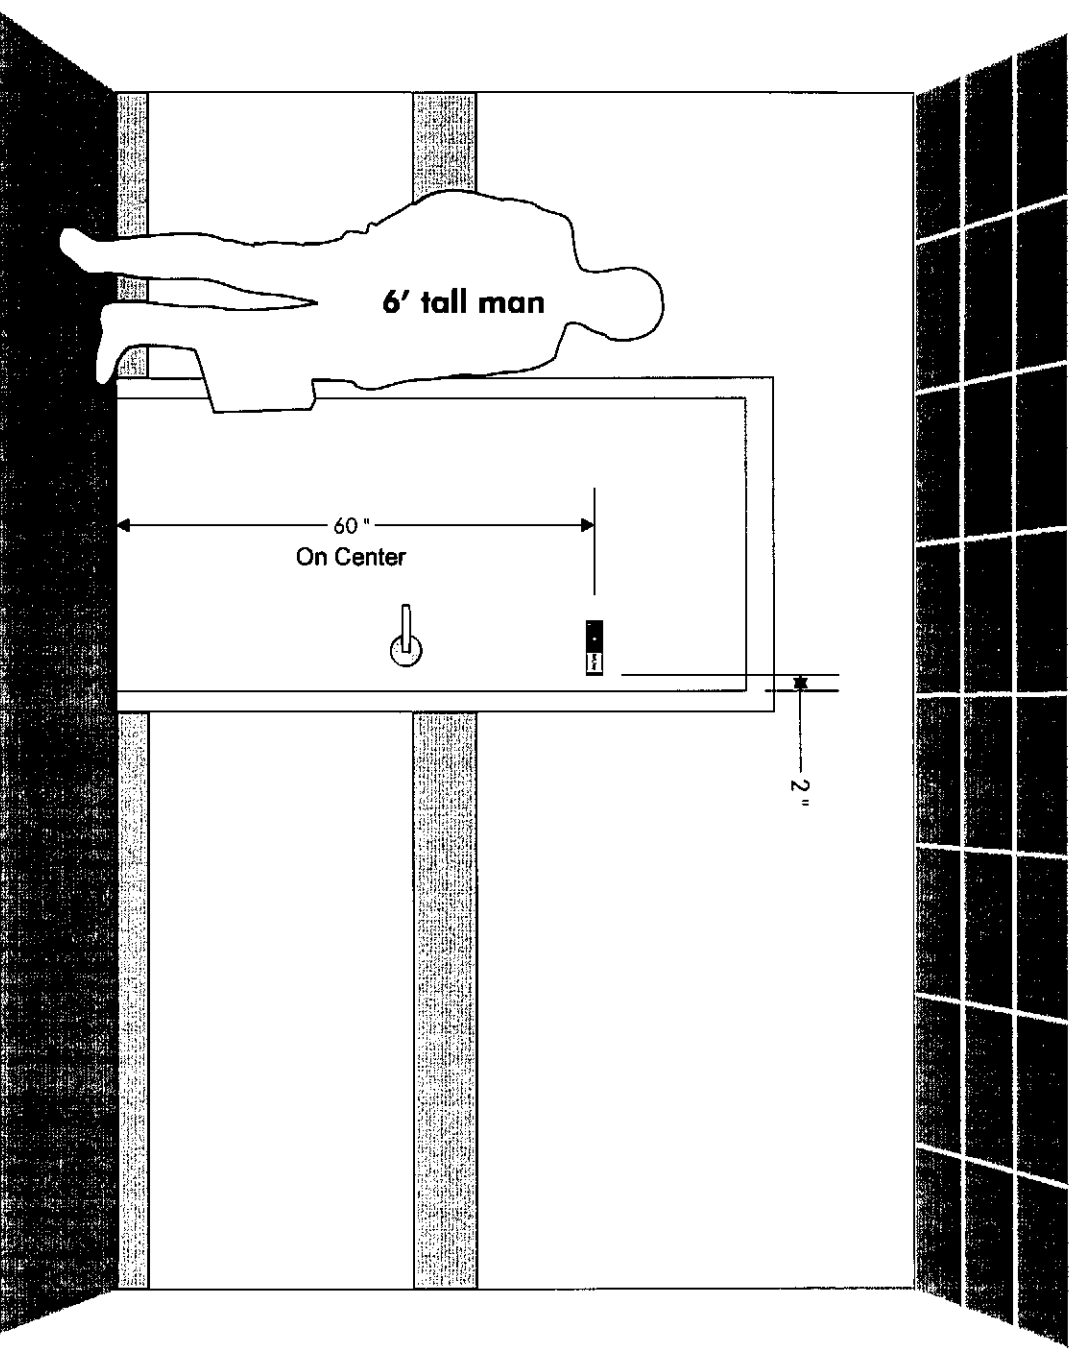





# VAMC West Palm Beach Sign Reference Guide

For All Sign Specifications & Ordering, See Technical Drawings

## Room / Identification Signs

### ST 1040.1

**SIZE:**

10"h x 40"w

**USAGE:**

Two-sided overhead ceiling mounted  
department identifier

Oncology / Chemotherapy  
Hematology / Infusion



Face A (Front)

Oncology / Chemotherapy  
Hematology / Infusion



Face B (Back)

### ST 1040.2

**SIZE:**

10"h x 40"w

**USAGE:**

One-sided overhead wall mounted  
department identifier

Emergency Department  
Registration & Waiting



### ST 1040.3

**SIZE:**

10"h x 40"w

**USAGE:**

One-sided overhead wall mounted wing  
identifier with room range

Wing 9A  
Rooms 9A111 - 9A332



Architectural  
**SIGN**  
ASSOCIATES

412.563.5657  
signplanning.com  
All Rights Reserved

**2/30**  
Sign Systems

800.777.4310  
290signs.com

### ST 1050.1

**SIZE:**  
10"h x 50"w

**USAGE:**  
Two-sided overhead ceiling mounted  
elevator identifier



### ST 1053.1

**SIZE:**  
10"h x 53"w

**USAGE:**  
One-sided overhead wall mounted  
department identifier with large text



### ST 1212.1

**SIZE:**  
12"h x 12"w

**USAGE:**  
Department identification sign



### ST 139.1

**SIZE:**  
13"h x 9 1/2"w

**USAGE:**  
User generated 11" x 8 1/2" paper  
message sign



Directional Signs

ST 1032.1

**SIZE:**  
10"h x 32"w

**USAGE:**  
Two-sided overhead ceiling mounted  
directional sign



Face A (Front)



Face B (Back)

ST 1032.2

**SIZE:**  
10"h x 32"w

**USAGE:**  
One-sided overhead wall mounted  
directional sign



ST 1074.1

**SIZE:**  
10"h x 74"w


**USAGE:**  
Retrofit one-sided overhead wall mounted  
sign directing to architectural features



ST 1074.2

**SIZE:**  
10"h x 74"w

**USAGE:**  
Two-sided overhead ceiling mounted sign  
directing to architectural features

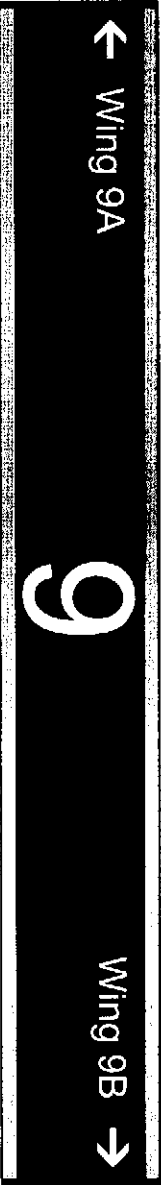

Face A (Front)  
Face B (Back) not shown, blank inserts


Directional Signs

ST 1074.3

SIZE:  
10"h x 74"w

USAGE:

Two-sided overhead ceiling mounted sign  
directing to up to four departments/areas

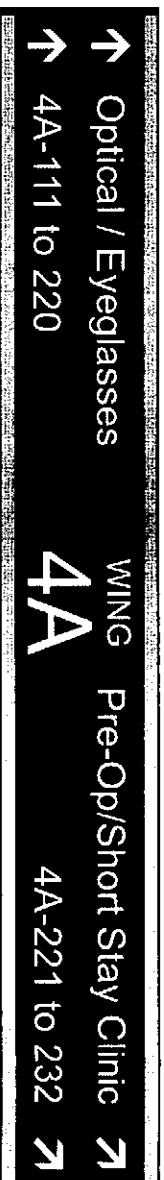

Face A (Front)  
Face B (Back) not shown, layout identical

ST 1074.4

SIZE:  
10"h x 74"w

USAGE:

Two-sided overhead ceiling mounted sign  
directing to up to six departments/areas




Face A (Front)  
Face B (Back) not shown, layout identical

ST 1153.1

SIZE:  
11"h x 53"w

USAGE:

One-sided overhead wall mounted sign  
directing to up to two departments/areas

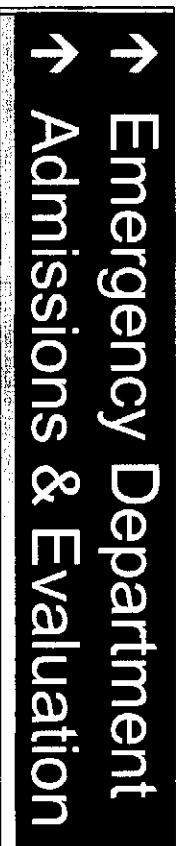

Directional Signs

ST 1415.1

**SIZE:**  
14"h x 15"w

**USAGE:**  
Small wall mounted directional sign



ST 2415.1

**SIZE:**  
24"h x 15"w

**USAGE:**  
Wall mounted directional sign



ST 3415.1

**SIZE:**  
34"h x 15"w

**USAGE:**  
Large wall mounted directional sign



Directories

ST 2415.2

SIZE:  
24"h x 15"w


USAGE:  
Retrofit floor directory or key locations sign



ST 3015.1

SIZE:  
30"h x 15"w


USAGE:  
Retrofit floor directory and key locations sign

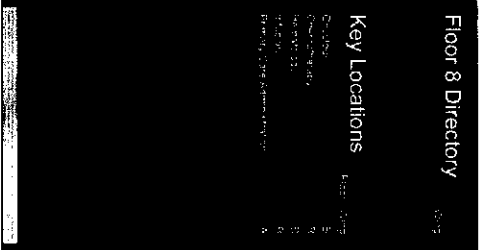


ST 4545.1

SIZE:  
45"h x 45"w

USAGE:  
Retrofit facility directory

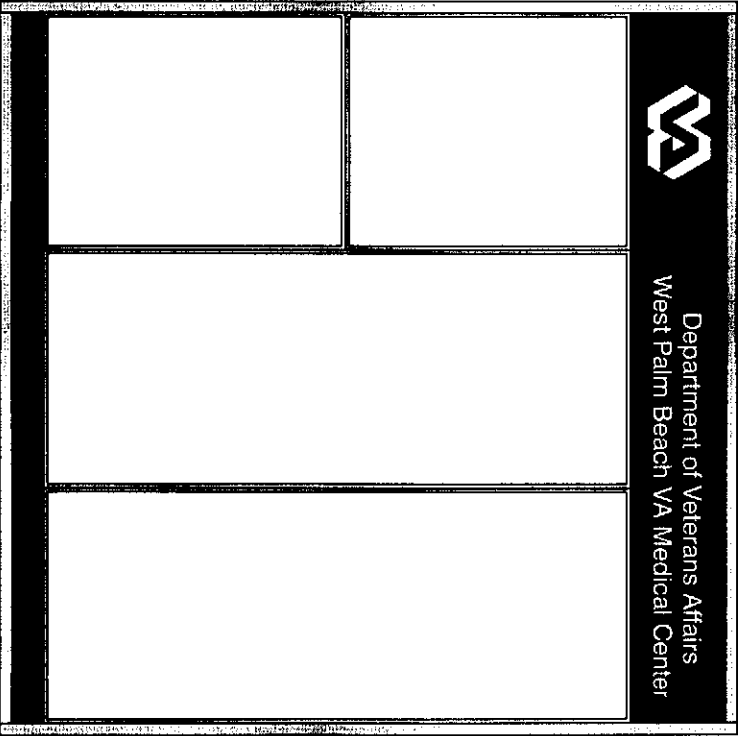

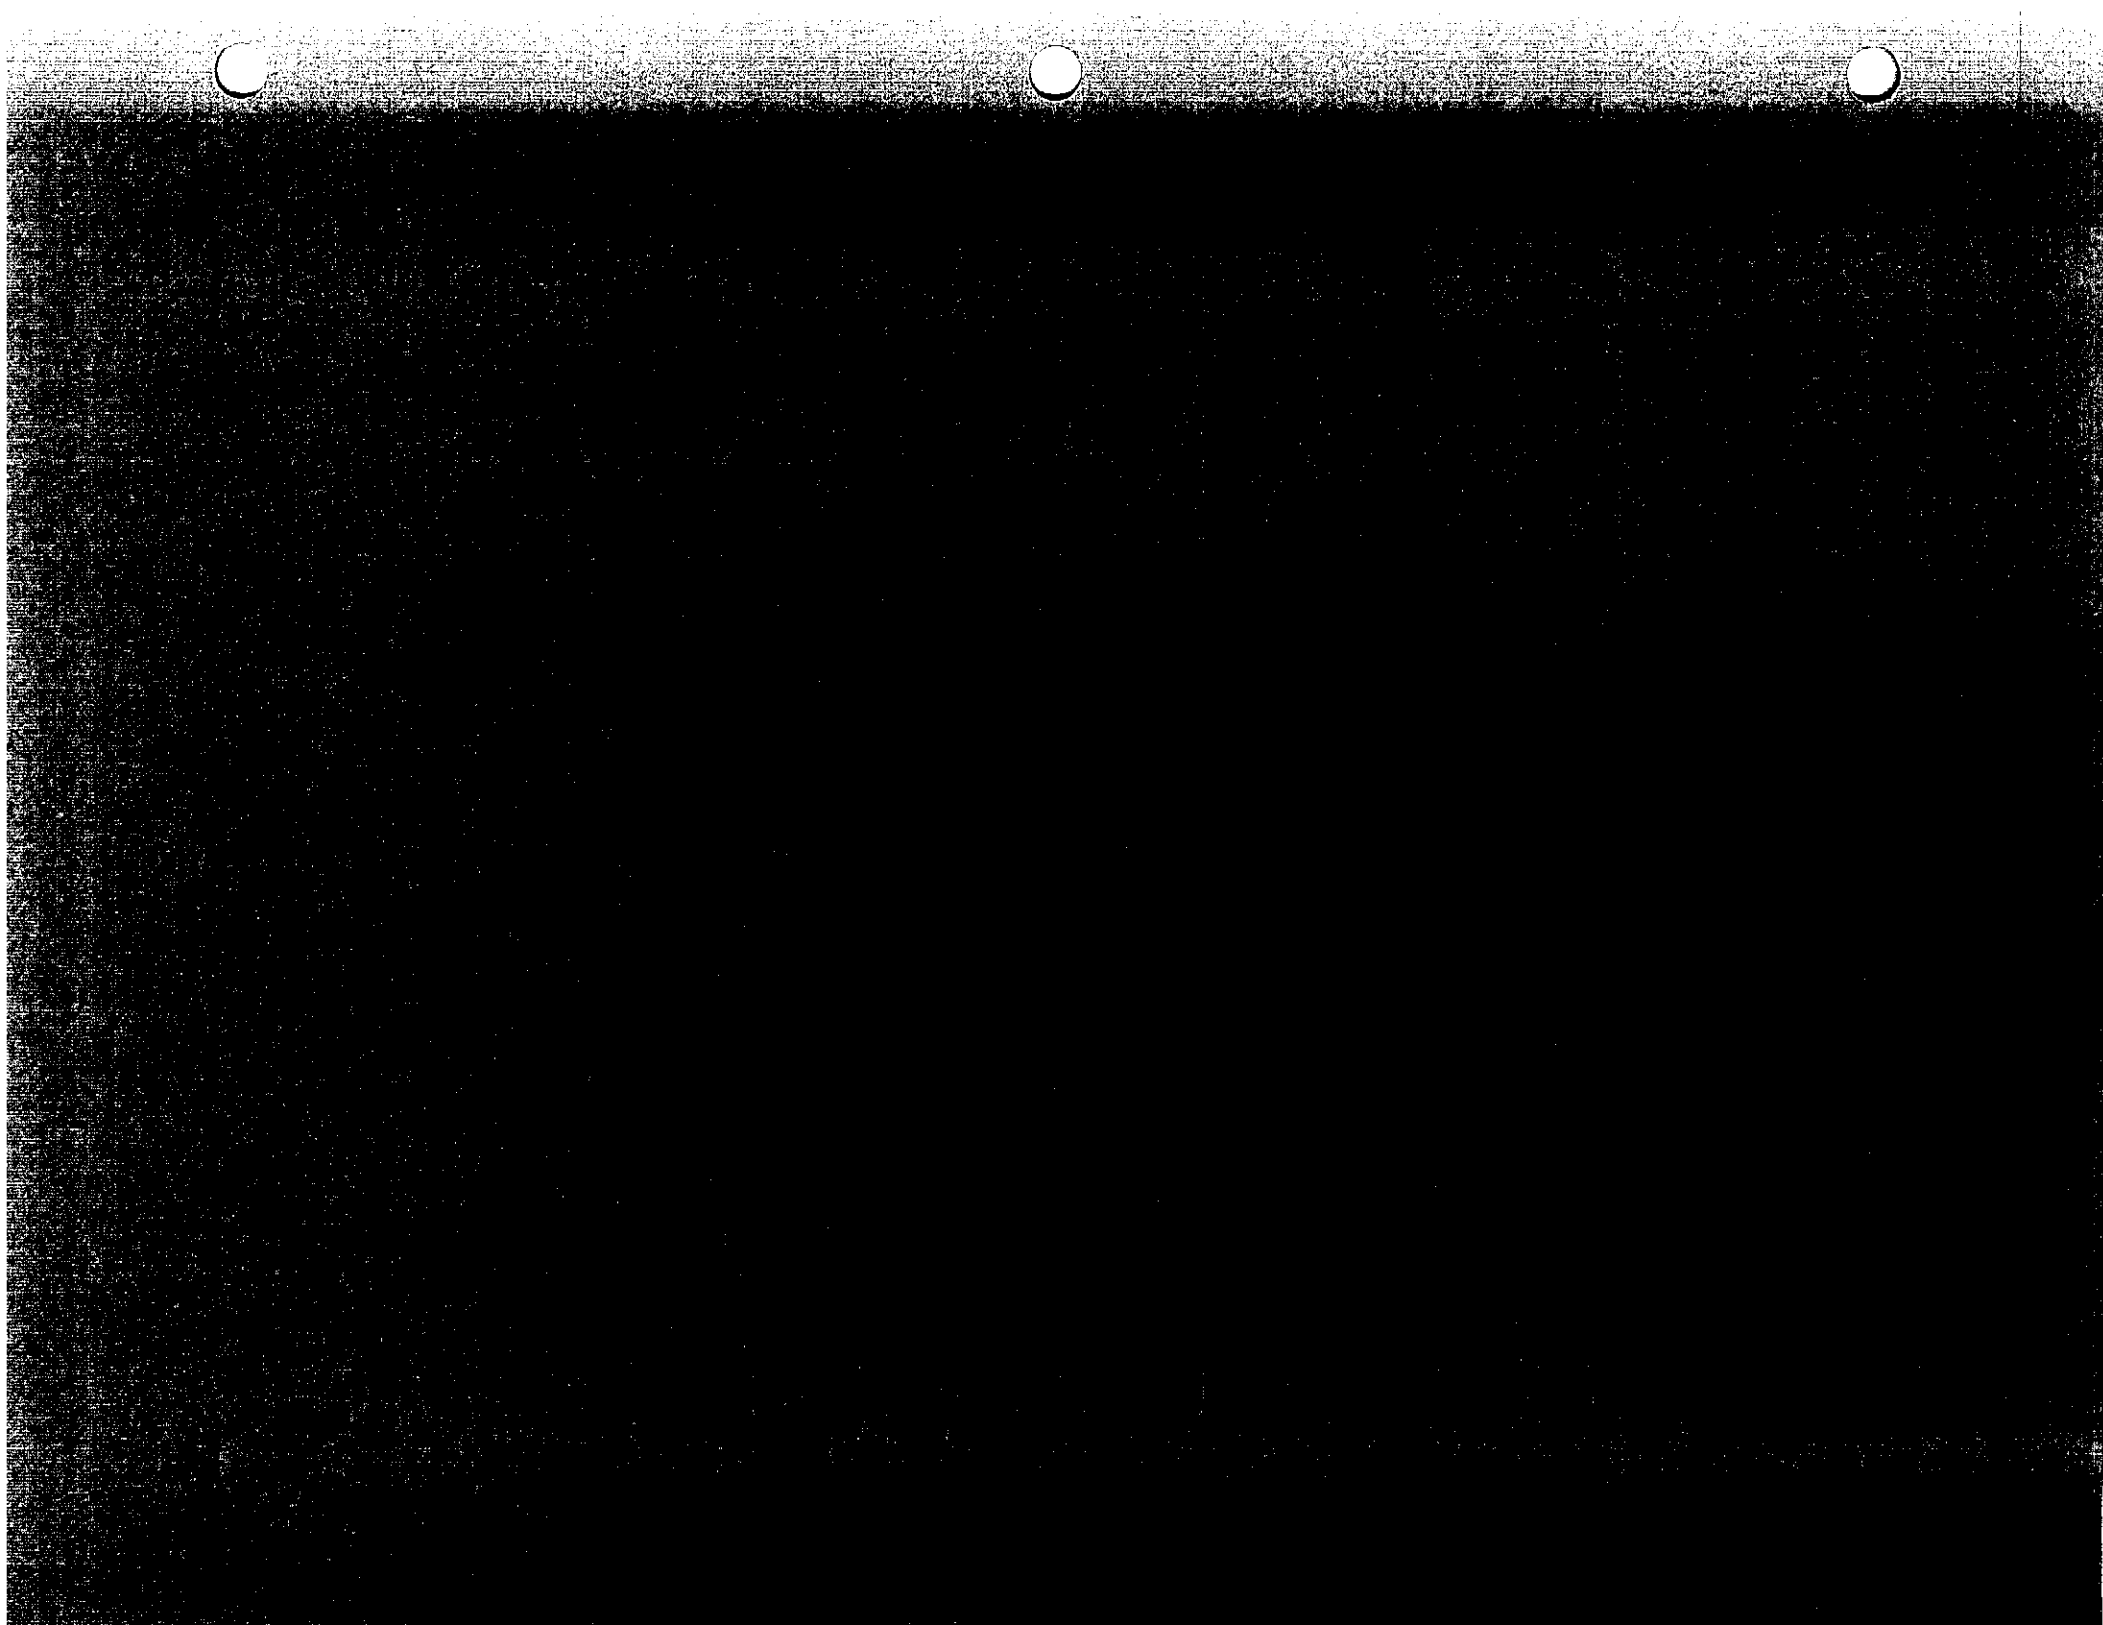

TECHNICAL SPECIFICATIONS / ORDER FORM

PRODUCT DESCRIPTION

2/90 Sign Systems Standard Series sign, approx 10"h x 32"w  
Two-Sided Overhead Ceiling Mount

PART A (quantity 6)

Specs: ABS insert w/surface applied vinyl copy

Size: 3'h x 3"w

Color: Slate 272

Copy: Lines 1a/b, 3a/b, 5a/b

Size: 1 3/4" centered

Font: NA

Color: White Matte 708

Note: Arrows are measured tip to tail

PART B (quantity 6)

Specs: ABS insert w/surface applied vinyl copy

Size: 3'h x 29"w

Color: Slate 272

Copy: Lines 2a/b, 4a/b, 6a/b

Size: 1 3/4" left justified

Font: Helvetica Regular (HRC)

Color: White Matte 708

PART C (quantity 2)

Specs: Square corner and cap (SC)

Size: 10"h

Color: Anodized Solin 101

PART D (quantity 2)

Specs: Aluminum insert

Size: 1'h x 32"w

Color: Anodized Natural 104

Visual Example for demonstration only  
Not To Scale


←	Retinal Screening
	Women's Health Clinic

Face A (Front)

→	Retinal Screening
	Women's Health Clinic

Face B (Back)

Technical Layout  
Scale 1/8" = 1"

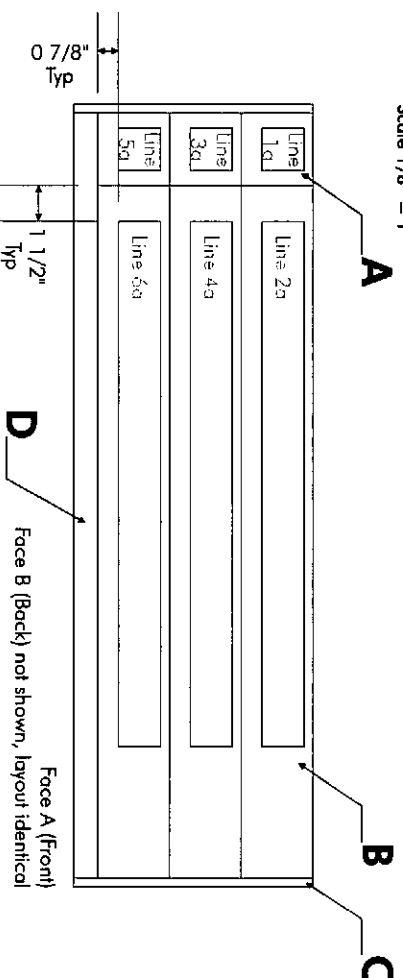

Replacement part / additional sign order form

Copy & replace original sign type drawing. Use copy as order form.	Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below	Mount Option Select mount type from Mounting Methods page if applicable	Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.	Order Submitted By: Phone Fax	Date	Architectural SIGNZ ASSOCIATES 417.263.5657 signplanning.com All Rights Reserved
--	---	---	---	-------------------------------	------	--



TECHNICAL SPECIFICATIONS / ORDER FORM

PRODUCT DESCRIPTION

2/90 Sign Systems Standard Series sign, approx 10"h x 32"w  
One-Sided Overhead Wall Mount

PART A (quantity 3)

Specs: ABS insert w/surface applied vinyl copy

Size: 3"h x 3"w

Color: Slate 272

Copy: Lines 1, 3, 5

Size: 1 3/4" centered

Font: NA

Color: White Matte 708

Note: Arrows are measured tip to tail

PART B (quantity 3)

Specs: ABS insert w/surface applied vinyl copy

Size: 3"h x 29"w

Color: Slate 272

Copy: Lines 2, 4, 6

Size: 1 3/4" left justified

Font: Helvetica Regular (HRC)

Color: White Matte 708

PART C (quantity 2)

Specs: Square corner end cap (SC)

Size: 10"h

Color: Anodized Satin 101

PART D

Specs: Aluminum insert


Size: 1"h x 32"w

Color: Anodized Natural 104

Visual Example for demonstration only  
Not To Scale

←	Retinal Screening
	Women's Health Clinic

Technical Layout  
Scale 1/8" = 1"

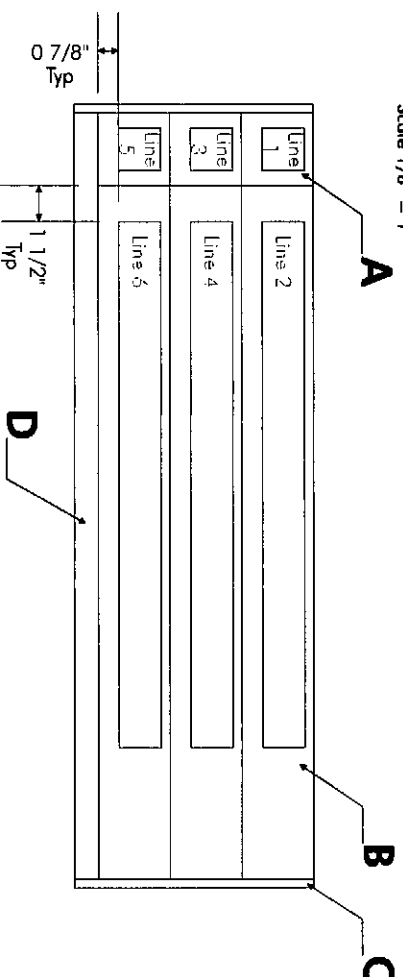

Replacement part / additional sign order form

Copy & replace original sign type down; Use copy as order form.	Entire Sign(s)	Indicate quantity of signs or part(s) Write desired part letter and quantity in boxes below	Mount Option Select mount type from Mounting Methods page if applicable. Indicate letter	Indicate Text Print desired text in white (rectangles) representing lines of text on sign above. Use proper capitalization.	Order Submitted By:	Phone	Fax	Date	Architectural SIGN ASSOCIATES 412.563.5657 signplanning.com All Rights Reserved
---	----------------	---	--	---	---------------------	-------	-----	------	---

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Standard Series sign, approx 10"h x 40"w  
**Two-Sided Overhead Ceiling Mount**

**PART A** (quantity 2)

Specs: ABS insert w/surface applied vinyl copy

Size: 8"h x 40"w

Color: Slide 272

Copy: Lines 1a/b & 2a/b

Size: 2" centered as shown

Font: Helvetica Regular (HRC)

Color: White Matte 708

Visual Example for demonstration only  
Not To Scale

Oncology / Chemotherapy  
Hematology / Infusion



Face A (Front)

**PART B** (quantity 2)

Specs: Square corner end cap (SC)

Size: 10"h

Color: Anodized Satin 101

**PART C** (quantity 2)

Specs: Aluminum insert w/screened copy

Size: 2"h x 40"w

Color: Anodized Natural 104

Copy: Lines 3a/b

Size: 1 1/2" centered

Font: NA


Color: Slide 272

Oncology / Chemotherapy  
Hematology / Infusion



Face B (Back)

Technical Layout  
Scale 1/8" = 1"

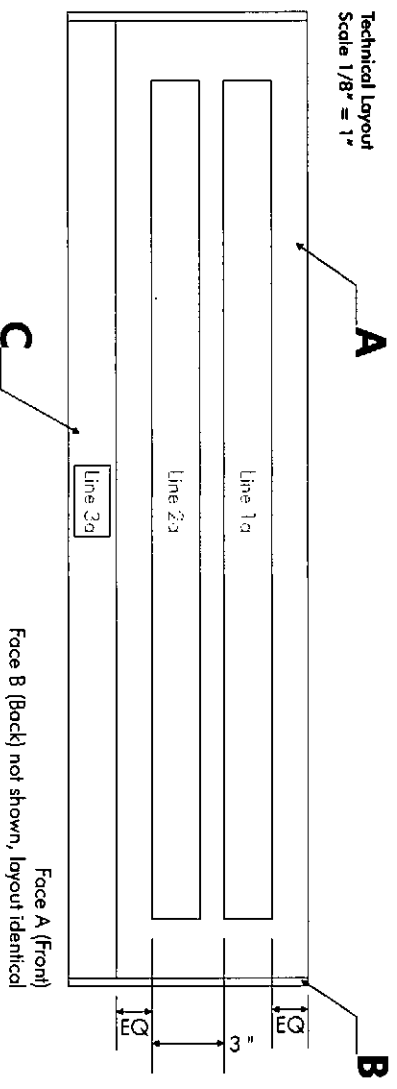

**Replacement part / additional sign order form**

Copy & replace  
original  
sign type  
drawing.  
Use copy as  
order form.

Indicate quantity  
of signs or part(s)  
Write desired part letter and  
quantity in box(es) below

Mount  
Option  
Select mount type  
from  
Mounting Methods  
page if applicable  
indicate letter

Indicate Text  
Print desired text in  
white rectangle(s)  
representing lines of  
text on sign above.  
Use proper  
capitalization.

Order Submitted By:

Phone

Fax

Date

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Standard Series sign, approx 10"h x 40"w  
**One-Sided Overhead Wall Mount**

**PART A**

Specs: ABS insert w/surface applied vinyl copy

Size: 8"h x 40"w

Color: Slide 272

Copy: Lines 1 & 2

Size: 2" centered as shown

Font: Helvetica Regular (HRC)

Color: White Matte 708

Visual Example for demonstration only  
Not To Scale

**PART B (quantity 2)**

Specs: Square corner end cap (SC)

Size: 10"h

Color: Anodized Satin 101

**PART C**

Specs: Aluminum insert w/screened copy

Size: 2"h x 40"w



Color: Anodized Natural 104

Copy: Line 3

Size: 1 1/2" centered

Font: NA

Color: Slide 272

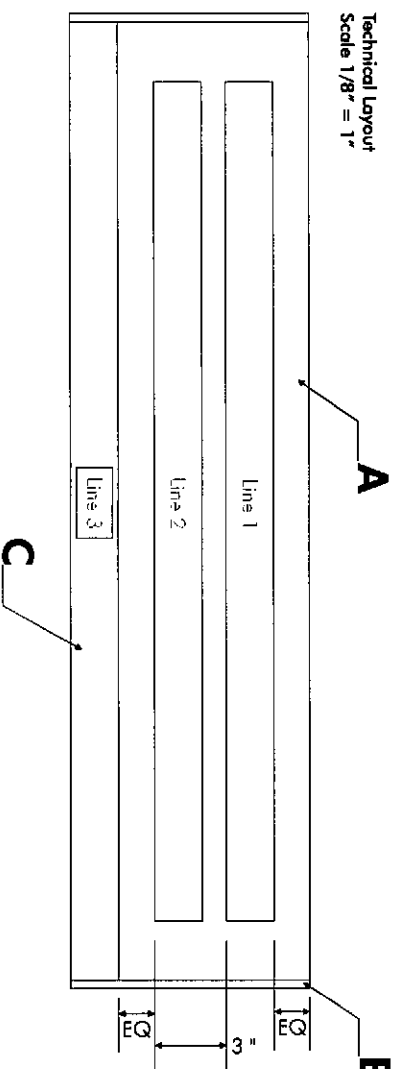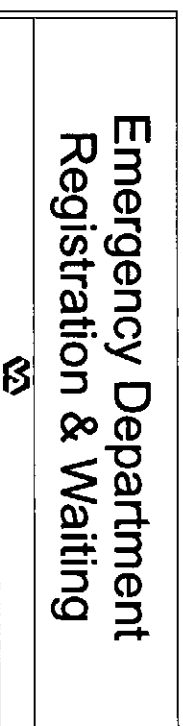

**Replacement part / additional sign order form**

Copy & replace original sign type drawing. Use copy as order form.	Entire Sign(s)	Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below	Mount Option Select mount type from Mounting Methods page if applicable. Indicate letter.	Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.	Order Submitted By: Phone Fox Date	Architectural SIGNZ associates 412.563.5657 signplanning.com All Rights Reserved
--	----------------	---	---	---	------------------------------------	--

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Standard Series sign, approx 10"h x 40"w  
**One-Sided Overhead Wall Mount**

**PART A**

Specs: ABS insert w/surface applied vinyl copy

Size: 8"h x 40"w

Color: Slate 272

Copy: Line 1

Size: 2 1/2" centered

Font: Helvetica Regular (HRC)

Color: White Matte 708

Line 2

Size: 1 3/4" centered

Font: Helvetica Regular (HRC)

Color: White Matte 708

**PART B** (quantity 2)

Specs: Square corner end cap (SC)

Size: 10"h

Color: Anodized Solin 101

**PART C**

Specs: Aluminum insert w/screened copy

Size: 2"h x 40"w

Color: Anodized Natural 104


Copy: Line 3

Size: 1 1/2" centered


Font: NA

Color: Slate 272

Visual Example for demonstration only  
Not To Scale

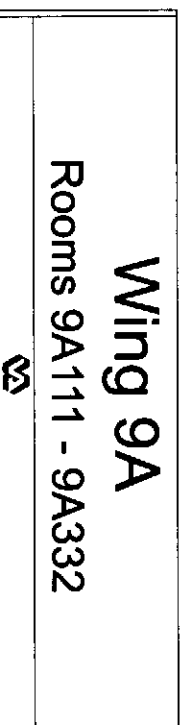

Technical Layout  
Scale 1/8" = 1"

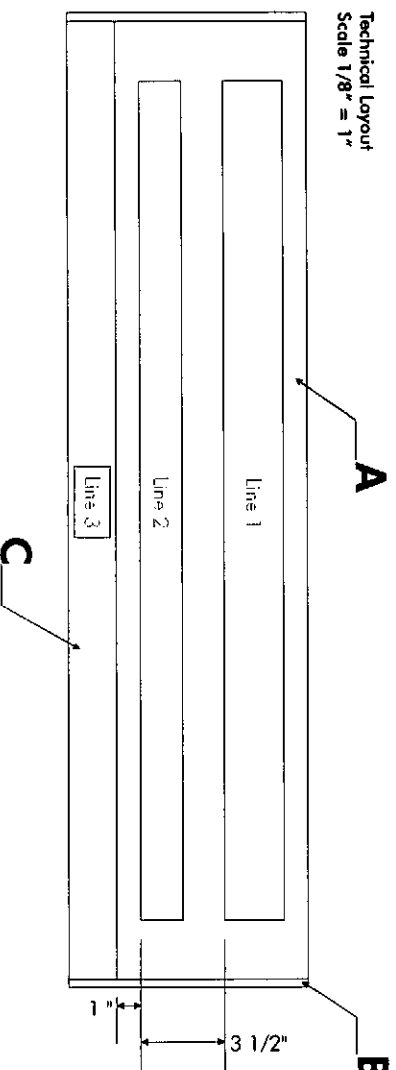

**Replacement part / additional sign order form**

Copy & replace original sign type drawing. Use copy on order form.	Indicate quantity of signs or port(s) Write desired part letter and quantity in box(es) below	Mount Option Select mount type from Mounting Methods page if applicable	Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.	Order Submitted By: Phone	Date	Architectural SIGNZ ASSOCIATES 412.563.5657 signplanning.com All Rights Reserved
Entire Sign(s)	A			For		

TECHNICAL SPECIFICATIONS / ORDER FORM

PRODUCT DESCRIPTION

2/90 Sign Systems Standard Series sign, approx 10"h x 50"w  
Two-Sided Overhead Ceiling Mount


PART A (quantity 2)

Specs: ABS insert w/surface applied vinyl copy  
Size: 9"h x 10"w  
Color: Slate 272

Copy: Lines 1a/b

Size: 7 1/2" centered  
Font: NA  
Color: White Matte 708

Visual Example for demonstration only  
Not To Scale

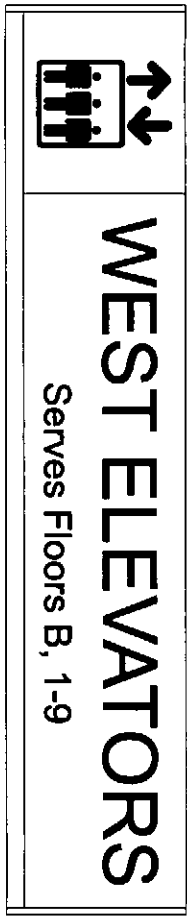

Face A (Front)

PART B (quantity 2)

Specs: ABS insert w/surface applied vinyl copy  
Size: 9"h x 40"w  
Color: Slate 272

Copy: Lines 2a/b

Size: 3" centered  
Font: Helvetica Regular (HRC)  
Color: White Matte 708  
Lines 3a/b

Size: 1 1/2" centered  
Font: Helvetica Regular (HRC)  
Color: White Matte 708




Face B (Back)

PART C (quantity 2)

Specs: Square corner end cap (SC)  
Size: 10"h  
Color: Anodized Solin 101

PART D (quantity 2)

Specs: Aluminum insert  
Size: 1"h x 50"w  
Color: Anodized Natural 104

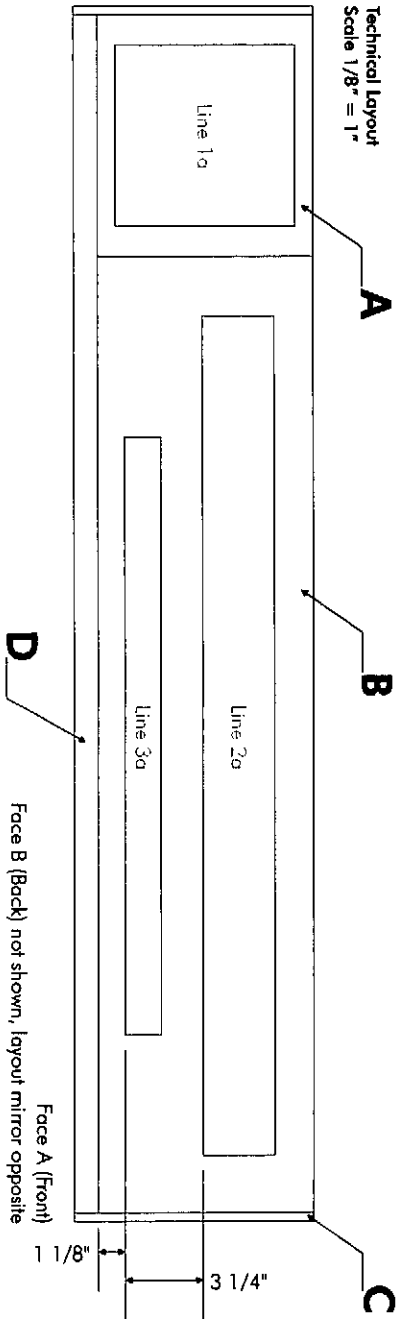

Replacement part / additional sign order form

Copy & replace original sign type drawing. Use copy as order form.	Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below	Mount Option Select mount type from Mounting Methods page if applicable	Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.	Order Submitted By: Phone Fax Date	Architectural SIGN ASSOCIATES 412.563.5657 signplanning.com All Rights Reserved
Entire Sign(s)	A				

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Standard Series sign, approx 10"h x 53"w  
**One-Sided Overhead Wall Mount**

**PART A**

Specs: ABS insert w/surface applied vinyl copy

Size: 8"h x 53"w

Color: Slate 272

Copy: Line 1

Size: 3" centered

Font: Helvetica Regular (HRC)

Color: White Matte 708


Visual Example for demonstration only  
Not To Scale

**PART B** (quantity 2)

Specs: Square corner end cap (SC)

Size: 10"h

Color: Anodized Satin 101

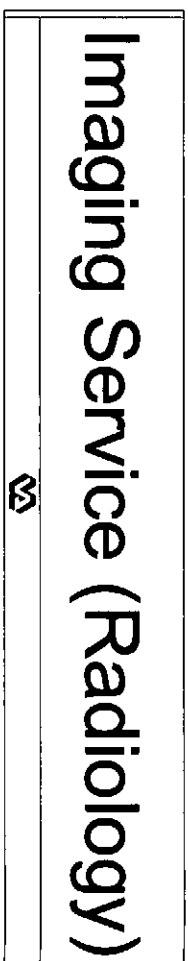

**PART C**

Specs: Aluminum insert w/screened copy

Size: 24"h x 53"w


Color: Anodized Natural 104

Copy: Line 2

Size: 1 1/2" centered

Font: NA

Color: Slate 272

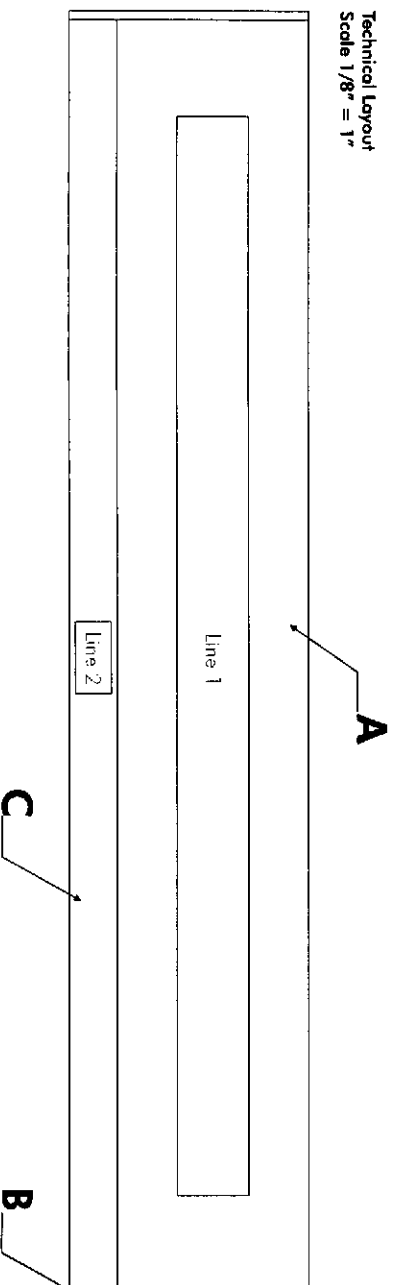

**Technical Layout**  
Scale 1/8" = 1"

**Replacement part / additional sign order form**

Copy & replace  
original  
sign type  
drawing.  
Use copy as  
order form.

Entire Sign(s)

Indicate quantity  
of signs or part(s)  
Write desired part letter and  
quantity in box(es) below

Mount  
Option  
Select mount type  
from  
Mounting Methods  
page if applicable  
Indicate letter

Indicate Text  
Print desired text in  
white rectangle(s)  
representing lines of  
text on sign above.  
Use proper  
capitalization.

Order Submitted By:

Phone

Fax

Date

TECHNICAL SPECIFICATIONS / ORDER FORM

PRODUCT DESCRIPTION

2/90 Sign Systems Standard Series sign, approx 10'h x 7.4'w  
One-Sided Overhead Wall Mount

PART A

Specs: ABS insert w/surface applied vinyl copy  
Size: 8'h x 8"w  
Color: Slate 272  
Copy: Line 5

Size: 7" centered  
Font: Helvetica Regular (HRC)  
Color: White Matte 708

PART B

Specs: ABS insert w/surface applied vinyl copy  
Size: 4'h x 29"w  
Color: Slate 272  
Copy: Lines 2 & 4

Size: 1 3/4" left justified  
Font: Helvetica Regular (HRC)  
Color: White Matte 708

Lines 7 & 9

Size: 1 3/4" right justified  
Font: Helvetica Regular (HRC)  
Color: White Matte 708

PART C

Specs: ABS insert w/surface applied vinyl copy  
Size: 4'h x 4"w  
Color: Slate 272  
Copy: Lines 1, 3, 6, 8



Size: 2 1/2" centered  
Font: NA

Color: White Matte 708

Note: Arrows are measured tip to tail

PART D

Specs: Aluminum insert  
Size: 1'h x 7.4'w  
Color: Anodized Natural 104

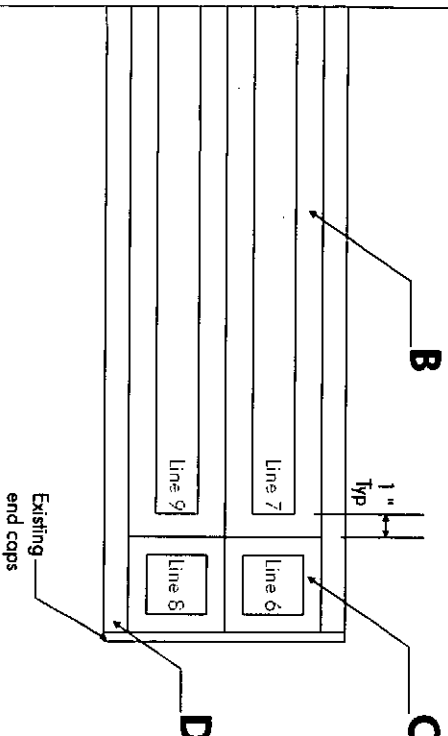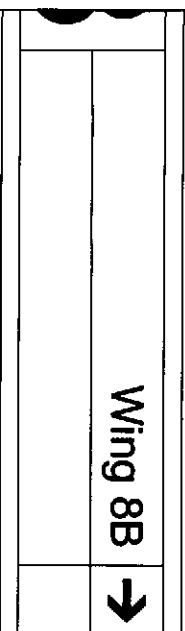

Replacement part / additional sign order form - Fax to (

Step 1  
Copy & replace  
original  
sign type  
drawing.  
Use copy as  
order form.

Step 2  
Entire Sign(s)

Indicate quantity  
of signs or part(s)  
Write desired # of parts or signs  
in corresponding box(s) below

Step 3  
Mount  
Option  
Select mount type  
from "Mounting Methods"  
page of this manual  
Indicate letter

Step 4

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Standard Series sign, approx 10"h x 74"w  
Two-Sided Overhead Ceiling Mount

**PART A**

Specs: ABS insert w/surface applied vinyl copy  
Size: 8"h x 8"w  
Color: Slate 272  
Copy: Line 5

Size: 7" centered  
Font: Helvetica Regular (HRC)  
Color: White Matte 708

**PART B** (quantity 4)

Specs: ABS insert w/surface applied vinyl copy  
Size: 4"h x 29"w  
Color: Slate 272  
Copy: Lines 2 & 4

Size: 1 3/4" left justified  
Font: Helvetica Regular (HRC)  
Color: White Matte 708  
Lines 7 & 9  
Size: 1 3/4" right justified  
Font: Helvetica Regular (HRC)  
Color: White Matte 708

**PART C** (quantity 4)

Specs: ABS insert w/surface applied vinyl copy  
Size: 4"h x 4"w  
Color: Slate 272  
Copy: Lines 1, 3, 6, 8

Size: 2 1/2" centered  
Font: NA  
Color: White Matte 708  
Note: Arrows are measured tip to tail

**PART D** (quantity 4)




Specs: Aluminum insert  
Size: 1"h x 74"w  
Color: Anodized Natural 104

**PART E** (quantity 2)

Specs: Square corner end cap (SC)  
Size: 10"h  
Color: Slate 272

**PART F** (not shown)

Specs: ABS insert  
Size: 8"h x 74"w  
Color: Slate 272

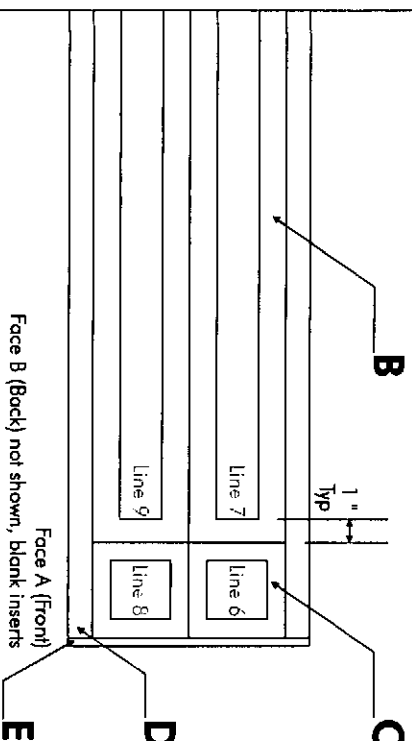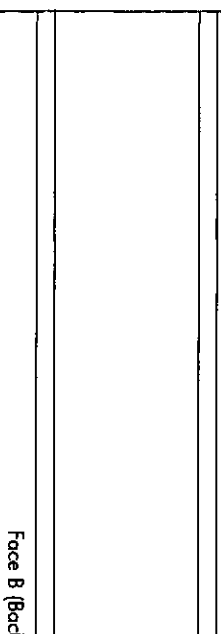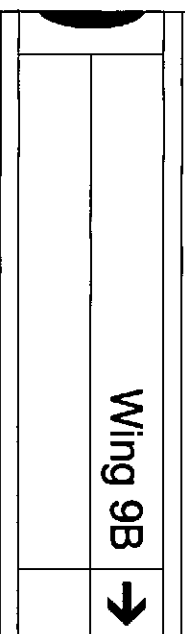

**Replacement part / additional sign order form - Fax to 1**

Step 1  
Copy & replace  
original  
sign type  
drawing.  
Use copy as  
order form.

Step 2  
Entire Sign(s)  
Indicate quantity  
of signs or part(s)  
Write desired # of parts or signs  
in corresponding box(s) below

Step 3  
Mount  
Option  
Select mount type  
from \*  
Mounting Methods\*  
page of this manual  
Indicate letter

Step 4



\_\_\_\_\_

--	--

## Pre-Op/Shot Stay Clinic

HE-OP/201011.214y Clinic ✓

## 4A-22110-232 ✓


Face A (Front)

FACE A (front)

\_\_\_\_\_

--	--

\_\_\_\_\_

---

--	--

---

Downloaded from <http://www.sagepub.com> at NANYANG TECH UNIV LIBRARY on June 11, 2015


\_\_\_\_\_

**Face B (Back)**

**2**

Typ
-----

Downloaded from <http://ajphaphysocpharm.sagepub.com/> at National Archive Publishing Co on June 11, 2015

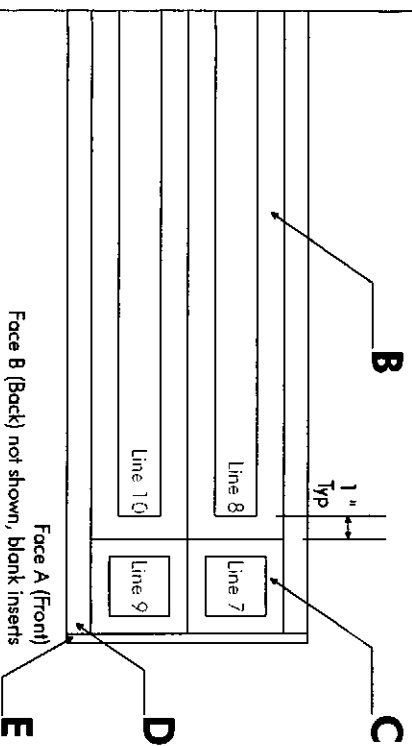

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Standard Series sign, approx 10"h x 74"w  
Two-Sided Overhead Ceiling Mount

**PART A** (quantity 12)

Specs: ABS insert w/surface applied vinyl copy

Size: 37h x 3"w

Color: Slate 272

Copy: Lines 1a/b-5a/b & 9a/b-13a/b odd

Size: 1 3/4" centered

Font: NA

Color: White Matte 708

Note: Arrows are measured lip to tail

**PART B** (quantity 12)

Specs: ABS insert w/surface applied vinyl copy

Size: 37h x 29"w

Color: Slate 272

Copy: Lines 2a/b-6a/b

Size: 1 3/4" left justified

Font: Helvetica Regular (HRC)

Color: White Matte 708

Lines 10a/b-14a/b

Size: 1 3/4" right justified

Font: Helvetica Regular (HRC)

Color: White Matte 708

**PART C** (quantity 2)

Specs: ABS insert w/surface applied vinyl copy

Size: 9"h x 10"w

Color: Slate 272

Copy: Lines 7a/b

Size: 1 " centered

Font: Helvetica Regular (HRC)

Color: White Matte 708

Lines 8a/b

Size: 5 1/4" centered

Font: Helvetica Regular (HRC)

Color: White Matte 708

**PART D** (quantity 2)

Specs: Aluminum insert

Size: 1"h x 74"w

Color: Anodized Natural 104

**PART E** (quantity 2)

Specs: Square corner end cap (SC)

Size: 10"h

Color: Slate 272

**Replacement part / additional sign order form - 50x100**

Step 1  
Copy & replace original sign type drawing. Use copy as order form.

Step 2  
Entire Sign(s)

Indicate quantity of signs or part(s)	
A	

Write desired # of parts or signs in corresponding box(s) below

Step 3  
Mount Option Select mount type from "Mounting Methods" page of this manual

Mount Option

Indicate letter

Step 4

ELEVATORS	
Emergency Department	→
Admissions & Evaluation	→

Face A (Front)

ELEVATORS	
Emergency Department	→
Admissions & Evaluation	→

Face B (Back)

1" typ

Line 10a	
Line 9a	

Line 12a	
Line 11a	

Line 14a	
Line 13a	

Face A (Front)

Face B (Back) not shown

E

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Standard Series sign, approx 12"h x 12"w

**PART A**

Specs: Aluminum insert w/screened copy

Size: 27h x 12"w

Color: Anodized Natural 104

Copy: Line 1

Size: 1 1/2" centered

Font: NA

Color: Slate 272

**PART B** (quantity 2)

Specs: Square corner tamper resistant end cap (SC-TREC)

Size: 12'h

Color: Anodized Satin 101

**PART C**

Specs: U-Do insert carrier w/reverse applied vinyl copy on lens

Size: 77h x 12"w

Color: Slate 272

Copy: Lines 2-4

Size: 7/8" left justified, centered vertically

Font: Helvetica Regular (HRC)

Color: White 208

**PART D**

Specs: Integral ADA insert w/tactile copy and braille

Size: 27h x 12"w

Color: Slate 272

Copy: Line 5

Size: 1" centered

Font: Helvetica Regular (HRC)

Color: White 208

**PART E**

Specs: Aluminum insert


Size: 17h x 12"w

Color: Anodized Natural 104

Visual Example for demonstration only  
Not To Scale



Technical Layout  
Scale 1/4" = 1"

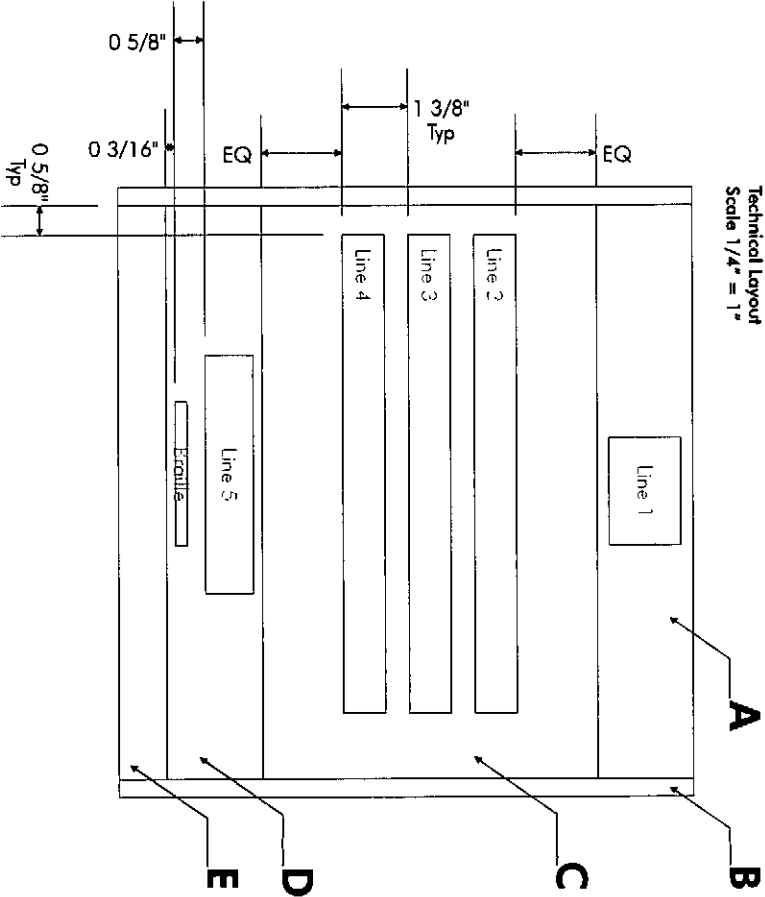

**Replacement part / additional sign order form**

Copy & replace original sign type drawing. Use copy as order form.	Entire Sign(s)
Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below	A

Mount Option Select mount type from Mounting Methods page if applicable. Indicate letter	Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.
--	---

Order Submitted By:	Phone	Fax	Date
---------------------	-------	-----	------

TECHNICAL SPECIFICATIONS / ORDER FORM

PRODUCT DESCRIPTION

2/90 Sign Systems Standard Series sign, approx 11"h x 53"w  
One-Sided Overhead Wall Mount

PART A (quantity 2)

Specs: ABS insert w/surface applied vinyl copy

Size: 5'h x 5"w

Color: Slate 272

Copy: Lines 1 & 3

Size: 3" centered

Font: NA

Color: White Matte 708

Note: Arrows are measured tip to tail

PART B (quantity 2)

Specs: ABS insert w/surface applied vinyl copy

Size: 5'h x 48"w

Color: Slate 272

Copy: Lines 2 & 4

Size: 3" left justified

Font: Helvetica Regular (HRC)

Color: White Matte 708

PART C (quantity 2)

Specs: Square corner end cap (SC)

Size: 11"h

Color: Anodized Satin 101

PART D

Specs: Aluminum insert


Size: 11"h x 53"w

Color: Anodized Natural 104

Visual Example for demonstration only  
Not To Scale

↑	Emergency Department
↑	Admissions & Evaluation

Technical Layout  
Scale 1/8" = 1"

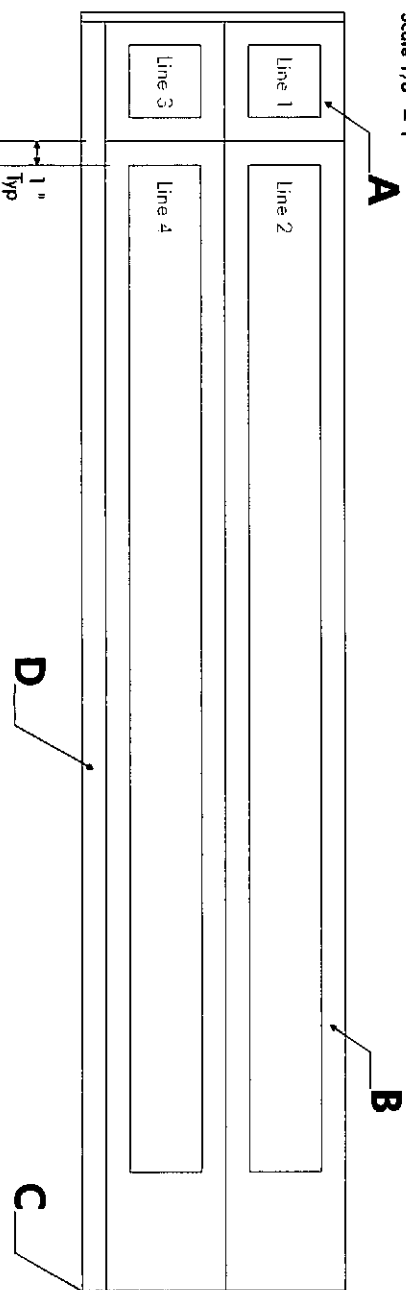

Replacement part / additional sign order form

Copy & replace original sign type drawing. Use copy as order form.	Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below	Mount Option Select mount type from Mounting Methods page if applicable Indicate letter	Indicate Text Print desired text in while rectangle(s) representing lines of text on sign above. Use proper capitalization.	Order Submitted By: Phone Fox Date	Architectural SIGN 412.563.5657 signplanning.com All Rights Reserved
--	---	---	---	------------------------------------	--

TECHNICAL SPECIFICATIONS / ORDER FORM

PRODUCT DESCRIPTION

2/90 Sign Systems Standard Series sign, approx 12"h x 12"w

PART A

Specs: Aluminum insert w/screened copy

Size: 27"h x 12"w

Color: Anodized Natural 104

Copy: Line 1

Size: 1 1/2" centered

Font: NA

Color: Slate 272

PART B (quantity 2)

Specs: Square corner tamper resistant end cap (SC-TREC)

Size: 12"h

Color: Anodized Solin 101

PART C

Specs: U-Do insert carrier w/reverse applied vinyl copy on lens

Size: 77"h x 12"w

Color: Slate 272

Copy: Lines 2-4

Size: 7/8" left justified, centered vertically

Font: Helvetica Regular (HRC)

Color: White 208

PART D

Specs: Integral ADA insert w/tactile copy and braille

Size: 27"h x 12"w

Color: Match Matthews Paint MP 14151

Copy: Line 5

Size: 1" centered

Font: Helvetica Regular (HRC)

Color: White 208


PART E

Specs: Aluminum insert


Size: 17"h x 12"w

Color: Anodized Natural 104

Visual Example for demonstration only  
Not To Scale

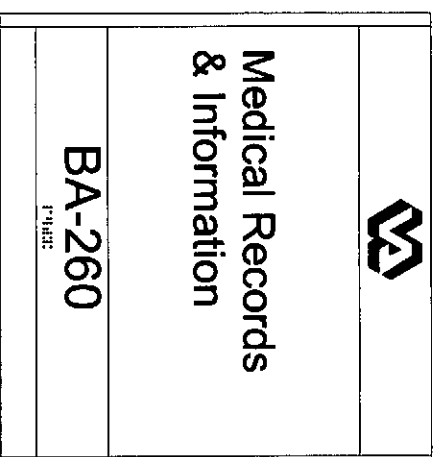

Technical Layout  
Scale 1/4" = 1"

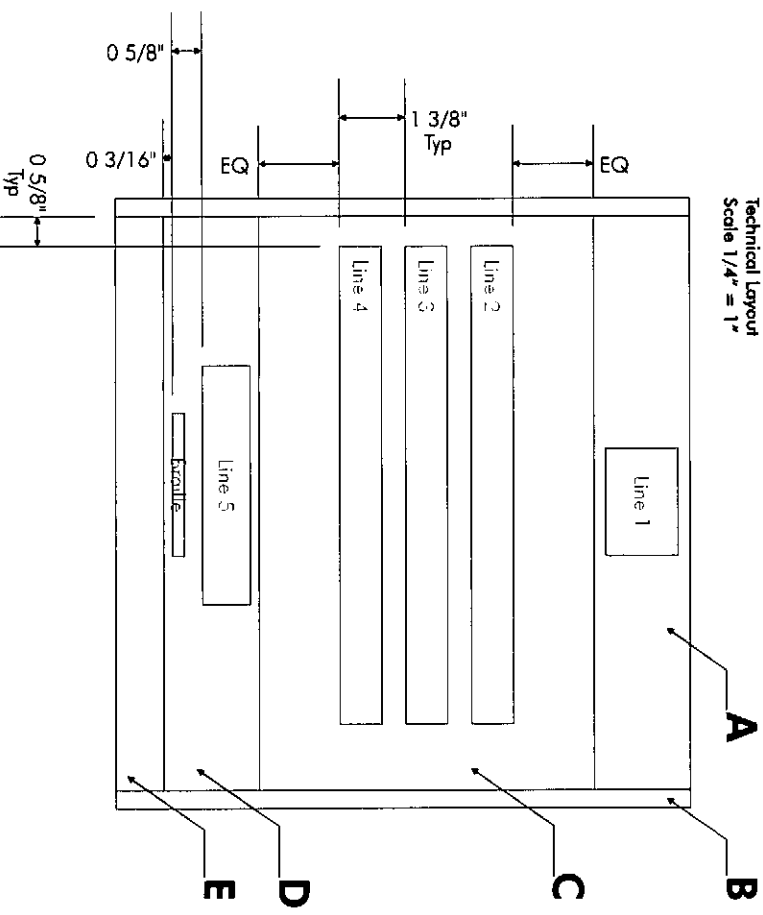

Replacement part / additional sign order form

Copy & replace original sign type drawing. Use copy as order form.	Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below	Mount Option Select mount type from Mounting Methods page if applicable. Indicate letter.	Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.	Order Submitted By: Phone Fax Date	Architectural SIGN 417.263.5657 signplanning.com All Rights Reserved
--	---	---	---	------------------------------------	--

## SPECIFICATIONS

### USAGE

User generated 11" x 8 1/2" paper message sign

### PRODUCT DESCRIPTION

2/90 Sign Systems Thin Series sign, 13"h x 9 1/2"w (w/o end caps)

### PART A

Specs: Thumb notched non-glare window insert with first surface-sprayed framing, clear display area and open bottom for debris removal w/ Screened logo on backplate

Size: 12"h x 9 1/2"w

(accepting on 8 1/2"w x 11"h insert)

Color: Border - Slate 272

Backplate - Slate 272

### PART B

Specs: ABS insert w/o copy

Size: 1"h x 9 1/2"w

Color: Anodized Natural 104

### PART C (quantity 2)



Specs: Square corner tamper resistant end cap (SC-TREC)

Size: 1.37h

Color: Slate 272

### NOTE

User supplied paper or clear transparency stock

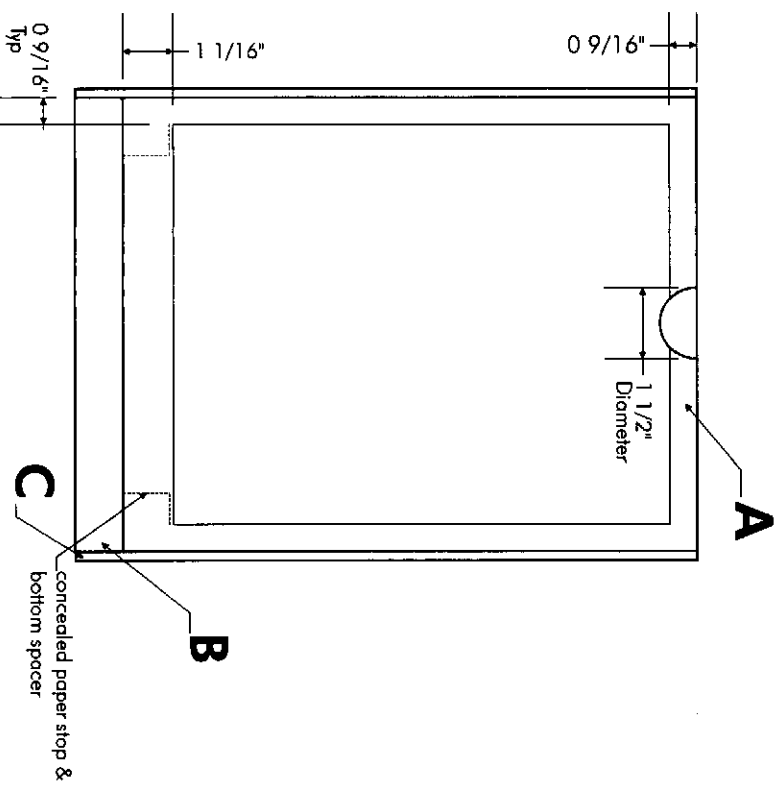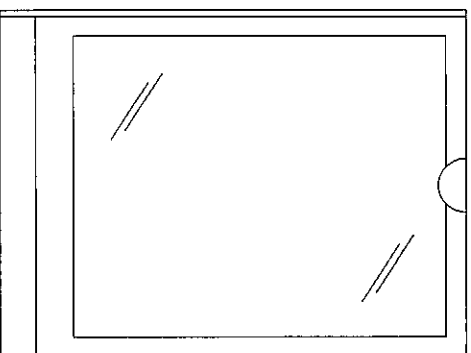

Scale 1/4" = 1"

Replacement part / additional sign order form

Step 1  
Copy & replace original sign type drawing. Use copy as order form.

Step 2  
Entire Sign(s)  
Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below

Step 3  
Mount Option Select mount type from Mounting Methods page if applicable Indicate letter

Step 4  
Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.

Step 5  
Order Submitted By: Phone: Fax: Date:

Architectural SIGNZ associates 412.563.5657 signplanning.com All Rights Reserved

TECHNICAL SPECIFICATIONS / ORDER FORM

PRODUCT DESCRIPTION

2/90 Sign Systems Standard Series sign, approx 14"h x 15"w

PART A

Specs: Subsurface insert w/subsurface copy

Size: 3"h x 15"w

Color: Slate 272

Copy: Line 1

Size: 2" left justified (if left arrow) or right justified (if right arrow)


Font: NA

Color: White 208

Note: Arrows are measured tip to tail

See schedule for arrow direction which determines justification

Visual Example for demonstration only  
Not To Scale

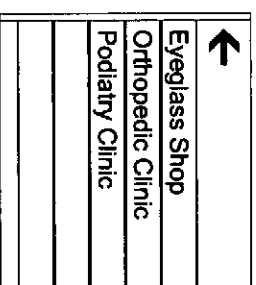

PART B (quantity 2)

Specs: Square corner tamper resistant end cap (SC-TREC)

Size: 14"h

Color: Slate 272

PART C (quantity 5)

Specs: U-Do insert carrier w/reverse applied vinyl copy on lens

Size: 2"h x 15"w

Color: Slate 272

Copy: Lines 2-6

Size: 1" left justified

Font: Helvetica Regular (HRC)


Color: White 208

PART D

Specs: Aluminum insert

Size: 1"h x 15"w

Color: Anodized Natural 104

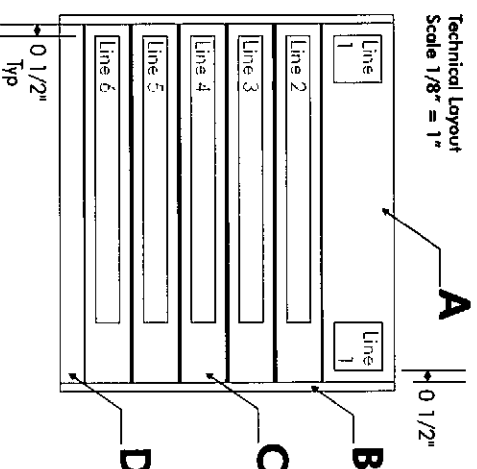

Replacement part / additional sign order form	
Copy & replace original sign type drawing. Use copy as order form.	Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below
Entire Sign(s)	A
Mount Option Select mount type from Mounting Methods page if applicable. Indicate letter	Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.
Order Submitted By:	Phone
	Fax
	Date
Architectural SIGN associates 412.563.5657 signplaning.com All Rights Reserved	

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Standard Series sign, approx 24"h x 15"w

**PART A**

Specs: Subsurface insert w/subsurface copy

Size: 3"h x 15"w

Color: Slate 272

Copy: Line 1

Size: 2" left justified (if left arrow) or right justified (if right arrow)

Font: NA

Color: White 208

Note: Arrows are measured tip to tail

See schedule for arrow direction which determines justification

Visual Example for demonstration only  
Not To Scale

→
Copy Center
Dialysis
Library
Medical Media
Outdoor Terrace

**PART B** (quantity 2)

Specs: Square corner tamper resistant end cap (SC-TREC)

Size: 24"h

Color: Slate 272

**PART C** (quantity 10)

Specs: U-Do insert carrier w/reverse applied vinyl copy on lens

Size: 2"h x 15"w

Color: Slate 272

Copy: Lines 2-11

Size: 1" left justified

Font: Helvetica Regular (HRC)

Color: White 208


**PART D**

Specs: Aluminum insert

Size: 1"h x 15"w

Color: Anodized Natural 104

Technical Layout  
Scale 1/8" = 1"

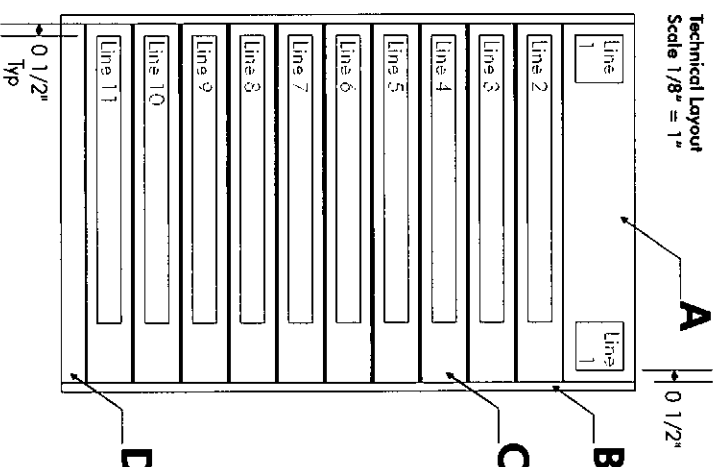

**Replacement part / additional sign order form**

Copy & replace original sign type drawing. Use copy as order form.	Entire Sign(s)	Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below	Mount Option Select mount type from Mounting Methods page if applicable Indicate letter	Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.
	A			

Order Submitted By:	Phone	Fax	Date



TECHNICAL SPECIFICATIONS / ORDER FORM

PRODUCT DESCRIPTION

2/90 Sign Systems Standard Series sign, approx 24"h x 15"w

PART A

Specs: Subsurface insert w/subsurface copy

Size: 32"h x 15"w

Color: Slate 272

Copy: Line 1

Size: 1" left justified

Font: Helvetica Regular (HRC)

Color: White 208

Line 2

Size: 1/2" right justified

Font: Helvetica Regular (HRC)

Color: White 208

PART B (quantity 2)

Specs: Square corner tamper resistant end cap (SC-TREC)

Size: 24"h

Color: Slate 272

PART C (quantity 20)

Specs: U-Do insert carrier w/reverse applied vinyl copy on lens

Size: 1" h x 15" w

Color: Slate 272

Copy: Lines 3-22

Size: 1/2" left justified

Font: Helvetica Regular (HRC)

Color: White 208

Lines 30-22a

Size: 1/2" right justified

Font: Helvetica Regular (HRC)

Color: White 208

PART D

Specs: Aluminum insert


Size: 1" h x 15" w

Color: Anodized Natural 104

Visual Example for demonstration only  
Not To Scale

Floor 4 Directory	
Wing	
Line 4C (HCRS - 230)	
Copy Center	B
Diagnosis	A
Lab Services	B
Literary	B
Medical Records	C
Marital Health	C
Subspecialty Clinics	C

Technical Layout  
Scale 1/8" = 1"

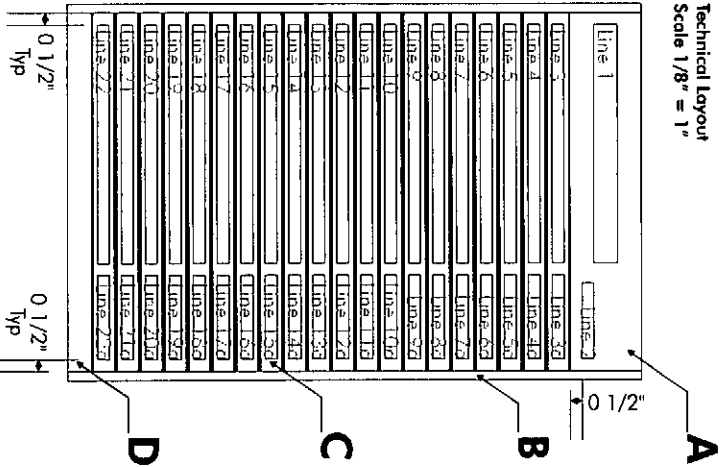

Replacement part / additional sign order form

Copy & replace original sign type drawing. Use copy as order form.	Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below	Mount Option Select mount type from Mounting Methods page if applicable Indicate letter	Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.	Order Submitted By: Phone Fax	Date	Architectural SIGN 412.563.5657 signplanning.com All Rights Reserved
--	---	---	---	-------------------------------	------	--



**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Standard Series sign, approx 34"h x 15"w

**PART A**

Specs: Subsurface insert w/subsurface copy

Size: 37h x 15"w

Color: Slate 272

Copy: Line 1

Size: 2" left justified (if left arrow) or right justified (if right arrow)

Font: NA

Color: White 208

Note: Arrows are measured tip to tail

See schedule for arrow direction which determines justification

**PART B** (quantity 2)

Specs: Square corner tamper resistant end cap (SC-TREC)

Size: 34"h

Color: Slate 272

**PART C** (quantity 15)

Specs: U-Do insert carrier w/reverse applied vinyl copy on lens

Size: 27h x 15"w

Color: Slate 272

Copy: Lines 2-16

Size: 1" left justified

Font: Helvetica Regular (HRC)

Color: White 208

**PART D**

Specs: Aluminum insert

Size: 17h x 15"w

Color: Anodized Natural 104

Visual Example for demonstration only  
Not To Scale

←
AFGE Union Office
Audiology & Speech
Blood Draw
Conference Room
Dental
ENT
Orthotics
Prosthetics
Wheelchair Clinic
Wound Care Clinic

Technical Layout  
Scale 1/8" = 1"

Line 1	Line 1
Line 2	
Line 3	
Line 4	
Line 5	
Line 6	
Line 7	
Line 8	
Line 9	
Line 10	
Line 11	
Line 12	
Line 13	
Line 14	
Line 15	
Line 16	

0 1/2" Typ

A B C D

**Replacement part / additional sign order form**

Copy & replace original sign type drawing. Use copy as order form.	Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below	Mount Option Select mount type from Mounting Methods page if applicable	Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.	Order Submitted By: Phone Fax	Date	Architectural SIGNAZZ associates 412.563.5657 signplanning.com All Rights Reserved
Entire Sign	A					

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Large Frame directory w/non-glare lens,  
approx 45"h x 45"w

**PART A**

Specs: ABS insert w/surface applied vinyl copy

Size: 67h x 15"w

Color: Slate 272

Copy: Line 1

Size: 4" centered

Font: NA

Color: White 208

**PART B**

Specs: ABS insert w/surface applied vinyl copy

Size: 67h x 30"w

Color: Slate 272

Copy: Lines 2 & 3

Size: 1 1/4" centered

Font: Helvetica Regular (HRC)

Color: White 208

**PART C** (quantity 2)

Specs: ABS insert w/applied vinyl applique

Size: 37"h x 15"w (accepting a 36 1/2"h x 14 1/2" w applique)

Color: Silver 150

Paper: Standard White vinyl

Note: PE1 insert - Directory listing developed & supplied  
by manufacturer

**PART D**

Specs: ABS insert

Size: 27h x 45w

Color: Slate 272

**PART E**

Specs: ABS insert w/applied vinyl applique

Size: 18"h x 15"w (accepting a 17 1/2"h x 14 1/2" w applique)

Color: Silver 150

Paper: Standard White vinyl

Note: PE1 insert - Key Location listing developed & supplied  
by manufacturer

**PART F**


Specs: ABS insert w/applied vinyl applique

Size: 19"h x 15"w (accepting a 18 1/2"h x 14 1/2" w applique)

Color: Silver 150

Paper: Standard White vinyl

Note: PE1 insert - Directory Map developed & supplied  
by manufacturer

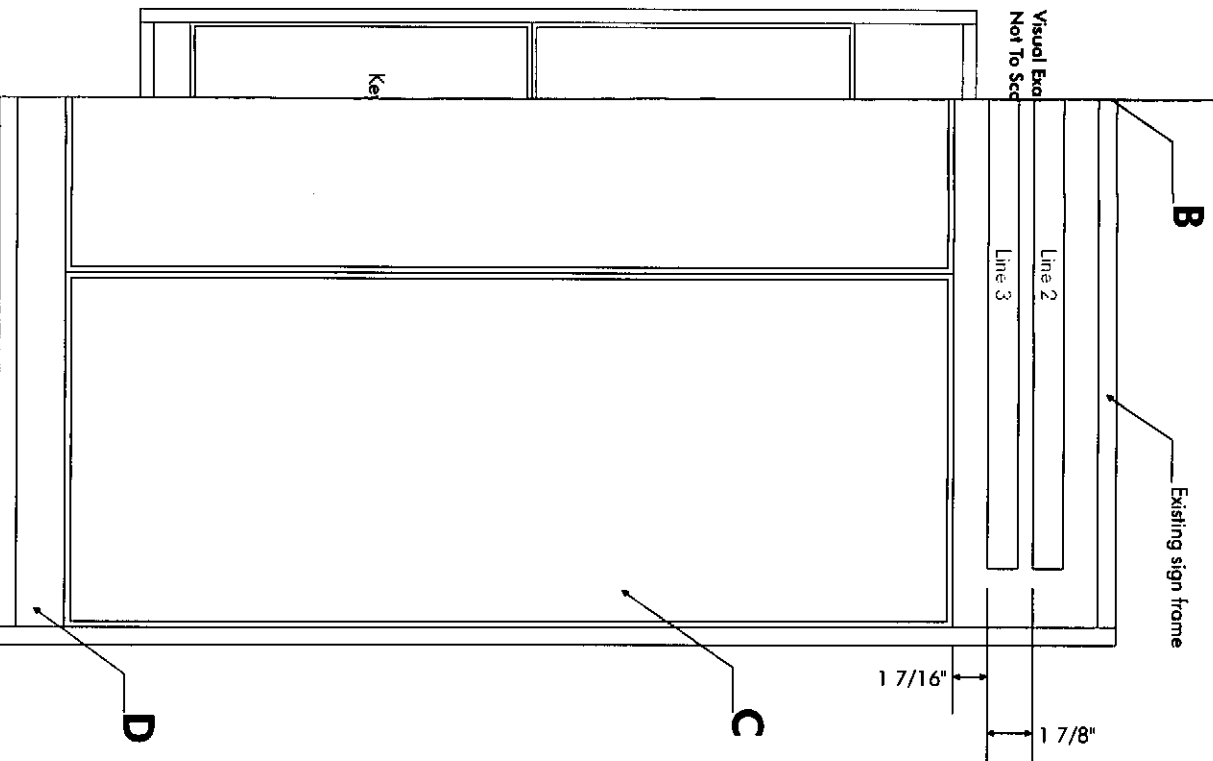

Replacement part / additional sign order form - Fox to 1

Step 1: Copy & replace original sign type drawing. Use copy as order form.

Step 2: Entire Sign(s)

Step 3: Indicate quantity of signs or part(s) Write desired # of parts or signs in corresponding box(es) below

Step 4: Mount Option Select mount type from " Mounting Methods" page of this manual Indicate letter

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**


2/90 Sign Systems Insert, 2'h x 15" w

**PART A**

Specs: Dry marker board  
Size: 2'h x 15" w  
Color: White

Visual Example for demonstration only  
Not To Scale

MB.1 insert

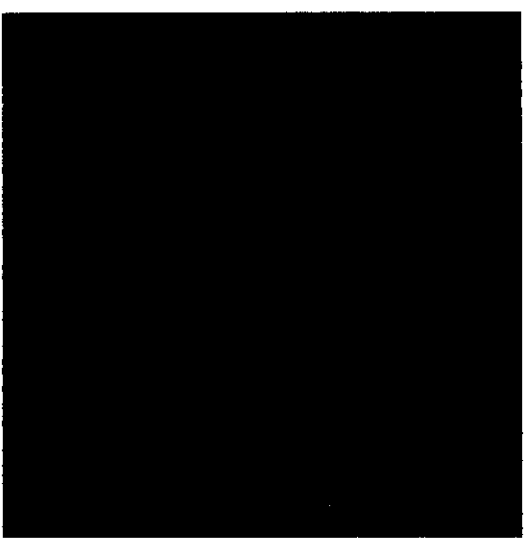

Existing sign in which MB.1 will be placed

Technical Layout  
Scale 3/8" = 1"

A

Copy & replace original sign type drawing. Use copy as order form.

Indicate quantity of signs or part(s) Write desired part letter and quantity in box(es) below

Mount Option Select mount type from Mounting Methods page if applicable Indicate letter

Indicate Text Print desired text in white rectangle(s) representing lines of text on sign above. Use proper capitalization.

Order Submitted By: Phone Fox Date

Architectural SIGNZ 412.563.5657 signplanning.com All Rights Reserved

Replacement part / additional sign order form

Entire Sign(s) A

**TECHNICAL SPECIFICATIONS / ORDER FORM**

**PRODUCT DESCRIPTION**

2/90 Sign Systems Insert, 2'h x 7"w

**PART A**

Specs: Subsurface insert w/subsurface copy

Size: 2'h x 7"w

Color: Slate 272

Copy: Line 1

Size: 1" left justified


Font: Helvetica Regular (HRC)

Color: White 208

Visual Example for demonstration only  
Not To Scale


**7A119-10**

SS.1 insert



Existing sign in which SS.1 will be placed

Technical Layout  
Scale 3/8" = 1"

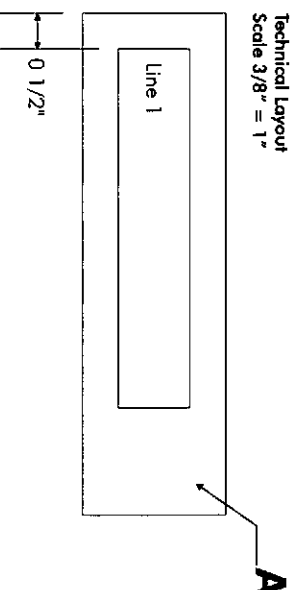

**Replacement part / additional sign order form**

Copy & replace  
original  
sign type  
drawing.  
Use copy as  
order form.

Entire Sign(s)

Indicate quantity  
of signs or part(s)  
Write desired part letter and  
quantity in box(es) below

A

Mount  
Option  
Select mount type  
from  
Mounting Methods  
page if applicable  
Indicate letter

Indicate Text  
Print desired text in  
white rectangle(s)  
representing lines of  
text on sign above.  
Use proper  
capitalization.

Order Submitted By:

Phone

Fax

Date