

IN-03.01**Interior Signs****Room Number Identification****Size**

76 mm H x 229 mm W
(3" H x 9" W)

Description & Use

Sign is to be placed on all rooms that require identification.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Etched Sign Plaque; Aluminum Top Accent Bar; End Cap

Graphic Process

Tactile room number with accompanying Braille.

Colors

Text: Refer to Color Chart.
Background & Accent Bar: Refer to Color Chart

Type Style

Refer to signage schedule




Double sided foam tape, silastic adhesive or screw.

Installation

Knob side of door, 1575 mm (63") to top of sign and 50 mm (2") over from door frame.



Recommendations

This sign is to be used for all rooms, but can also be used to identify corridors and alcoves as necessary. Do not use on exterior and stairwell doors.

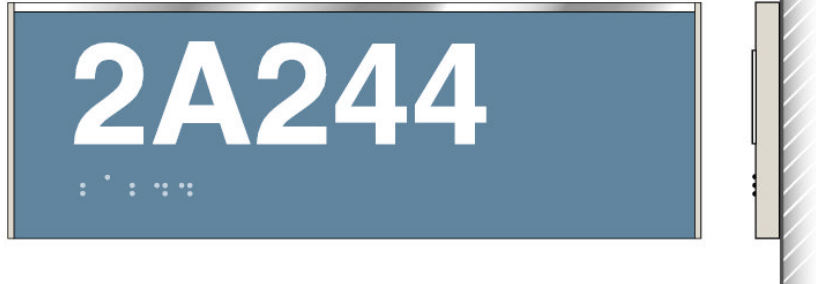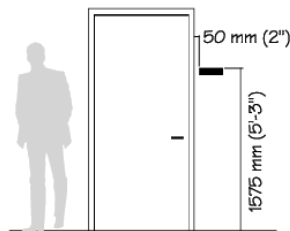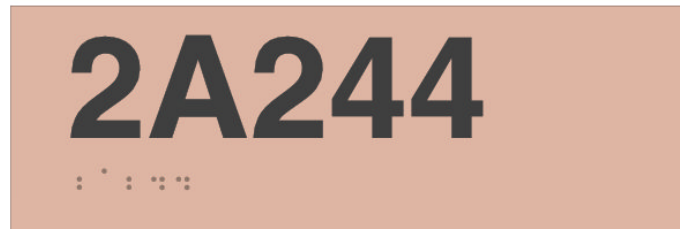**Message Layout A**

IN-03.01**Interior Signs**

Room Number Identification

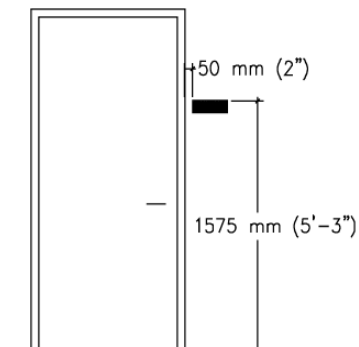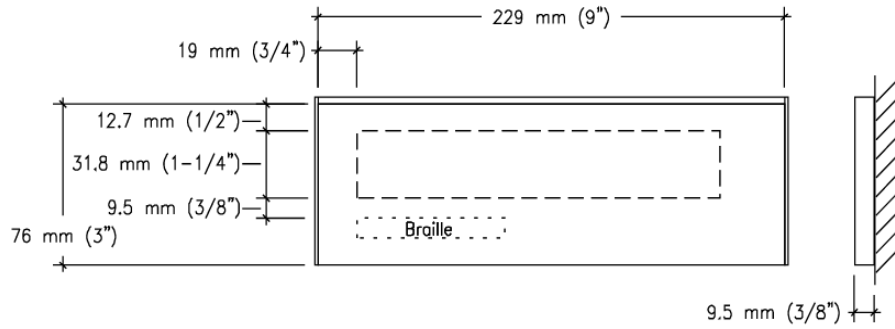

IN-01.02**Code & Life Safety Signs****Fire Equipment Identification Sign****Sign**

229 mm H x 229 mm W
(9" H x 9" W)

Description & Use

Fire Equipment Identification Sign is used to locate and identify fire equipment cabinets.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic Plaque

Graphic Process

Silk-screened.

Colors

Text & Symbol: White - T1
Background: Red - B3

Typography


Helvetica Medium

Mounting

Double sided foam tape or silastic adhesive.



Installation

In wall, 1575 mm (63") to top of sign.

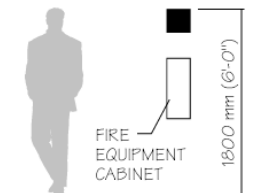


IN-01.02**Code & Life Safety Signs**

Fire Equipment Identification Sign

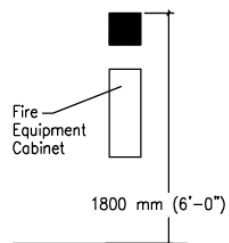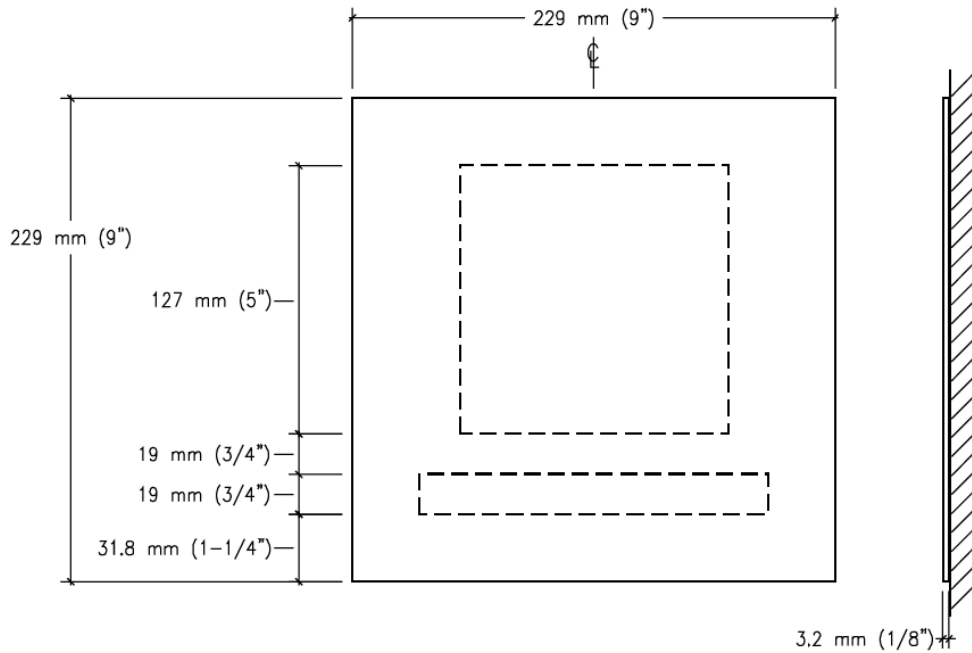

Syracuse Medical Center Ground Floor Room Sign Colors

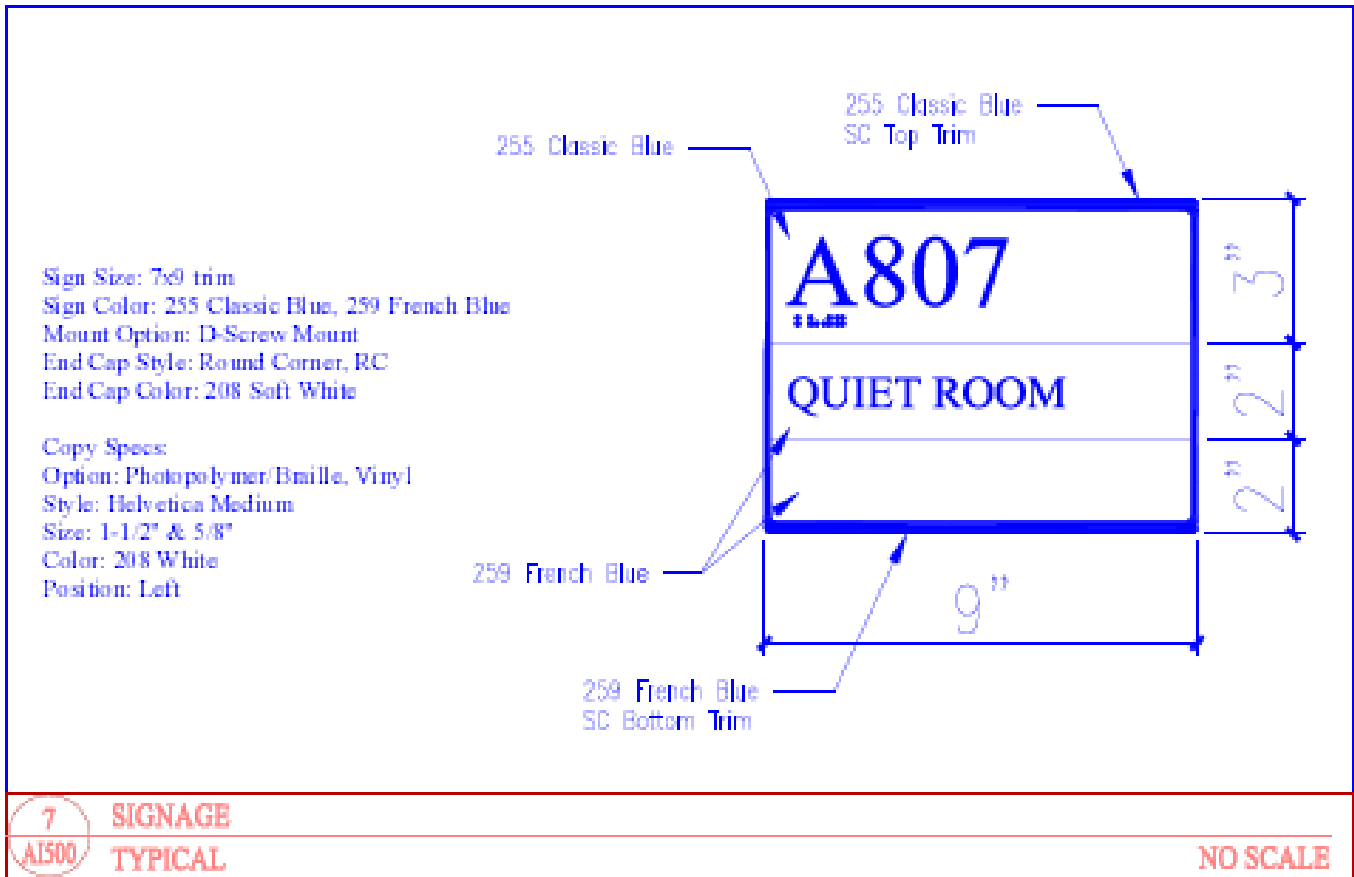

Syracuse Medical Center Building 2 Room Signs

Sign Specifications

Sign Size: 7x9 Thin

Sign Color: To Be Determined

Mount Option: Mechanical - D Screw Mount

End Cap Style: Mechanical - D Screw Mount

End Cap Color: To Be Determined

Trim Style: Sq Corner Top Trim

Trim Color: To Be Determined

Copy Specifications

Option: Photopolymer & Braille / Insert Clear Lens: UDO Vinyl Subsurface Copy

Style: HRC

Size: 1-1/4"

Color: 204 Black

Position: 3/4 Left

Insert Clear Lens: UDO Vinyl Subsurface Copy

Copy: 5/8 min HR, Upper and Lower Case

Representative Sign Only - Color as Per Specification

234A

Room Name

Staff Name

3"

Accent Strip

103 Anodized Black

2"

2"

9"

(2) Magentic Window Inserts
Black UDO Copy

*some printers may distort scale size,
all scaling is correctly proportionate.

Drawing for illustration & layout purposes only.

appvd by:

scale: 50%*

file: lt/linedraw/syraVA1

drawn by: bam

2/90

Sign Systems

Grand Rapids, MI 49512

800-777-4310

Date:

..


Project:

Syracuse VA

7x9T Sign Type

Building 2

Rome CBOC Room Sign

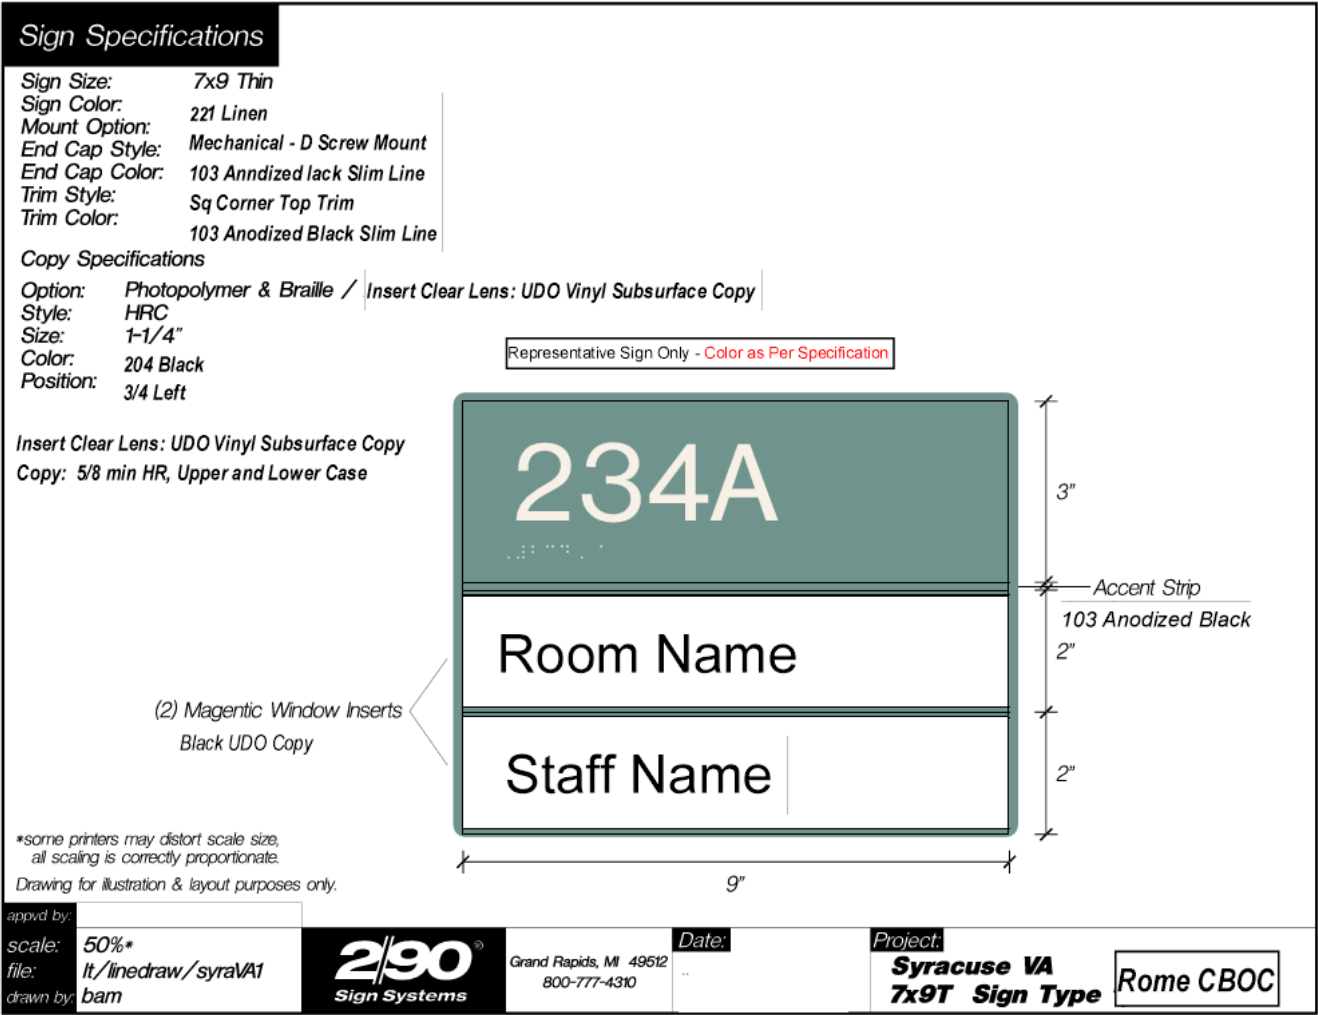

Colors

IN-01.05**Code & Life Safety Signs****Fire Door Sign****Sign**

229 mm H x 229 mm W
(9" H x 9" W)

Description & Use

Fire Door Sign is used to identify a fire door. Exception: doors held open by automatic devices.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic Plaque

Graphic Process

Silk-screened

Colors

Text: White - T1
Background: Red - B3

Typography


Helvetica Medium

Mounting

Double sided foam tape or silastic adhesive.



Installation

On door, centered, 1575 mm (63") to top of sign.

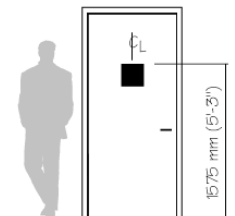

IN-01.05**Code & Life Safety Signs**

Fire Door Sign

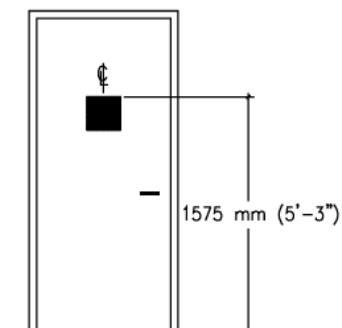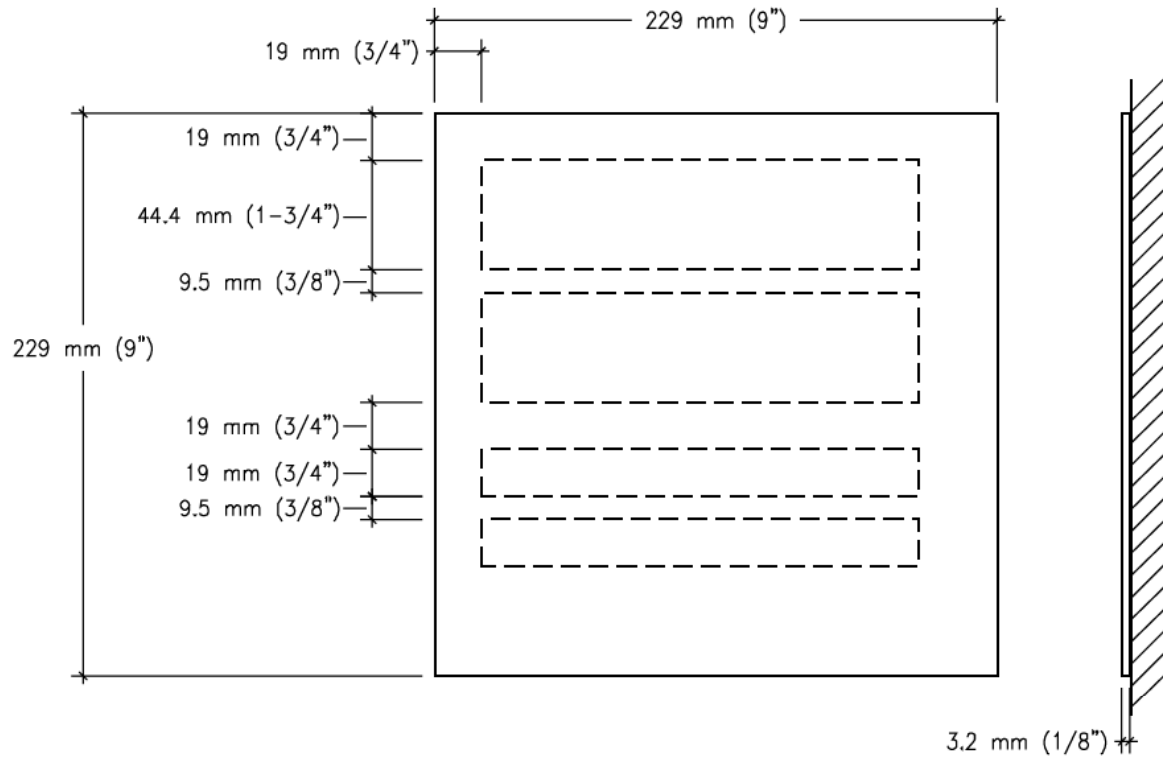

IN-01.10**Code & Life Safety Signs**

Stair Identification Sign

Size

229 mm H x 229 mm W
(9" H x 9" W)

Description & Use

To identify stairwell doors that are fire exits.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Etched sign face laminated to acrylic backing plaque.

Graphic Process

Tactile text with accompanying Braille.

Colors

Text: Refer to Color Chart.
Background: Refer to Color Chart.

Typography



Helvetica Medium
Grade 2 Braille

Mounting

Double sided foam tape or silastic adhesive.



Installation

Knob side of door, 1575 mm (63") to top of sign and 50 mm (2") over from door frame.

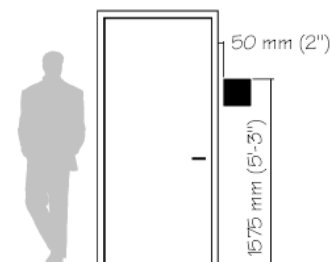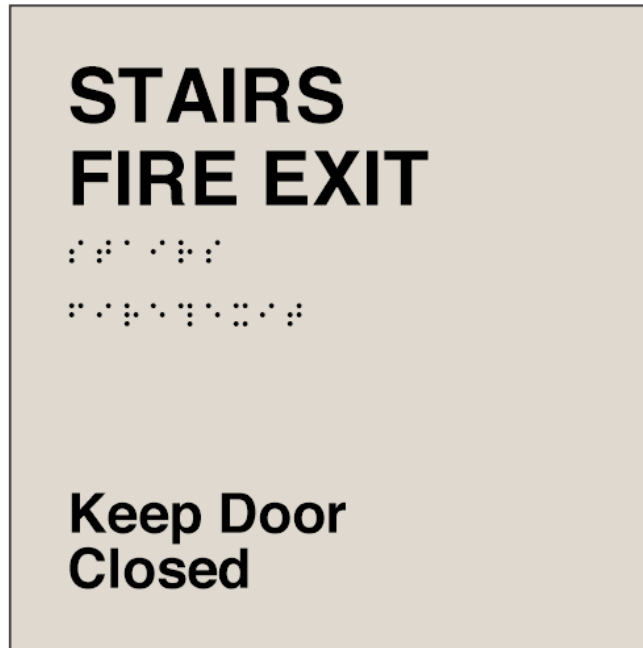

IN-01.10**Code & Life Safety Signs**

Stair Identification Sign

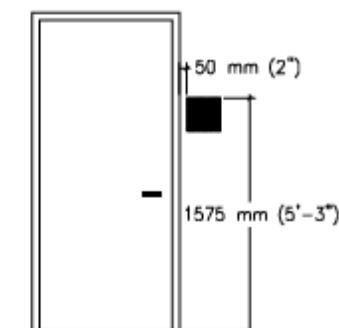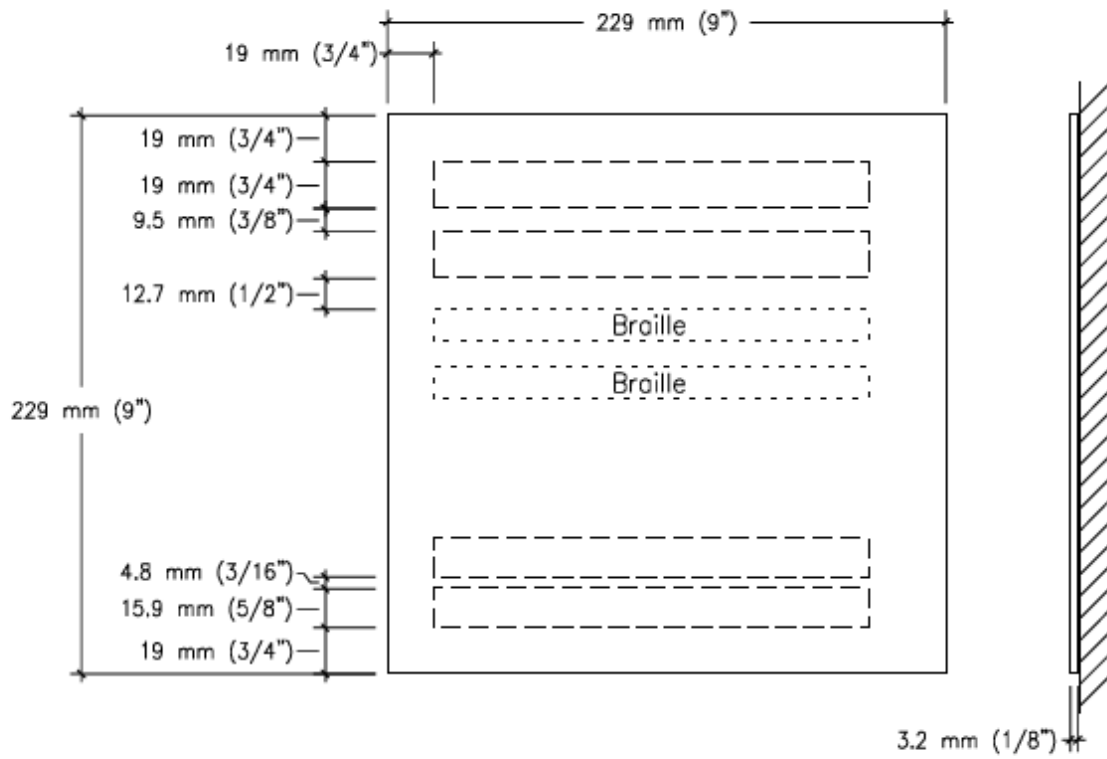

IN-09.01-7

Interior Signs

Pictogram & Symbol Signs

Size

229 mm H x 229 mm W
(9" H x 9" W)

Description & Use

Use these signs to inform with a symbol as well as text.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Etched sign plaque face laminated to acrylic backing plaque.

Graphic Process

Tactile symbol and text with accompanying Braille.

Colors

Refer to sign schedule

Typography

Helvetica Medium
Grade 2 Braille

Mounting

Double sided foam tape or silastic adhesive.

Installation

On wall or door 1575 mm (63") to top of sign and on door, center.

Recommendations

These signs are for use on restrooms or stair doors or under a Type IN-03 sign.



IN-09.01



IN-09.02



IN-09.03



IN-09.04




IN-09.05



IN-09.06




IN-09.07

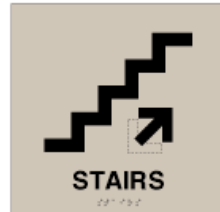

IN-03




IN-09.06

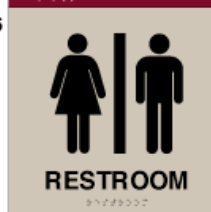

IN-09.01-7

Interior Signs

Pictogram & Symbol Signs

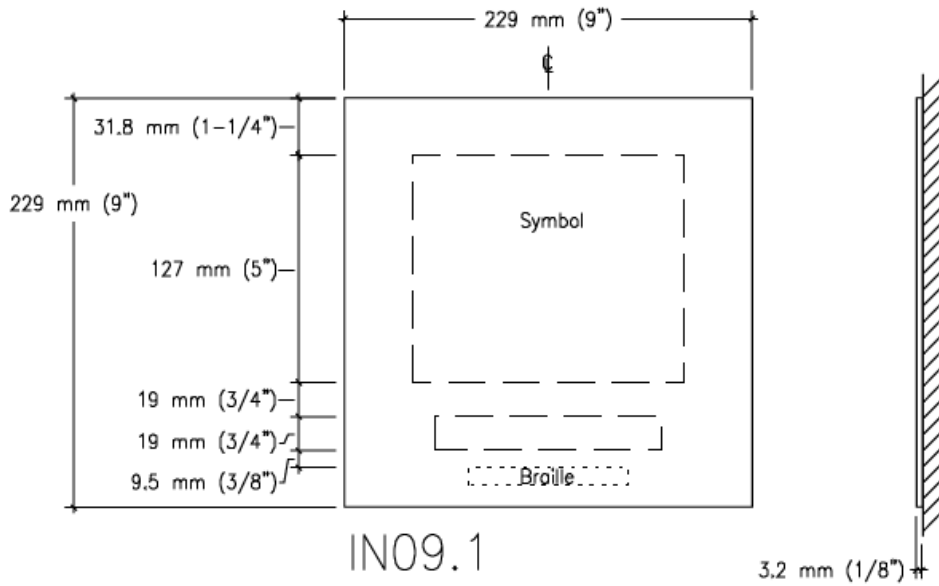

IN09.1

IN09.2

IN09.3


IN09.4

IN09.5

IN09.6

IN09.7


ARROW: Refer to standards for arrow positioning relative to text.

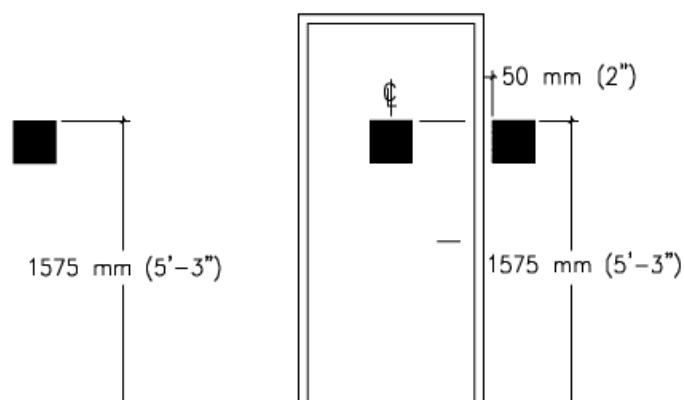

IN-10.01-6

Interior Signs

Sign Frame

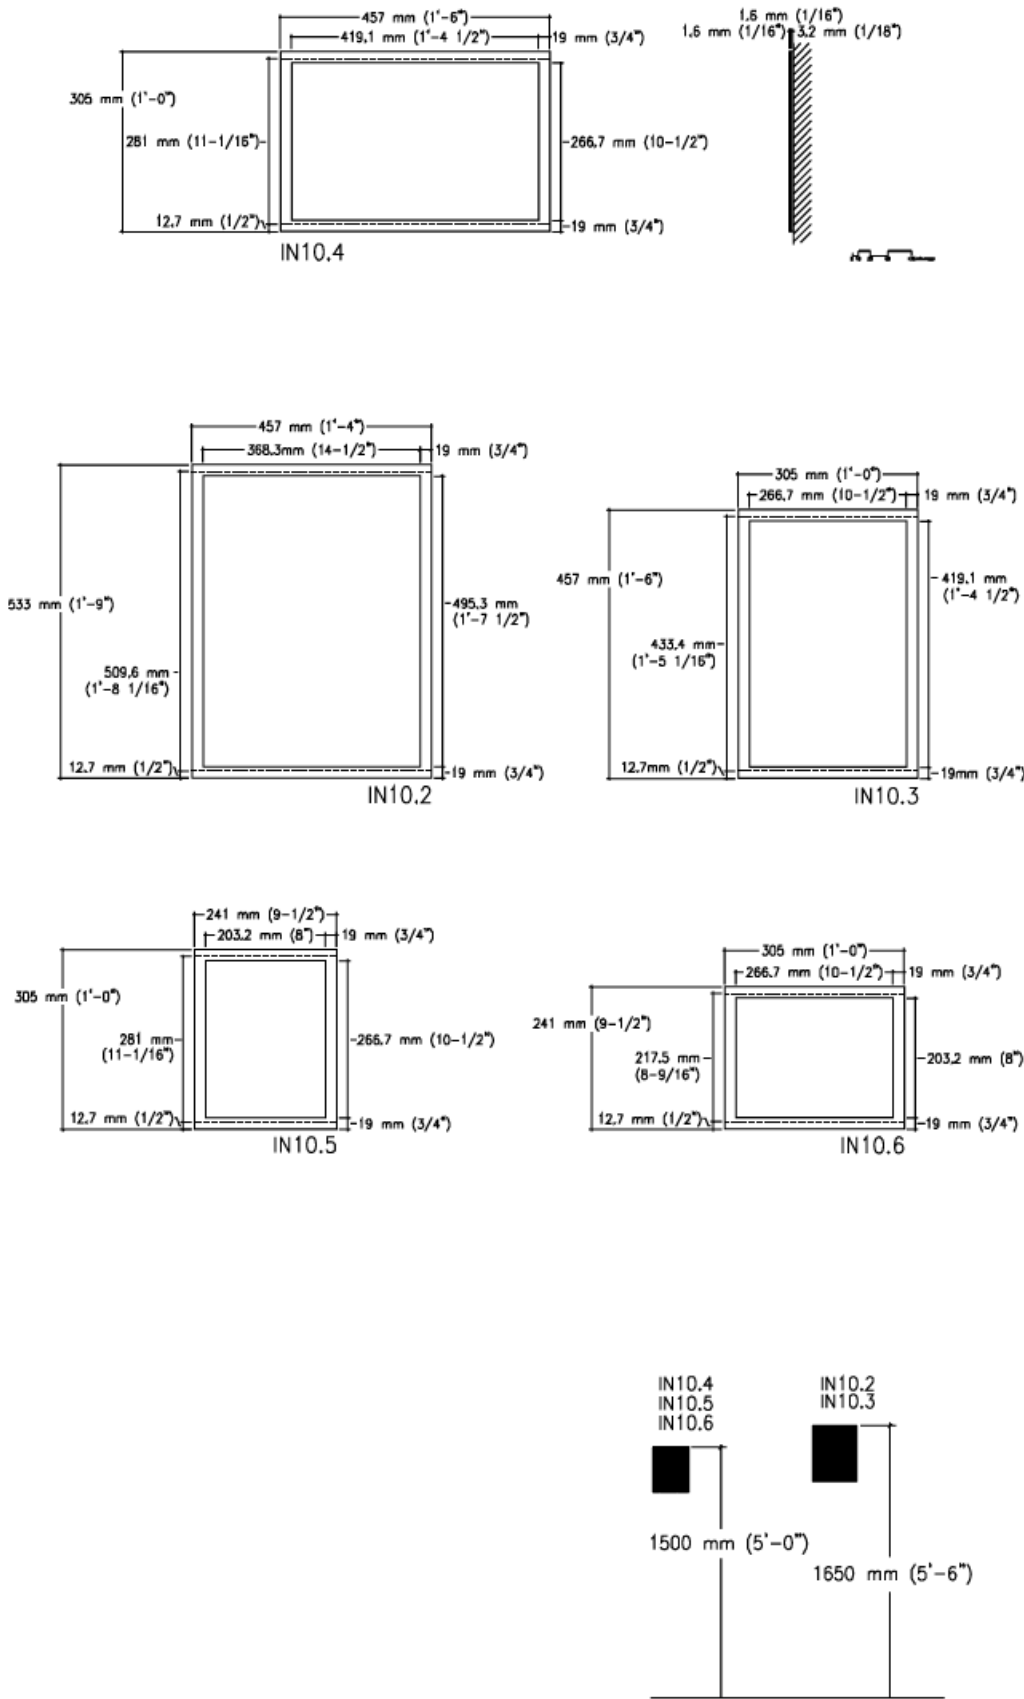

IN-11.01-4**Interior Signs**

Informational / Instructional Sign

Size

IN-11.01
229 mm x 229 mm
(9" x 9")

IN-11.02
381 mm x 381 mm
(15" x 15")

IN-11.03
508 mm x 508 mm
(20" x 20")

IN-11.04
152 mm H x 152 mm W
(6" H x 6" W)

Description & Use

Use this sign to communicate miscellaneous information.

Message Configuration


(Refer to layout drawing for lettering sizes and dimensions)
Layouts relate to the size and importance of message.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

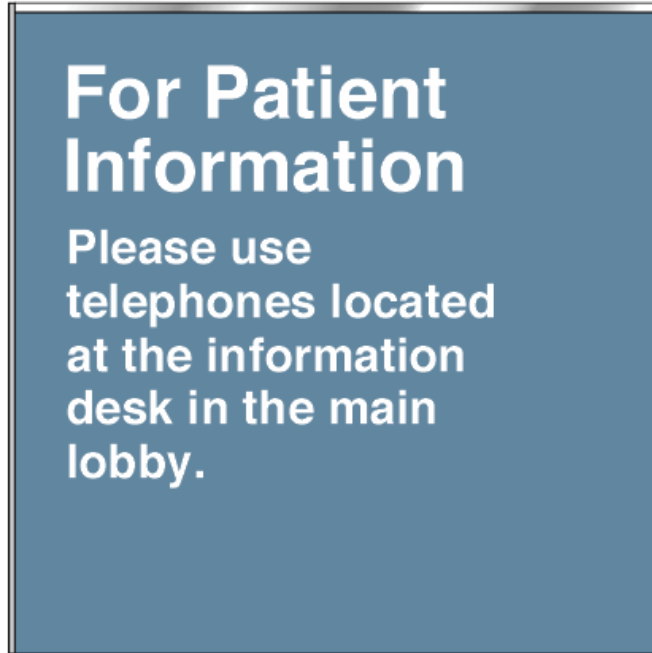**Colors:**

Refer to sign schedule

Typography

Helvetica Medium

Mounting

Double sided foam tape, silastic adhesive or screw.

Installation

On wall

Recommendations

These signs are for use to present brief general messages. Text should be limited to as few words as possible. Long messages are generally not read.

IN-11.01**For Your Information**

Ojnt nateotj nathile
akindfa maj roepa.
Halweo nathia aneio
ajoja marap naohr
asooow.

IN-11.02**For Your Information**

Fraoerje nongini nongini usdhoi
aoligontio ri n. Goozhr dohoenn dn
jra'opwey o'oon au ef esaj ej kanti
ohaoitain. HAoohel feitruado
sijji. Hajkseh ioawul abshioa.
IA howithi aultau aliof a linia
zoilwo abwirougs. Kajwih kji go
alhwaoho. Jlaofn eijaj amwirja
awnap amkorjopa.



IN-11.03**Be Informed**

Lakeia nathel naoliwanowh amwirj ajshr
ajvgricoa. Bakwoa lehaad ksa waw
ejaj naeowith eian. Amokij alihacilteao fria
aliofioa nathie ale alieh. Oaoh anbaui nath
aliohacih aliw awioch e rapont alioa anioa
awhaich hai awdu awiochrohta.

LA symbol is a registered trademark of the American Hospital Association. All other trademarks are the property of their respective owners. © 2000 American Hospital Association. All rights reserved.

IN-11.04**For Your Information**

Ojnt nateotj nathile
akindfa maj roepa.
Halweo nathia aneio
ajoja marap naohr
asooow.

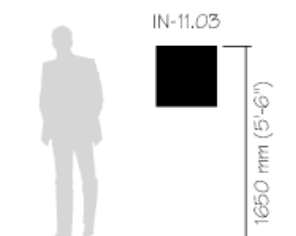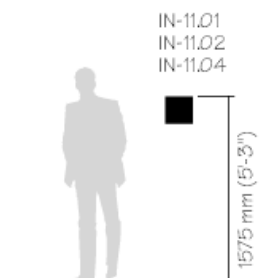

APPENDIX A

IN-02.01**Mandatory Policy Signs****Consent to Inspection****Size**

Sign Face:
152 mm H x 508 mm W
(6" H x 20" W)

Description

Consent to inspection sign is required to be placed at the entrance of a building.

Message Configuration

(Refer to message layout drawing for dimensions.)

Sign Components

Acrylic Plaque

Graphic Process

Silk-screened

Colors

Refer to sign schedule

Typography

Helvetica Medium

Mounting


Double-sided foam tape or silastic adhesive.

Installation

Sign can be coordinated to be placed with other policy signs, IN02.2 and IN02.3 that are required at the entrance.

Introduction of weapons, unauthorized drugs and alcoholic beverages on this property is prohibited (Title 18 USC Section 930 and Title 38 CFR Section 1.218) Persons entering this property consent to an inspection of all packages, luggage and containers in their possession when arriving. Refusal of content to search is basis for denial of admittance. Violators are subject to arrest and prosecution. Refusal of consent to an authorized search by medical personnel is basis for discharge.

Introduction of weapons, unauthorized drugs and alcoholic beverages on this property is prohibited (Title 18 USC Section 930 and Title 38 CFR Section 1.218) Persons entering this property consent to an inspection of all packages, luggage and containers in their possession when arriving. Refusal of content to search is basis for denial of admittance. Violators are subject to arrest and prosecution. Refusal of consent to an authorized search by medical personnel is basis for discharge.

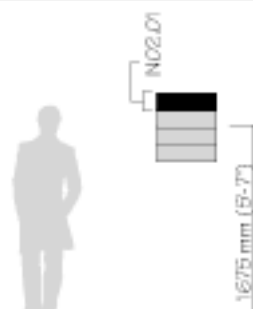

IN-02.01**Mandatory Policy Signs****Consent to Inspection****Size**

Sign Face:

152 mm H x 508 mm W
(6" H x 20" W)**Description**

Consent to inspection sign is required to be placed at the entrance of a building.

Message Configuration

(Refer to message layout drawing for dimensions.)

Sign Components

Acrylic Plaque

Graphic Process

Silk-screened

Colors

Refer to sign schedule

Typography

Helvetica Medium

Mounting


Double-sided foam tape or silastic adhesive.

Installation

Sign can be coordinated to be placed with other policy signs, IN02.2 and IN02.3 that are required at the entrance.

Introduction of weapons, unauthorized drugs and alcoholic beverages on this property is prohibited (Title 18 USC Section 930 and Title 38 CFR Section 1.218) Persons entering this property consent to an inspection of all packages, luggage and containers in their possession when arriving. Refusal of consent to search is basis for denial of admittance. Violators are subject to arrest and prosecution. Refusal of consent to an authorized search by medical personnel is basis for discharge.


Introduction of weapons, unauthorized drugs and alcoholic beverages on this property is prohibited (Title 18 USC Section 930 and Title 38 CFR Section 1.218) Persons entering this property consent to an inspection of all packages, luggage and containers in their possession when arriving. Refusal of consent to search is basis for denial of admittance. Violators are subject to arrest and prosecution. Refusal of consent to an authorized search by medical personnel is basis for discharge.

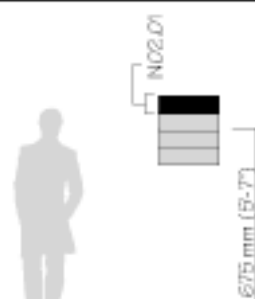

IN-02.01

Mandatory Policy Signs

Consent to Inspection

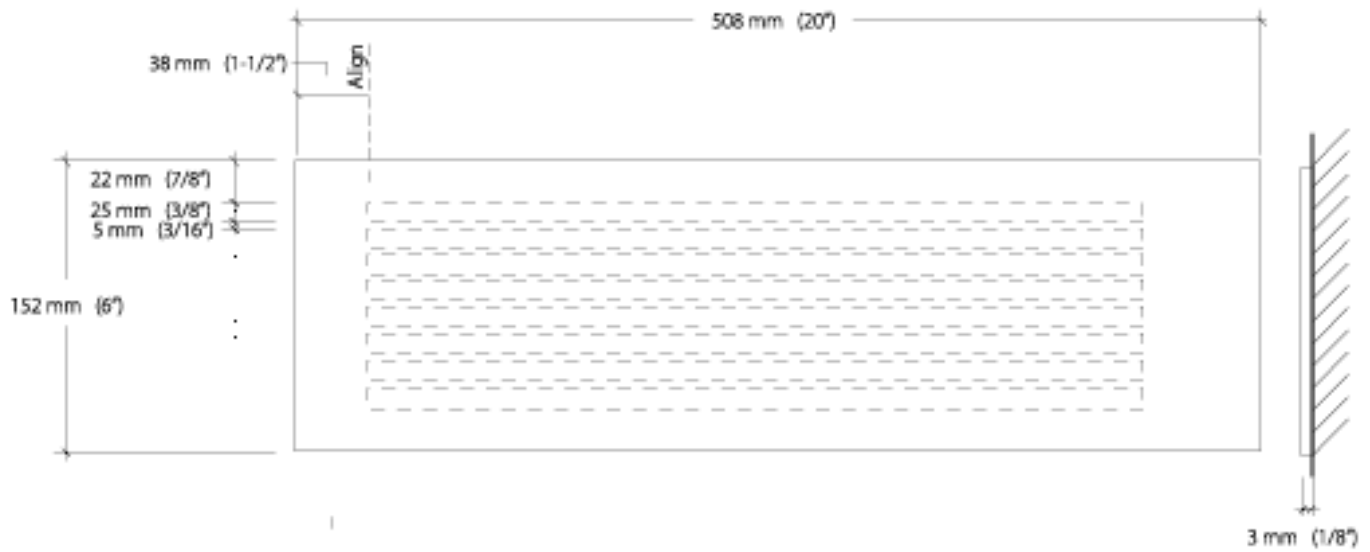

IN-02.02**Mandatory Policy Signs****No Smoking****Size**

Sign Face:
152 mm H x 508 mm W
(6" H x 20" W)

Description

No smoking sign is required to be placed at the entrance of a building.

Message Configuration

(Refer to message layout drawing for dimensions.)

Sign Components

Acrylic Plaque

Graphic Process

Silk-screened

Colors

Refer to sign schedule

Typography



Helvetica Medium

Mounting

Double-sided foam tape or silastic adhesive.

Installation


Sign can be coordinated to be placed with other policy signs, IN02.1 and IN02.3 that are required at the entrance.

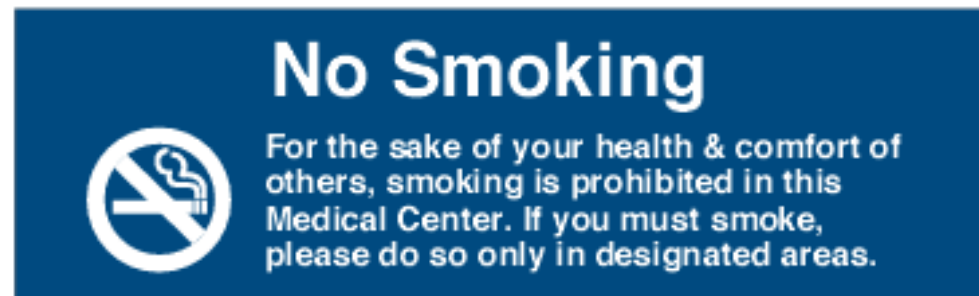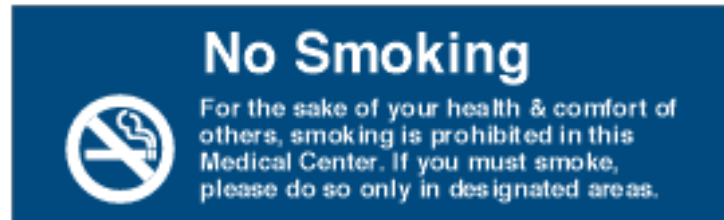

IN-02.02

Mandatory Policy Signs

No Smoking

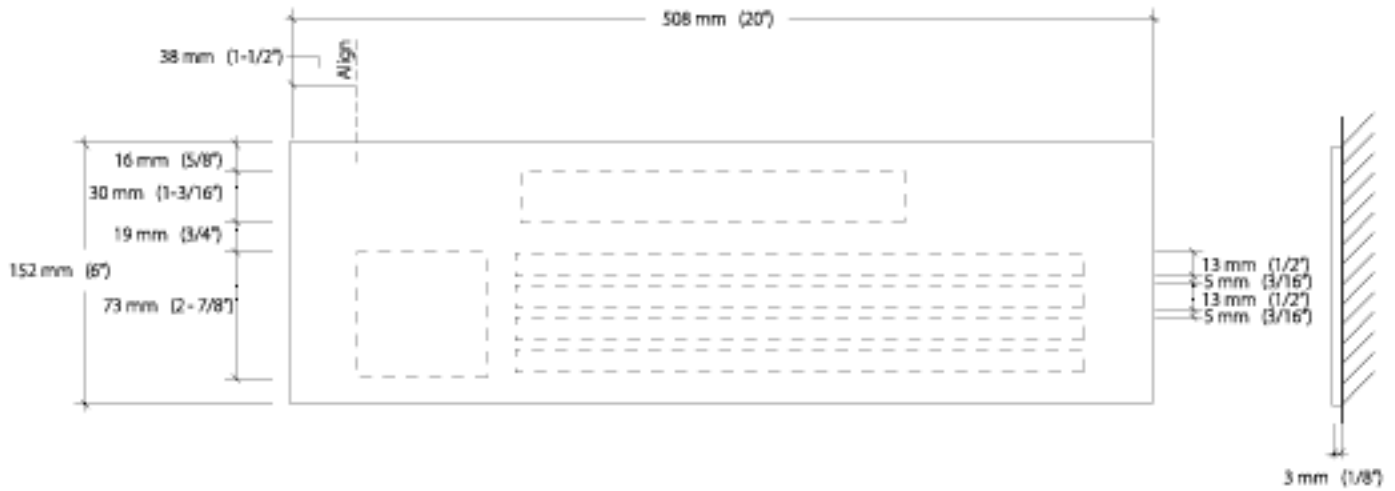

IN-02.03**Mandatory Policy Signs****No Weapons Permitted****Size**

Sign Face:
152 mm H x 508 mm W
(6" H x 20" W)

Description

No weapons sign is required to be placed at the entrance of a building.

Message Configuration

(Refer to message layout drawing for dimensions.)

Sign Components

Acrylic Plaque

Graphic Process

Silk-screened

Colors

Refer to sign schedule

Typography

Helvetica Medium

Mounting

Double-sided foam tape or silastic adhesive.

Installation

Sign can be coordinated to be placed with other policy signs, IN02.1 and IN02.2 that are required at the entrance.

Whoever knowingly possesses or causes the presence of a firearm or other dangerous weapon on the grounds or buildings of this facility, or attempts to do so, is subject to fine or imprisonment of not more than one year, or both, 18 U.S.C. Section 930a. Whoever intends that a firearm or other dangerous weapon be used in the commission of a crime and knowingly possesses or causes the presence of a firearm or other dangerous weapon on the grounds or buildings of this facility, or attempts to do so, is subject to fine or imprisonment of not more than five years, or both, 18 U.S.C. Section 930b.


Whoever knowingly possesses or causes the presence of a firearm or other dangerous weapon on the grounds or buildings of this facility, or attempts to do so, is subject to fine or imprisonment of not more than one year, or both, 18 U.S.C. Section 930a. Whoever intends that a firearm or other dangerous weapon be used in the commission of a crime and knowingly possesses or causes the presence of a firearm or other dangerous weapon on the grounds or buildings of this facility, or attempts to do so, is subject to fine or imprisonment of not more than five years, or both, 18 U.S.C. Section 930b.



IN-02.03

Mandatory Policy Signs

No Weapons Permitted

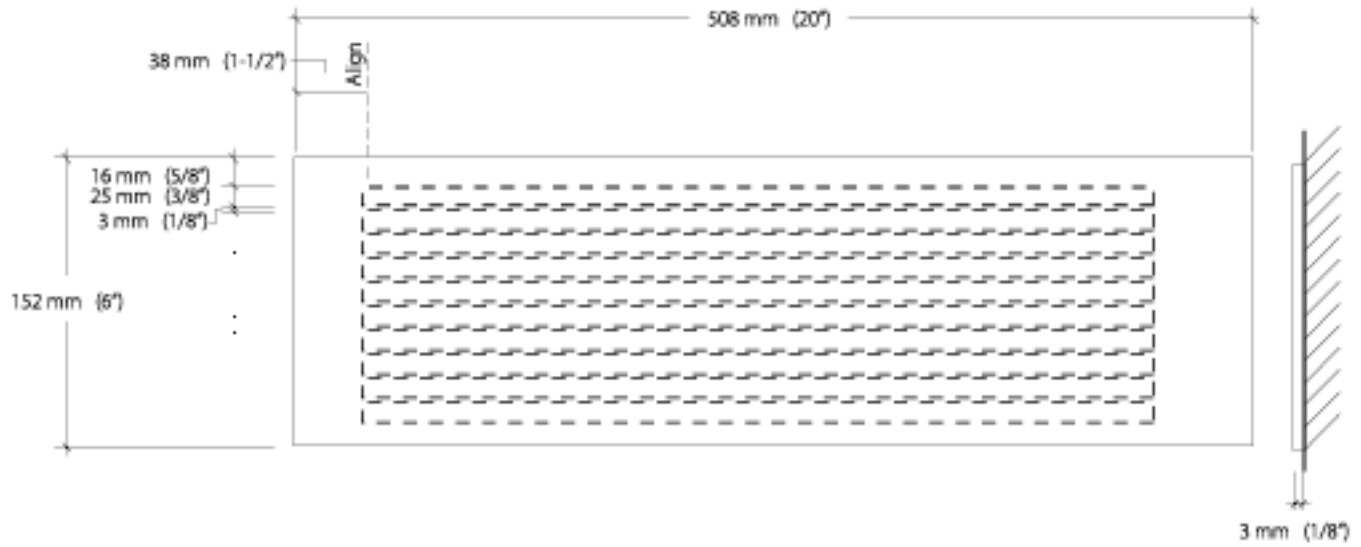

IN-08.01-4

Interior Signs

Prohibit, Instructional & Control Signs

Size

229 mm H x 229 mm W
(9" H x 9" W)

Description & Use

Use these signs to inform in a bold manner.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic plaque.

Graphic Process

Silk-screened or surface applied vinyl.

Colors

Text: Refer to sign schedule Symbol:

Red (OSHA) pantone 1797U and White.

Background: Refer to sign schedule

Typography

Helvetica Medium

Mounting

Double sided foam tape or silastic adhesive.

Installation

On wall or door 1575 mm (63") to top of sign and on door, center.

Recommendations


This sign is for use when a strong communication of information is necessary. IN08.4 should be used carefully as it may have a negative reaction on the part of patients and visitors.



IN-08.01





IN-08.02

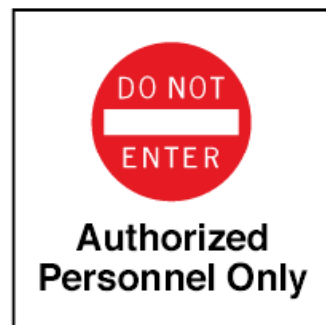

IN-08.03








IN-08.04

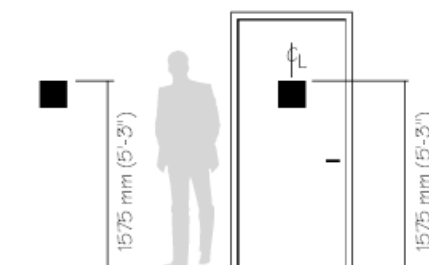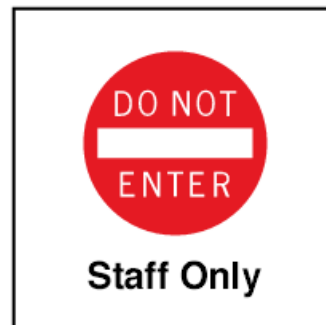

IN-08.01-4**Interior Signs**

Prohibit, Instructional & Control Signs

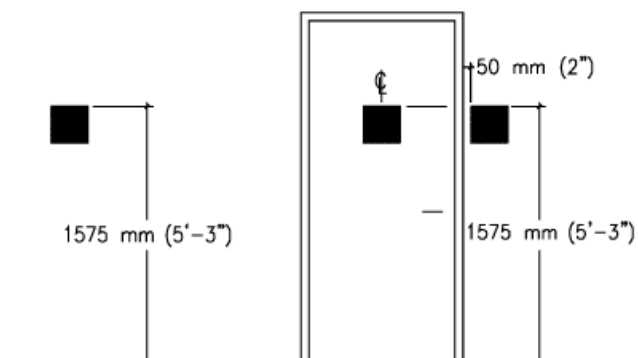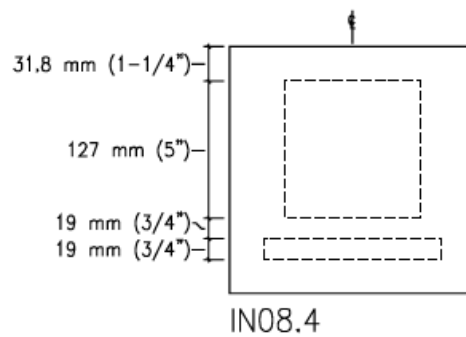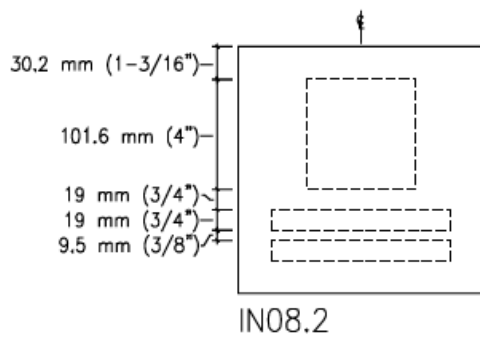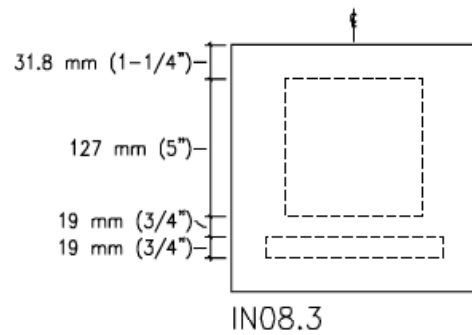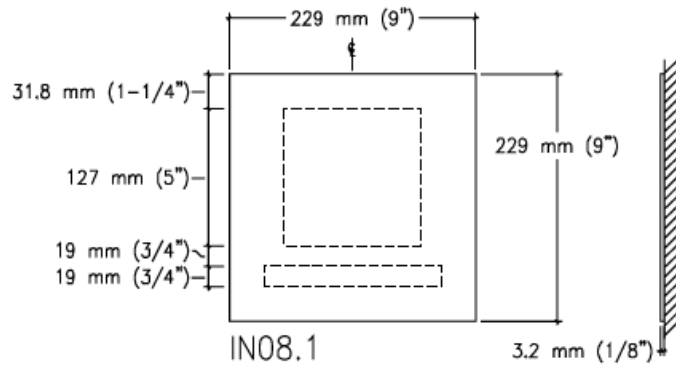


IN-15.01-4**Interior Signs****Ceiling Mounted Directional Sign****Size**

IN-15.01
152 mm x 1016 mm
(6" x 40")

IN-15.02
305 mm x 1016 mm
(12" x 40")

IN-15.03
457 mm x 1016 mm
(18" x 40")

IN-15.04
305 mm x 1016 mm
(12" x 40")

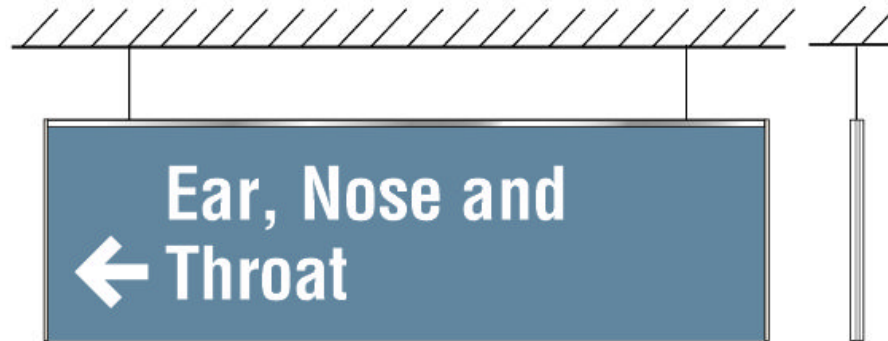**Description & Use**

Use this sign for directional information that needs to be communicated overhead. Sign is double sided and both sides can be used for messages.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

Refer to sign schedule

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting

Braided stainless steel wire or rod.
Sign must not be attached directly to "T Grid" or lift out ceiling tile.

Installation

From the ceiling.

Recommendations

This sign is for use in corridors to direct patients and public through the building. Because of required letter height there is a limit to the length of messages and limited number of messages.

IN-15.01

↑ Canteen

IN-15.02


↑ Canteen
← Spinal Rehab

IN-15.03

↑ Emergency
← Spinal Rehab
← Canteen

IN-15.04






← Outpatient
Registration

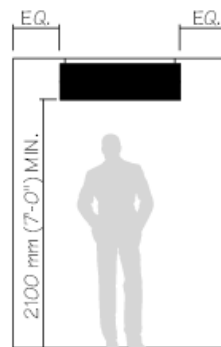

IN-15.01-4

Interior Signs

Ceiling Mounted Directional Sign

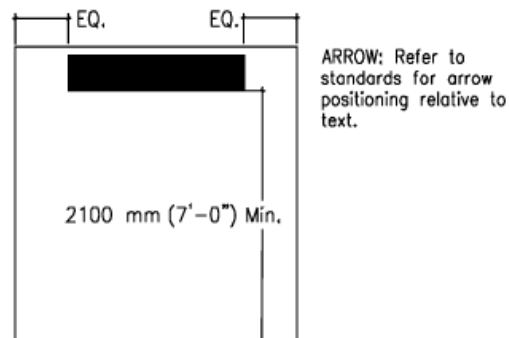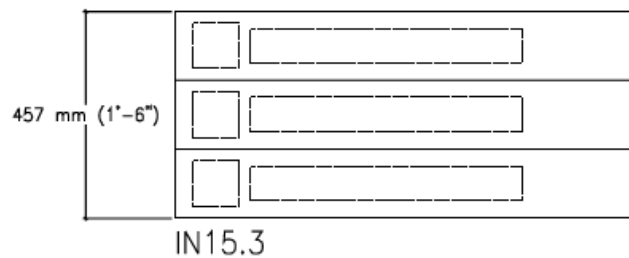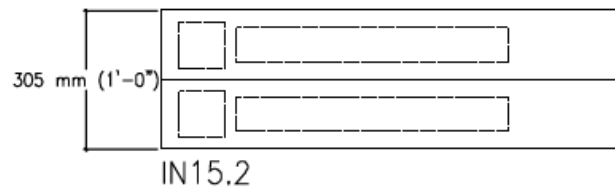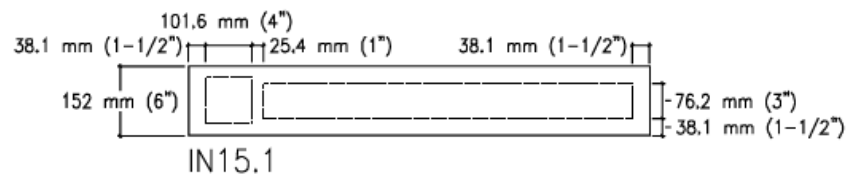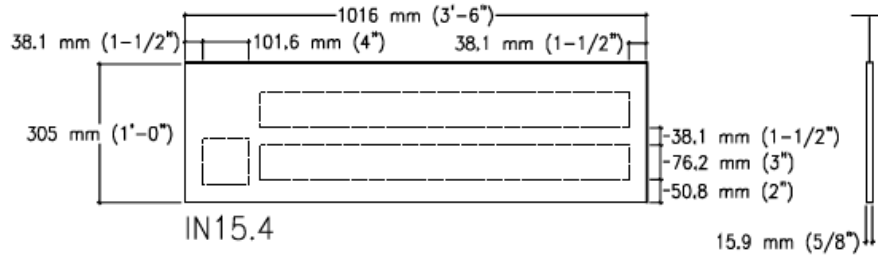


IN-15.09-12**Interior Signs****Soffit Mounted Directional Sign****Size**

IN-15.09
152 mm x 1016 mm
(6" x 40")

IN-15.10
305 mm x 1016 mm
(12" x 40")

IN-15.11
457 mm x 1016 mm
(18" x 40")

IN-15.12
305 mm x 1016 mm
(12" x 40")

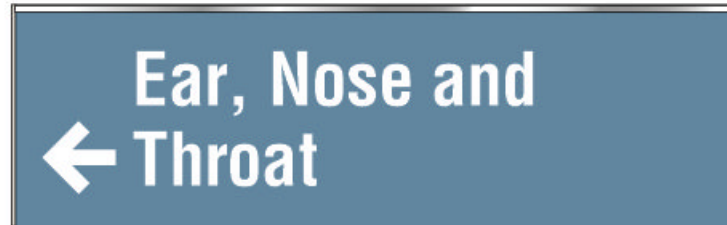**Description & Use**

Use this sign for directional information that needs to be communicated overhead.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

Refer to sign schedule

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting

Double sided foam tape, silastic adhesive or screw.

Installation

On soffits above doors, alcoves and counters.

Recommendations

This sign is for use in corridors to direct patients and public through the building. Because of required letter height there is a limit to the length of messages and limited number of messages.

IN-15.09

↑ Canteen

IN-15.10


↑ Canteen
← Spinal Rehab

IN-15.11

↑ Emergency
← Spinal Rehab
← Canteen





IN-15.12

← Outpatient
Registration

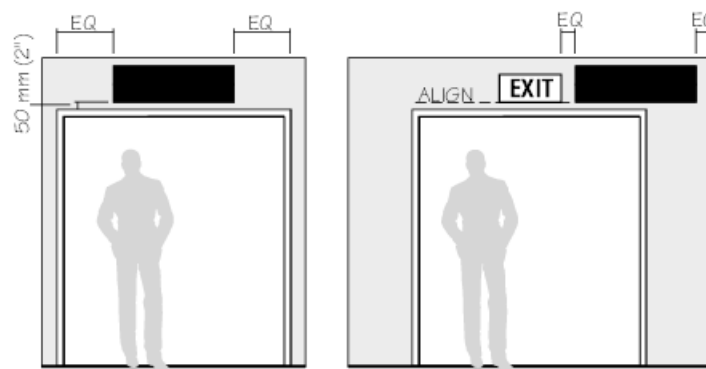


IN-15.09-12 Interior Signs

Soffit Mounted Directional Sign

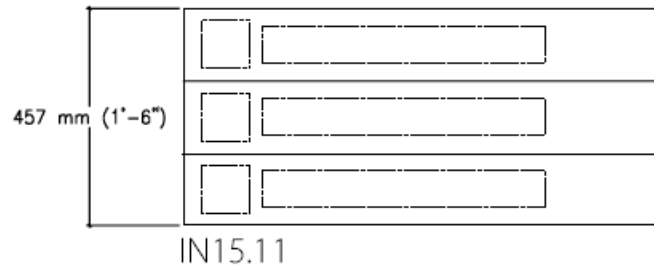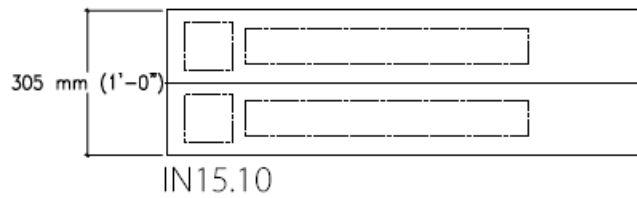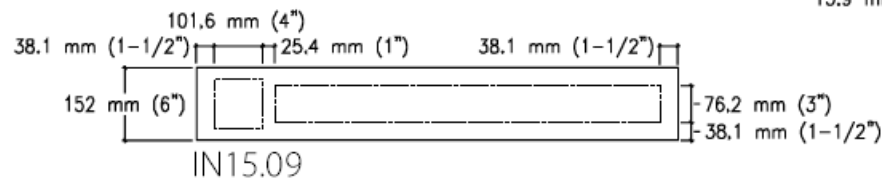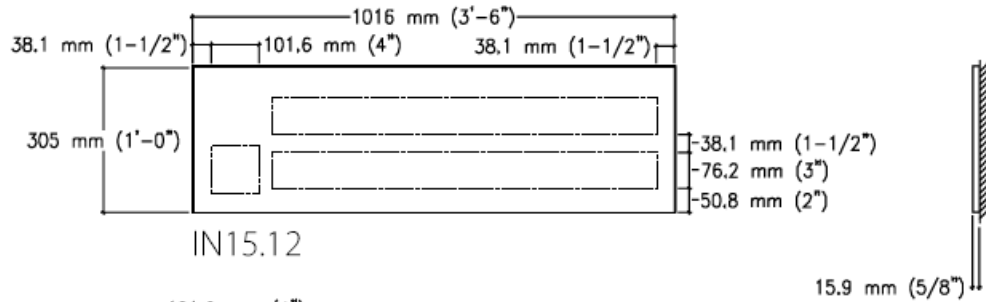

ARROW: Refer to standards for arrow positioning relative to text.

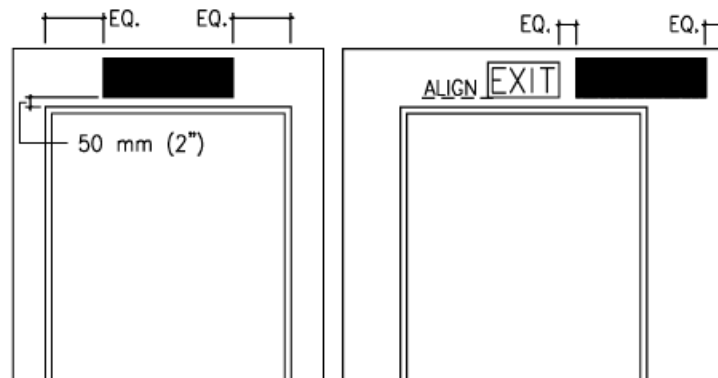

IN-15.05-8**Interior Signs****Ceiling Mounted Directional Sign****Size**

IN-15.05
152 mm x 2033 mm
(6" x 80")

IN-15.06
305 mm x 2033 mm
(12" x 80")

IN-15.07
457 mm x 2033 mm
(18" x 80")

IN-15.08
305 mm x 2033 mm
(12" x 80")

Description & Use

Use this sign for directional information that needs to be communicated overhead. Sign is double sided and both sides can be used for messages.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

Refer to sign schedule

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting




Braided stainless steel wire or rod.
Sign must not be attached directly to "T Grid" or lift out ceiling tile.

Installation

From the ceiling.

Recommendations






This sign is for use in corridors to direct patients and public through the building. Because of required letter height there is a limit to the length of messages and limited number of messages.

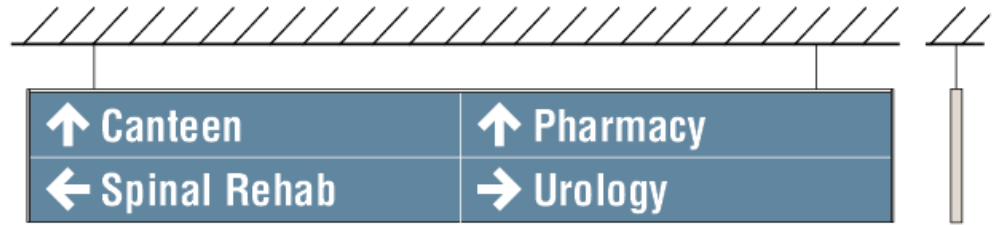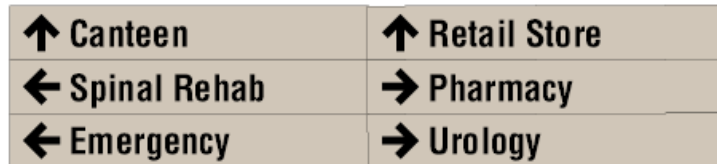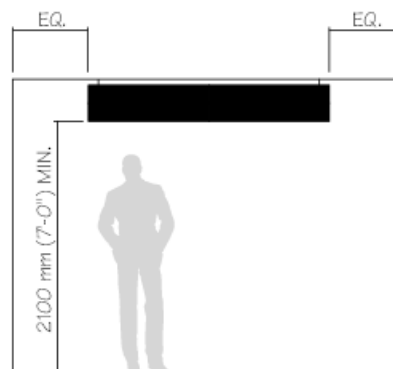**IN-15.05****IN-15.06****IN-15.07****IN-15.08**

IN-15.05-8

Interior Signs

Ceiling Mounted Directional Sign

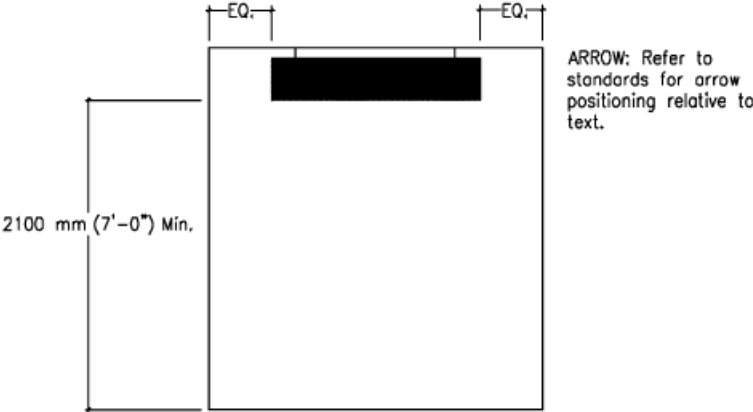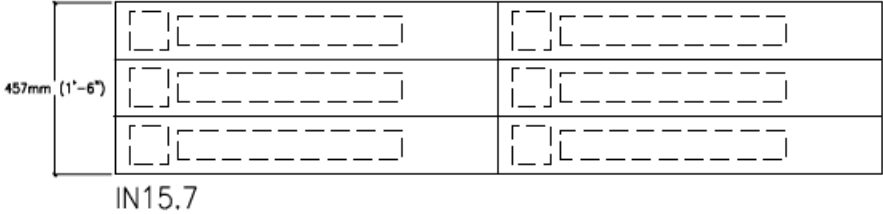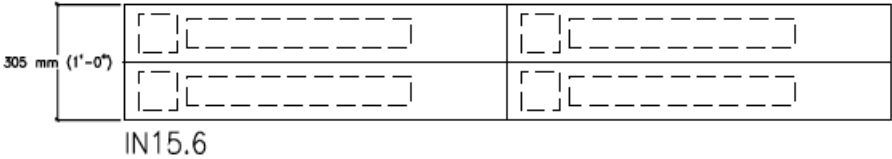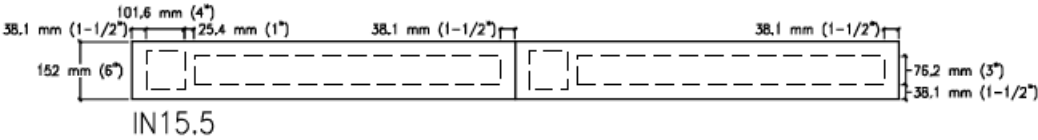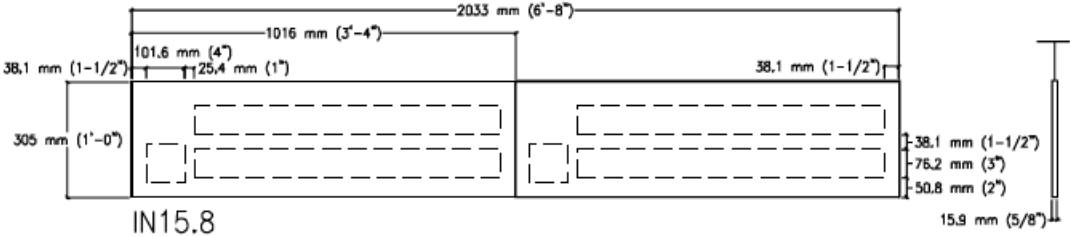

IN-14.01-5

Interior Signs

Wall Directional Sign

Size

14.01
10 mm x 508 mm
(4" x 20")

14.02
12 mm x 508 mm
(5" x 20")

14.03
14 mm x 508 mm
(5" x 20")

14.04
17 mm x 508 mm
(7" x 20")

14.05
19 mm x 508 mm
(8" x 20")

Sign Use & Application

Use this sign for directional information.

Message Configuration

Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Aluminum Rail Back; Copy Panel; Top Mount Bar; End Caps

Graphic Process

Surface applied vinyl

Colors

Arrows & Text: Refer to Color Chart.

Background & Accent Bar: Refer to Color Chart

Typography

Helvetica Medium

Mounting


Double-sided foam tape, silastic adhesive or screw.

Installation


On wall.

Recommendations


This sign is for use in corridors to direct patients and public through building.

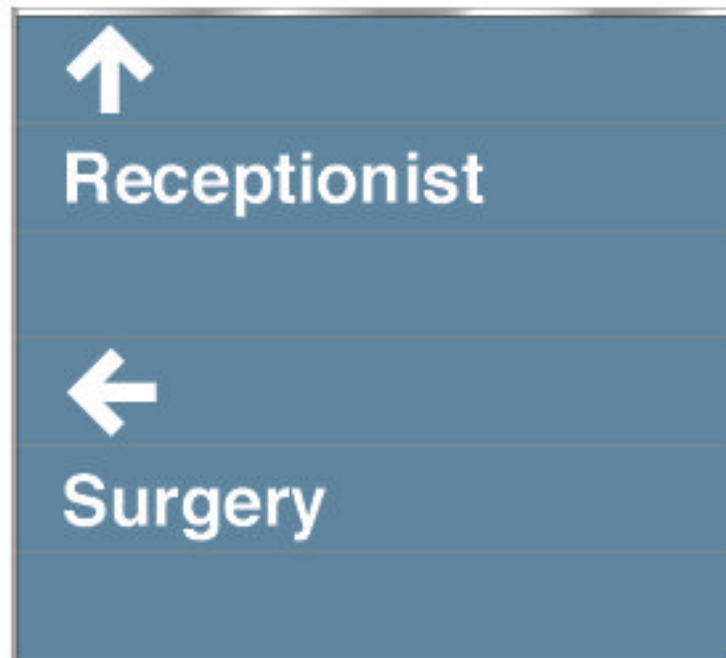


IN-14.01

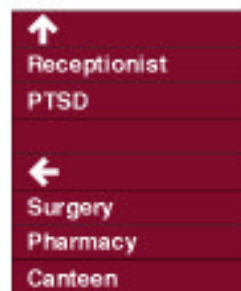

IN-14.02

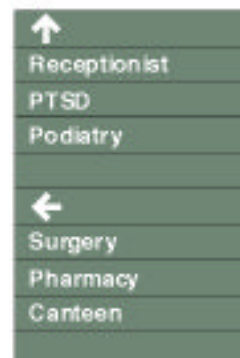



IN-14.03





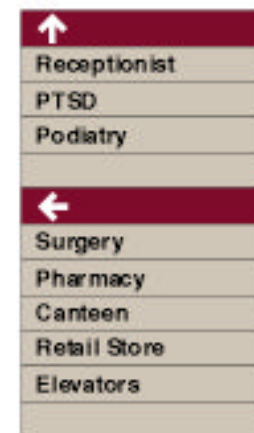


IN-14.04




IN-14.05

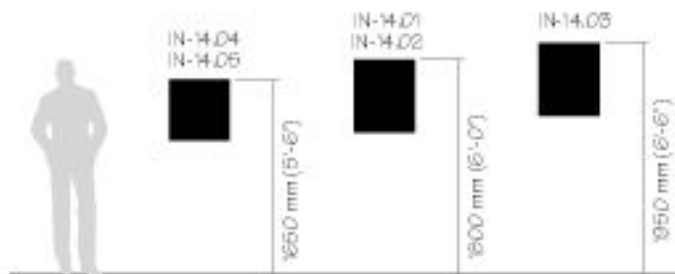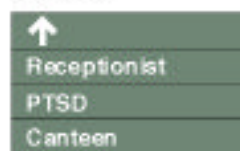

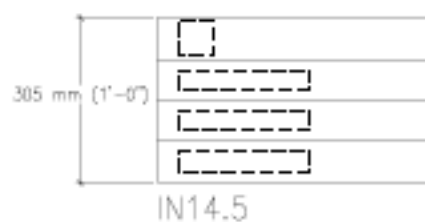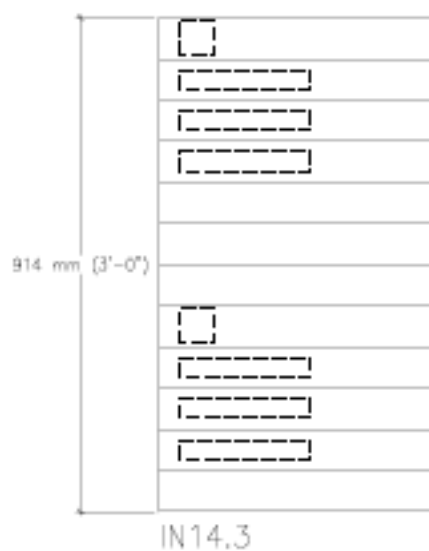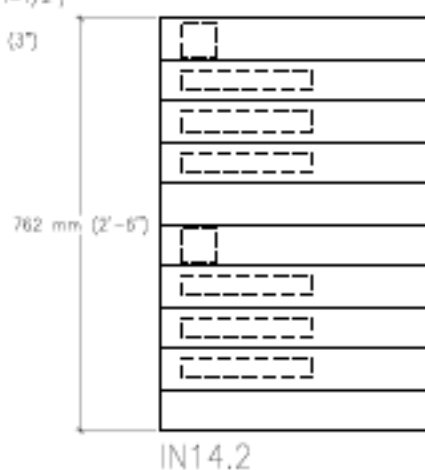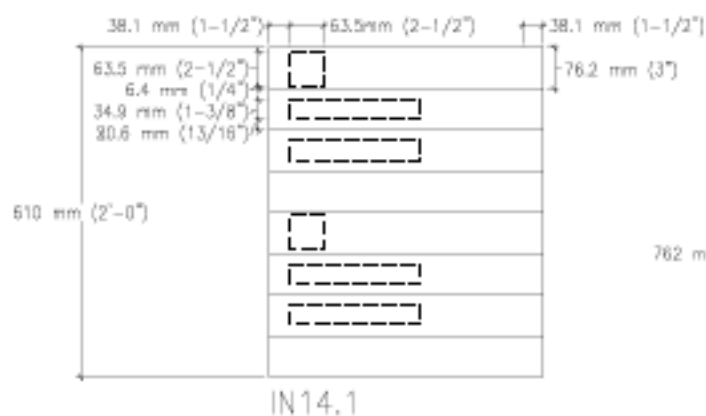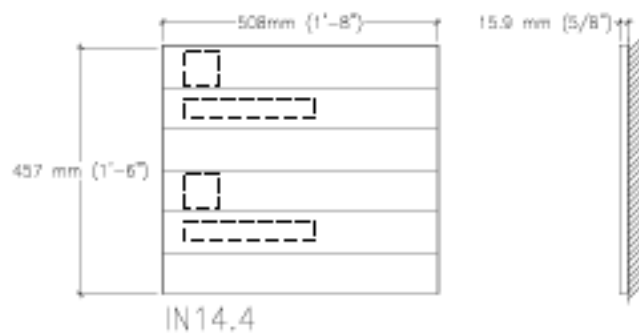IN-14.01-5**Interior Signs****Wall Directional Sign**

ARROW: Refer to standards for arrow positioning relative to text.

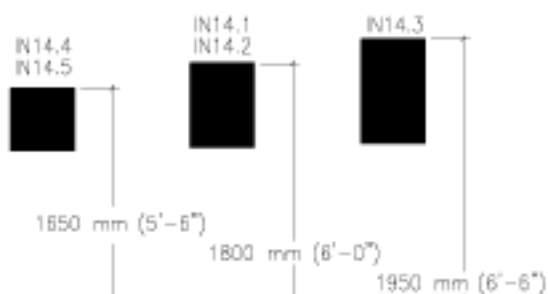

IN-14.06

Interior Signs

Elevator Lobby Directional Sign

Size
508 mm H x 508 mm W
(20" H x 20" W)

Description & Use

Use this sign for directional information in a elevator lobby or stairwell landing. This sign is always a top sign component to a 14 sign.

Message Configuration

Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sign Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Face applied vinyl

Colors

Text: Refer to Color Chart.
Background & Accent Bar: Refer to Color Chart

Typography

Helvetica Medium

Mounting

Double-sided foam tape, silastic adhesive or screw.

Installation

Wall.

Recommendations


Use in elevator lobbies, across from the elevators, to direct patients and public. Use at stair landings, across from the door to direct patients and public.



Message Layout A






Message Layout B

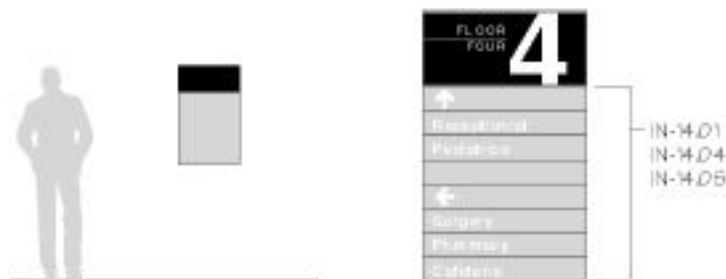

IN-14.06**Interior Signs**

Elevator Lobby Directional Sign

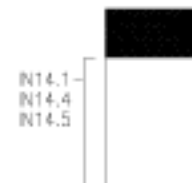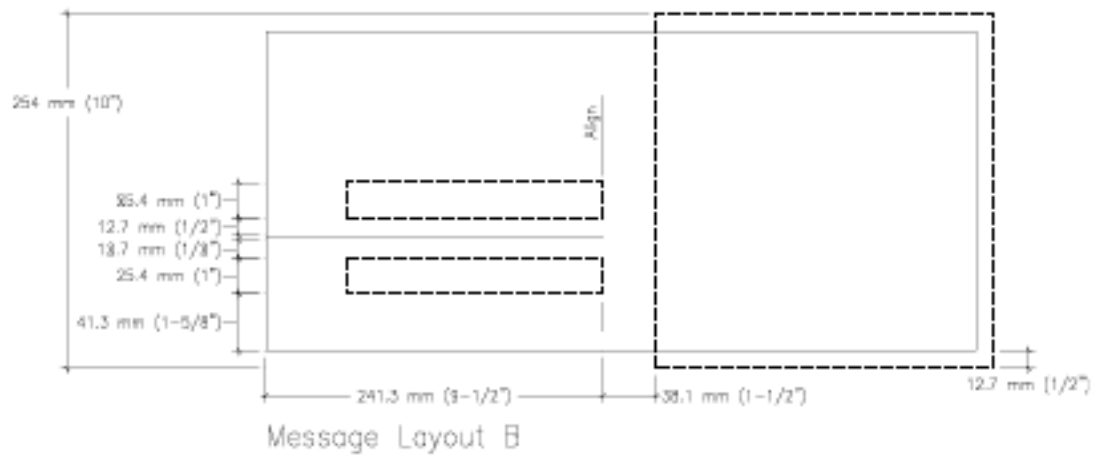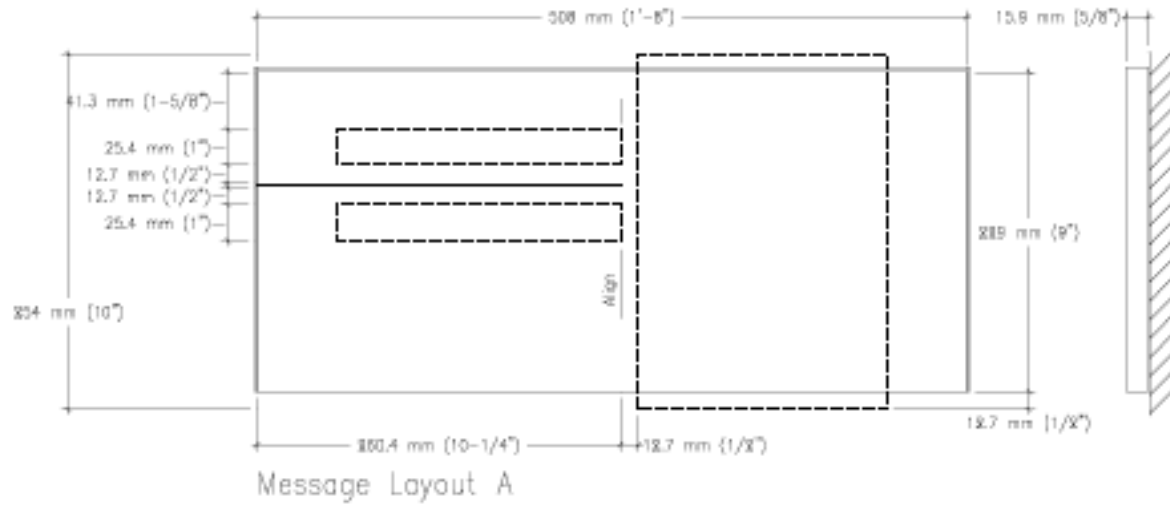

IN-17.01**Interior Signs****Directory****Size**

762 mm H x 610 mm W
(2'-6" H x 2'-0" W)

Description & Use

Small size main lobby directory. 48 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)
Header Layout A is for a basic directory header. Header Layout B is for a directory header to contain the name of the facility. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl

Colors

Refer to sign schedule

Typography

Helvetica Medium

Mounting

Screw.

Installation

On wall.

Recommendations

This directory is for use in the main lobby of small buildings which would typically have no more than 30 to 40 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

Directory			
Title		Title	
Subtitle	1A74	Subtitle	1B42
Subtitle	1A76	Sub-Subtitle	
Subtitle	1A77	Sub-Subtitle	
Subtitle	1A79	Sub-Subtitle	
Sub-Subtitle		Subtitle	1A44
Sub-Subtitle		Subtitle	1A45
		Subtitle	1A46
		Subtitle	1A48
		Subtitle	1A52
Title	1B40	Title	
Subtitle	1B40	Subtitle	1B52
Subtitle	1B42	Subtitle	1B54
Title		Title	
Subtitle	1C42	Subtitle	
Subtitle	1C43	Subtitle	
Subtitle	1C43	Sub-Subtitle	1A55
Subtitle	1C43	Sub-Subtitle	
		Sub-Subtitle	
		Subtitle	1A55
		Subtitle	1A56

Header (Message Layout A)**Header (Message Layout B)****Copy Strip A**


Title	1A74
-------	------

Copy Strip B

Subtitle	1B48
----------	------


Copy Strip C

Sub-Subtitle	1C49
--------------	------

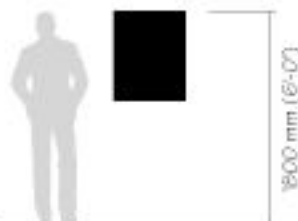

IN-17.01**Interior Signs**

Directory

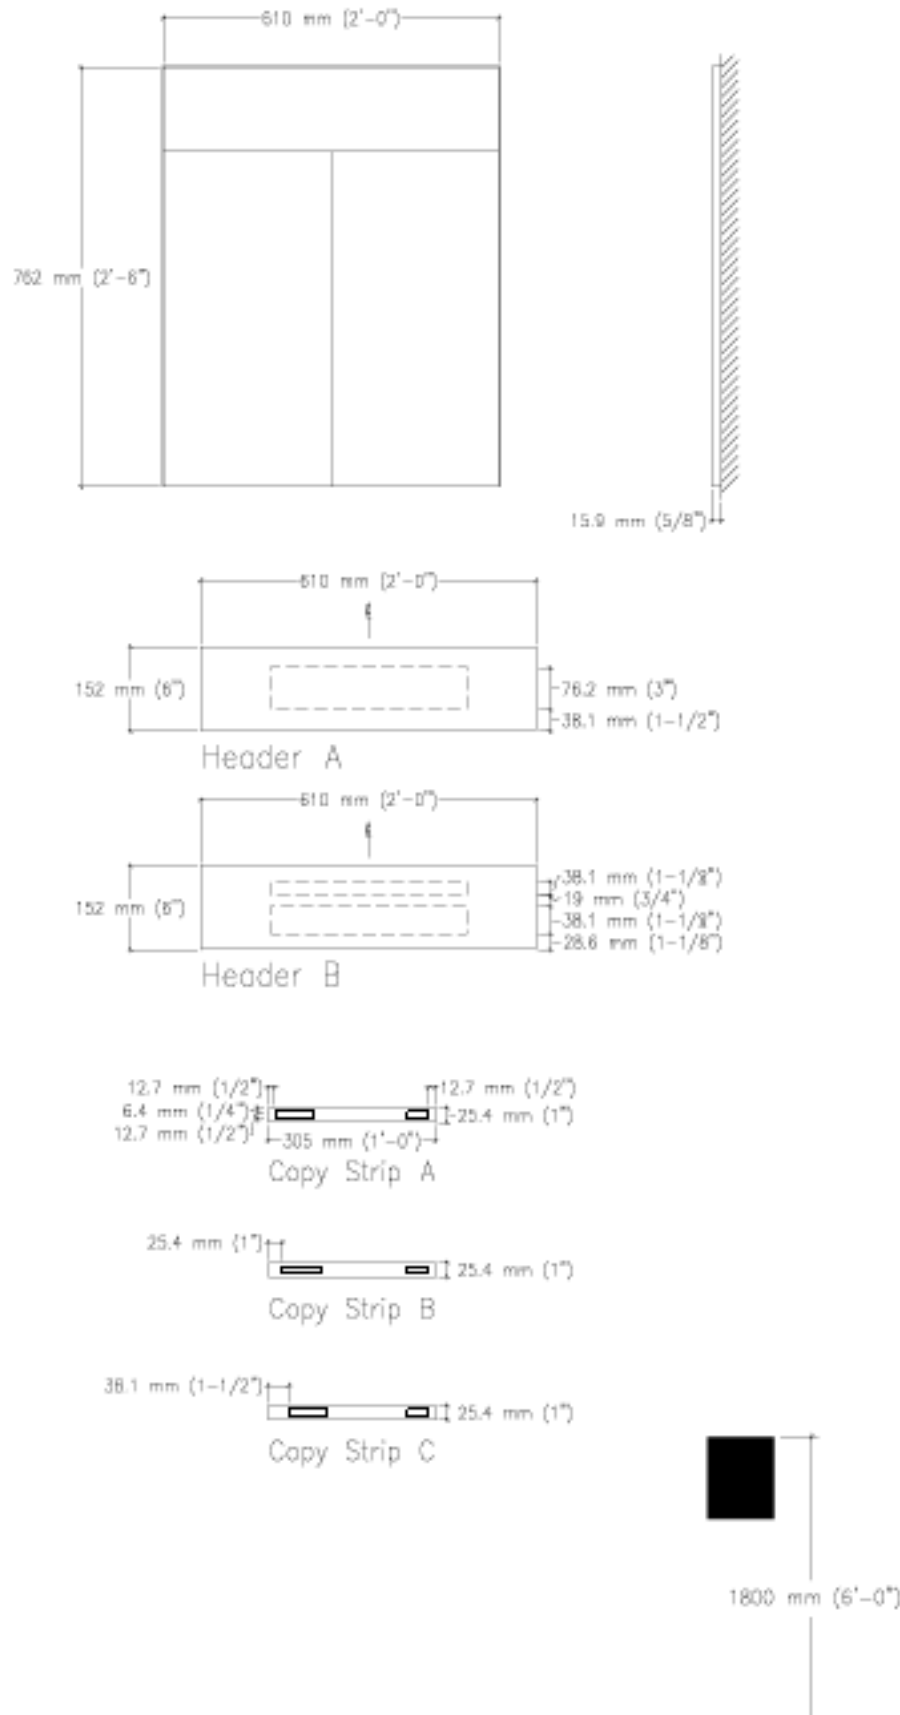

IN-17.05**Interior Signs****Floor Directory****Size**

762 mm H x 305 mm W
(2'-8" H x 12" W)

Description & Use

Small size elevator lobby directory.
24 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)
Header Layout A is for a single digit floor. Header Layout B is for a double digit floor. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl

Colors

Refer to sign schedule

Typography

Helvetica Medium

Mounting


Screw.

Installation

On wall adjacent to elevator.

Recommendations

This directory is for use in the elevator lobbies of small buildings which would typically have no more than 20 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

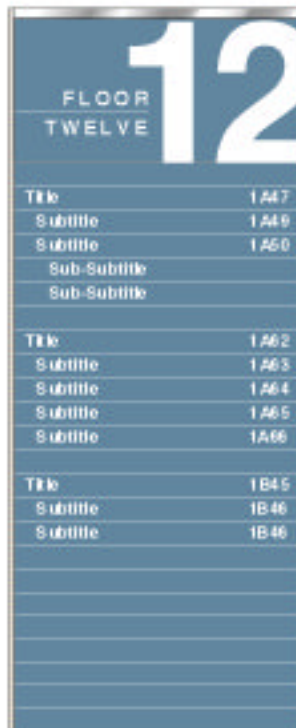**Header (Layout A)****Header (Layout B)****Directory Strip A**

Title	1A74
-------	------

Directory Strip C

Sub-Subtitle	1C49
--------------	------


Directory Strip B

Subtitle	1B48
----------	------



IN-17.05**Interior Signs**

Floor Directory

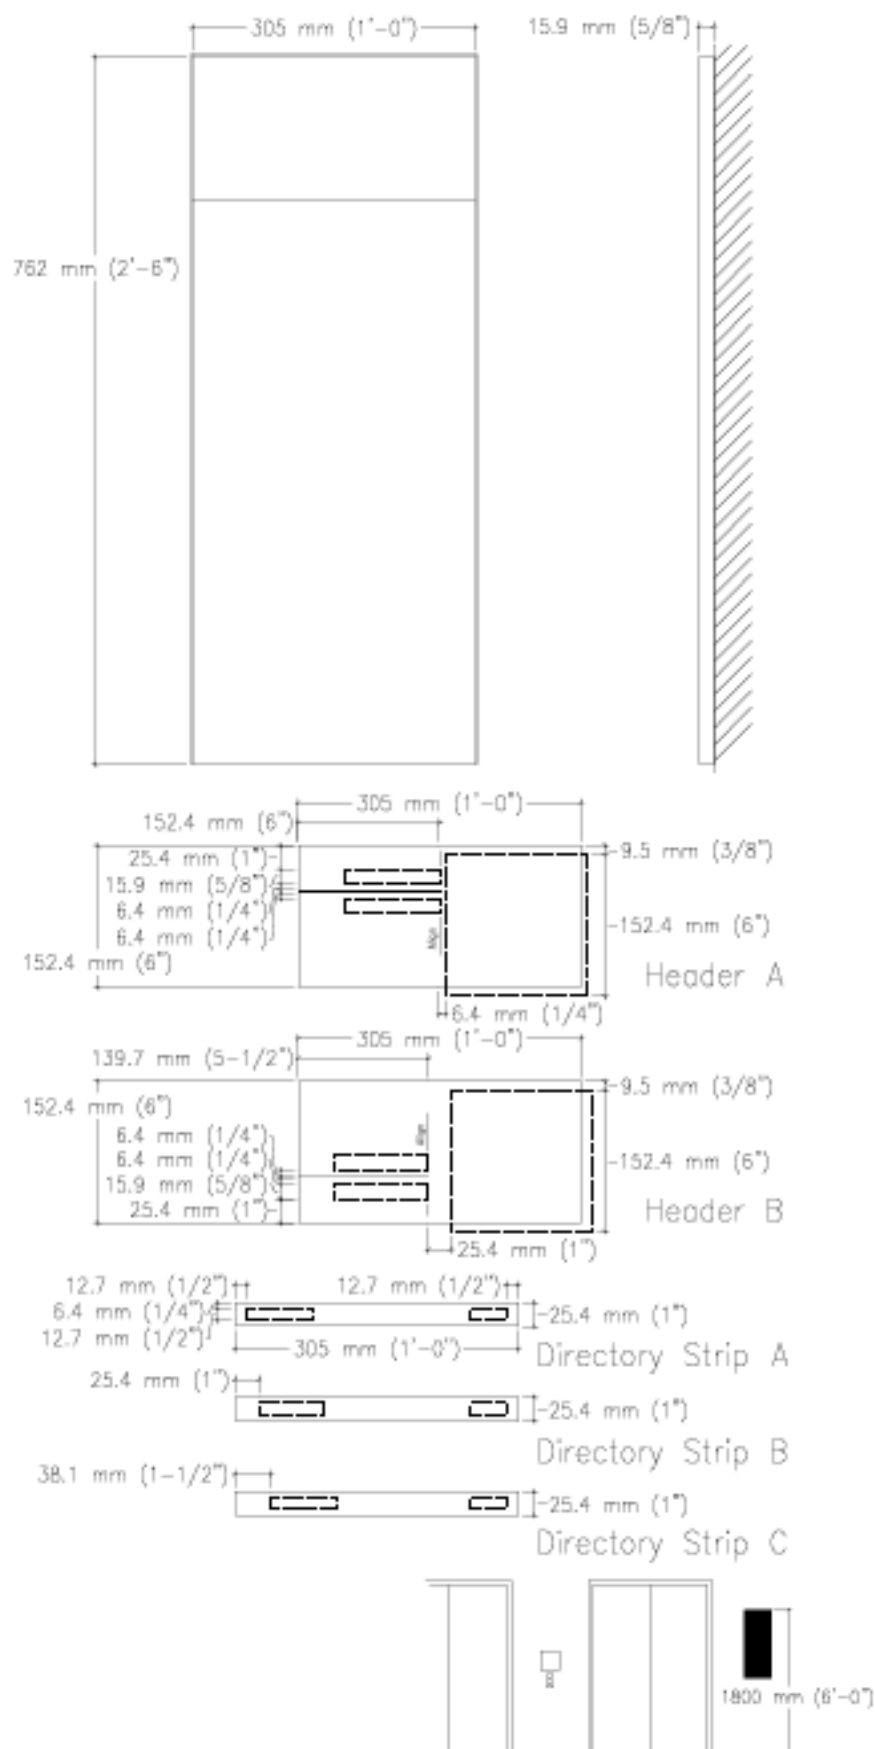

IN-17.06

Interior Signs

Large Floor Directory

Size
2 mm H x 610 mm W
(8" H x 2'-0" W)

Description & Use

Elevator lobby directory. 48 directory strips.

Message Configuration

Refer to layout drawing for lettering sizes and dimensions. Header Layout A is for a single digit floor. Header Layout B is for a double digit floor. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing. Refer a main listing or when the name is too long to fit on Strip A.

Sign Components

Sign Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl

Colors

Color: Refer to Color Chart. Background & Accent Bar: Refer to Color Chart

Typography

Helvetica Medium

Mounting

Free.

Installation


Wall adjacent to elevator.

Recommendations

This directory is for use in elevator lobbies of small buildings which would typically have no more than 40 listings. Listings in a directory should be done in alphabetical order. List in the directory only services departments which have direct contact with patients and public. Distribute any blank directory copies throughout the directory to provide spacing between groups of listings.

FLOOR TWELVE			
Title	1A37	Title	1A37
Subtitle	1A38	Subtitle	1A38
Subtitle	1A39	Subtitle	1A39
Sub-Subtitle		Sub-Subtitle	
Sub-Subtitle		Sub-Subtitle	
Title	1A42	Title	1A42
Subtitle	1A43	Subtitle	1A43
Subtitle	1A44	Subtitle	1A43
Subtitle	1A45	Subtitle	1A43
Subtitle	1A46	Subtitle	1A43
Subtitle	1A47	Subtitle	1A43
Subtitle	1A48	Subtitle	1A43
Subtitle	1A49	Title	1B43
Subtitle		Subtitle	1B44
Title	1A42	Subtitle	1B46
Subtitle	1A43		
Subtitle	1A44		
Subtitle	1A45		
Subtitle	1A46		

Header (Layout A)

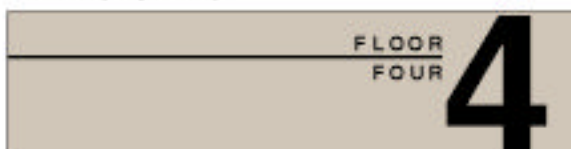

Header (Layout B)



Directory Strip A


Title	1A74
-------	------

Directory Strip C

Sub-Subtitle	1C49
--------------	------


Directory Strip B

Subtitle	1B48
----------	------

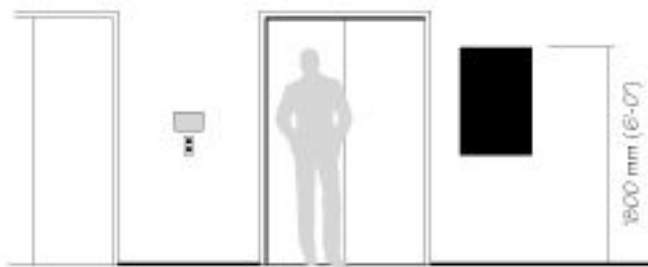

IN-17.06**Interior Signs**

Large Floor Directory

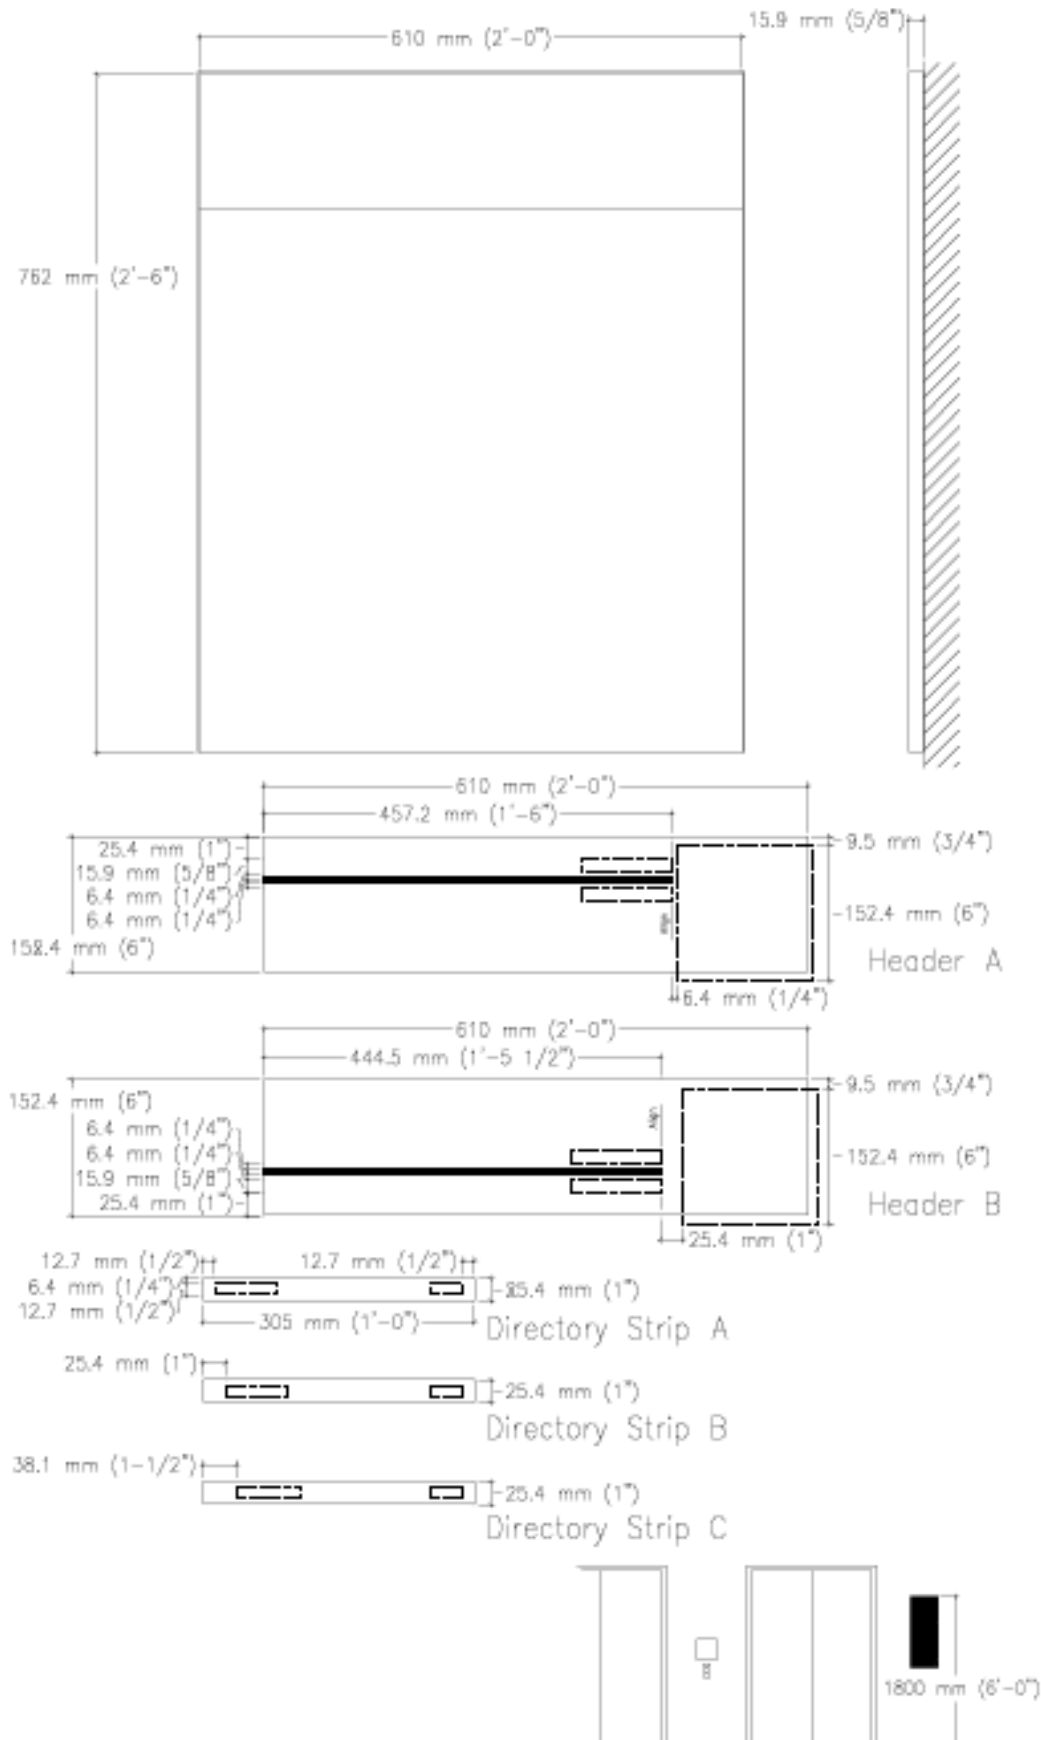

IN-22.01**Specialty Signs****Card or Paper Holder****Size**

Holder Size:
229 mm
(9" W)

Description

Card or Paper Holder to temporarily hold paper or notices.

Sign Components

Aluminum extrusion with ball or cylinder pinch roller.

Colors

Holder: Clear Anodized

Mounting


Double-sided foam tape or silastic adhesive.

Installation

On wall directly under sign.

Recommendations

Can be installed under a patient room sign or a patient bed sign to hold miscellaneous pieces of paper. Can be installed under office sign for use as a message placement holder or used at conference rooms to hold room schedules, etc.

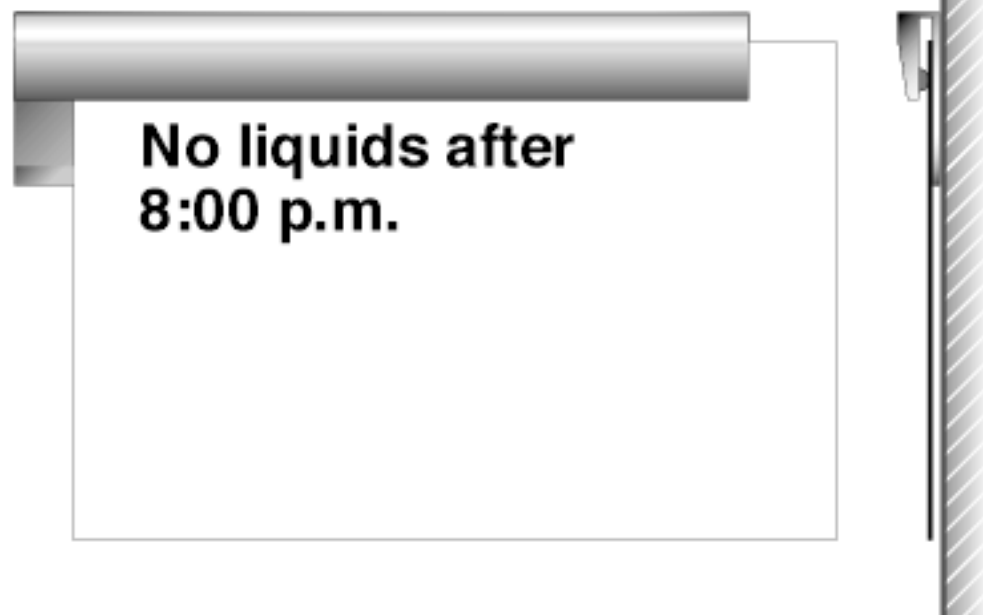

IN-22.01

Specialty Signs

Card or Paper Holder

