


FAN COIL SEQUENCE OF OPERATION (NONPATIENT ROOMS)

FAN COIL SHALL OPERATE ON A SCHEDULE AS SET BY ECC. FAN SHALL RUN CONTINUOUSLY IN OCCUPIED MODE. FAN STATUS SHALL BE MONITORED AND AN ALARM MESSAGE SHALL BE GENERATED IN THE EVENT THE UNIT FAILS TO RUN BETWEEN THE RANGE OF 70°–75° SPACE TEMPERATURE BOTH V-1 & V-2 SHALL BE CLOSED. UPON RISE IN TEMPERATURE ABOVE 75° V-2 SHALL MODULATE OPEN TO MAINTAIN 75° F. UPON FALL IN TEMPERATURE BELOW 70° F. HEATING VALVE V-1 SHALL MODULATE TO OPEN TO MAINTAIN 70° F.

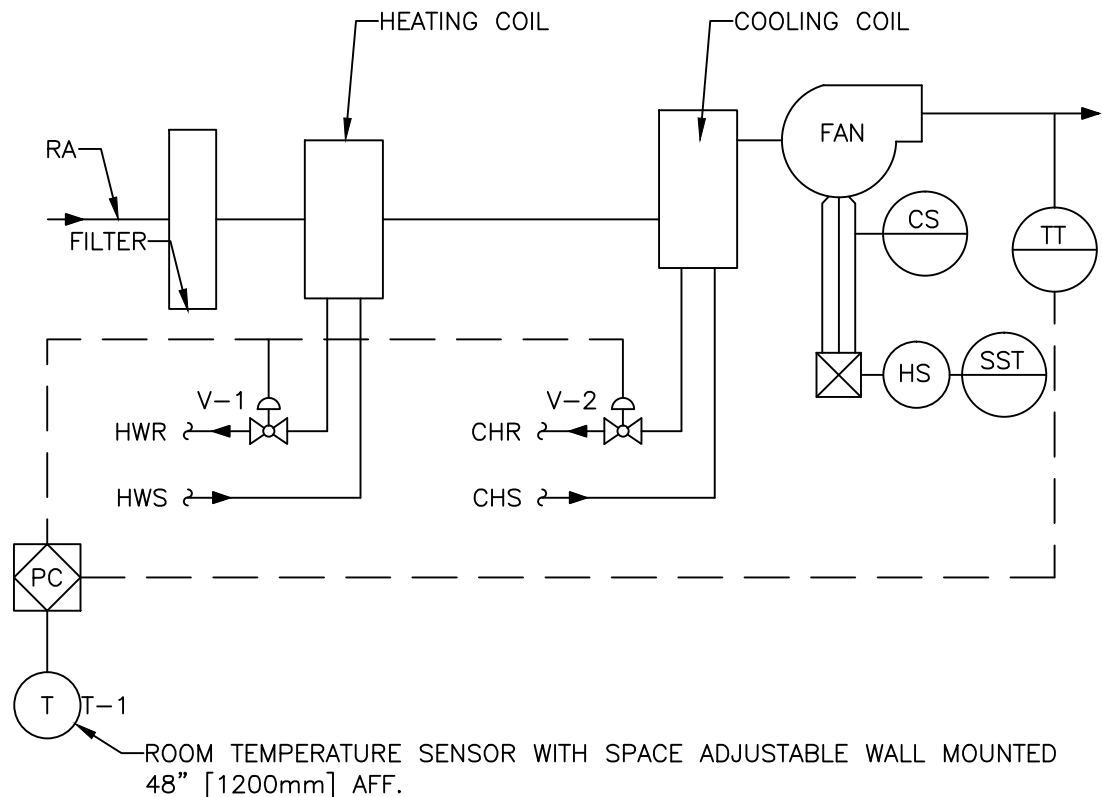

FOUR PIPE FAN COIL UNIT CONTROLS

NTS



Department of
Veterans Affairs

DETAIL TITLE / 564-12-128 RENOVATE HIMs

SCALE :NONE

DATE ISSUED :19-JUL-12

CADD DETAIL NO. : M-1