

Size

76 mm H x 229 mm W
(3" H x 9" W)

Description & Use

Sign is to be placed on all rooms that require identification.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Etched Sign Plaque; Aluminum Top Accent Bar; End Cap

Graphic Process

Tactile room number with accompanying Braille.

Colors

Text: Refer to Color Chart.
Background & Accent Bar: Refer to Color Chart

Type Style

Helvetica Medium
Grade 2 Braille

Mounting


Double sided foam tape, silastic adhesive or screw.

Installation



Knob side of door, 1575 mm (63") to top of sign and 50 mm (2") over from door frame.

Recommendations



This sign is to be used for all rooms, but can also be used to identify corridors and alcoves as necessary. Do not use on exterior and stairwell doors.

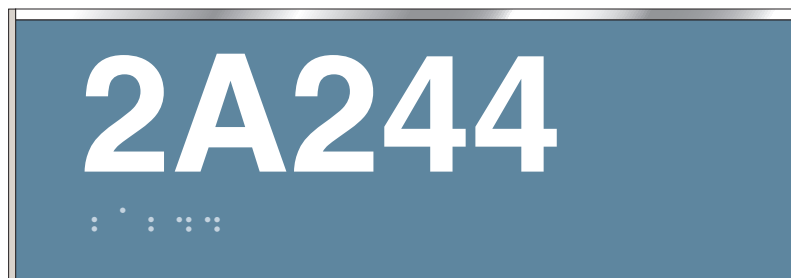

Message Layout A

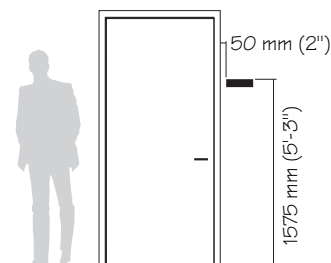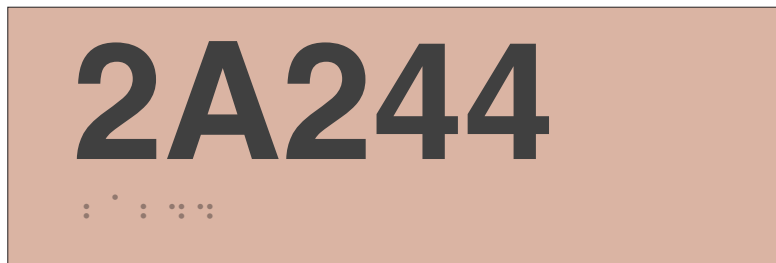

Room Number Identification

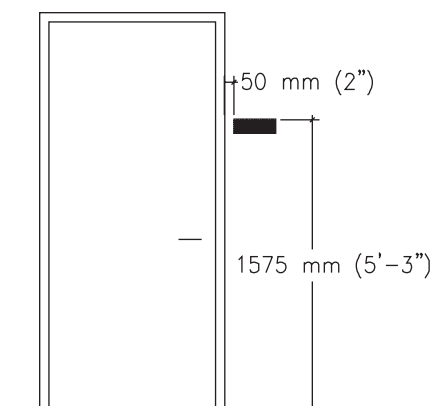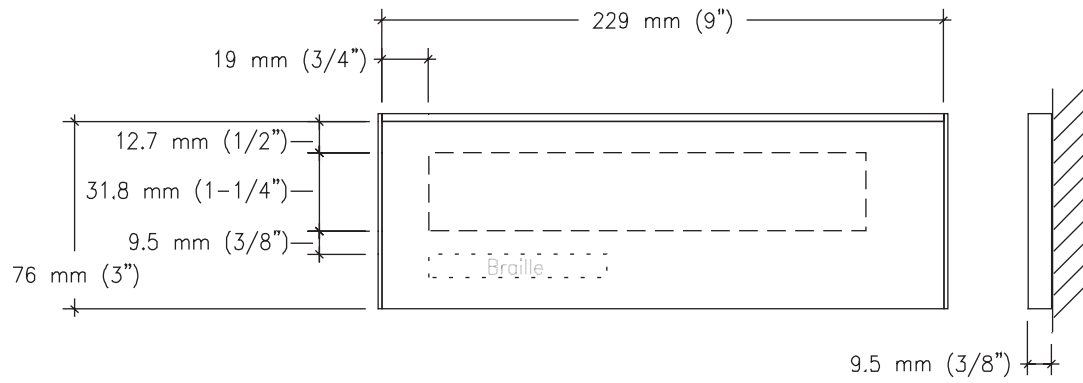

Size

152 mm H x 229 mm W
(6" H x 9" W)

Description & Use

This sign always has a Type IN03 as its top sign component. Use this sign to identify the occupant or activity within a room.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)
Layout A is suggested for department identification. Layout B for rooms and departments with long words or names. Layout C for rooms with a common name but need specific identification.

Sign Components

Sliding Rail Back; Copy Panel; Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

Text: Refer to Color Chart.
Background & Accent Bar: Refer to Color Chart

Type Style & Size

Helvetica Medium
Lettering size is adaptable to allow messages to fit on to the sign. Refer to various layouts for reference.

Mounting

Double sided foam tape, silastic adhesive or screw.

Installation

Knob side of door, 1500 mm (60") to top of sign and 50 mm (2") over from door frame.

Recommendations

It is recommended that this particular sign type become the "building standard" for identification of all rooms.


Signs identifying electrical closets, mechanical rooms and telecommunication rooms should consist of only the room number (Sign type IN-03.01). The room number should follow the master building room numbering system. No descriptive name or title should be used nor should they have a unique number system.





Message Layout A




Message Layout B

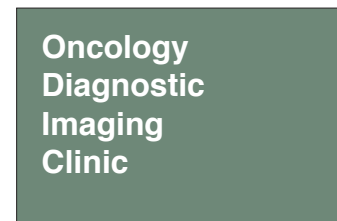


Message Layout C

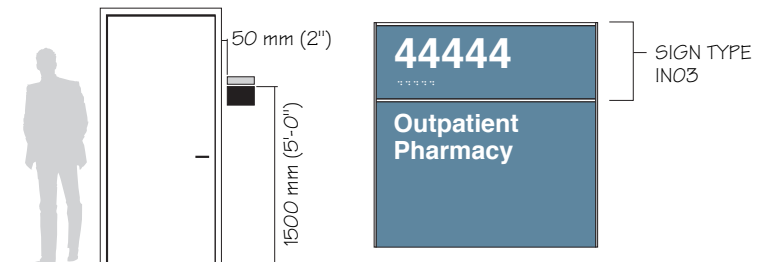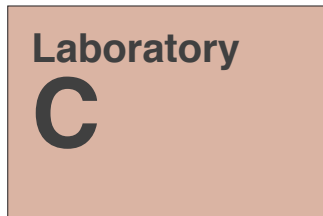


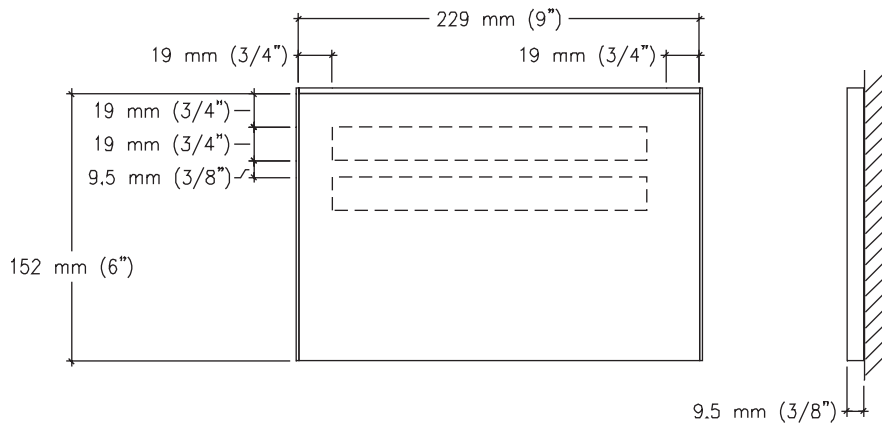


Message Layout A

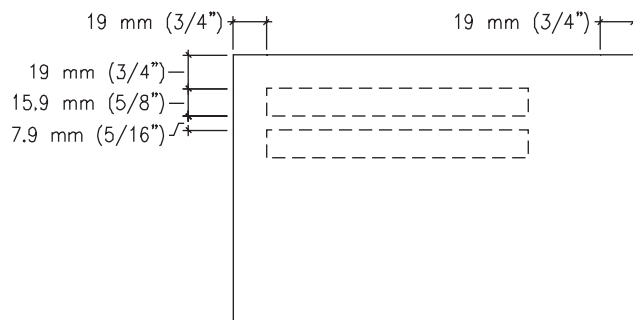

Message Layout B

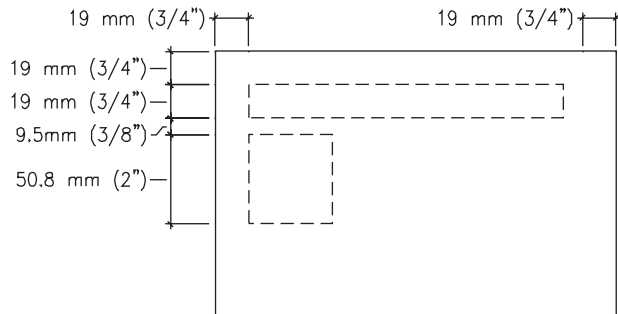

Message Layout C

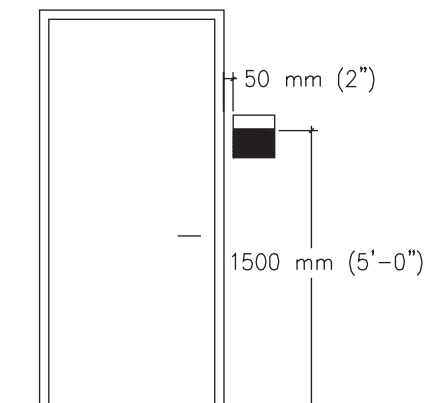

Sign Size

76 mm H x 229 mm W
(3" H x 9" W)

Description & Use

This sign always has a Type 03 as its top sign component. Use this sign to secondary rooms or rooms that have short names.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)
Layout A is suggested for short titles. Layout B is for longer names or titles. Layout C is specific identification by number or letter.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

Text: Refer to Color Chart.
Background & Accent Bar: Refer to Color Chart

Typography

Helvetica Medium

Mounting

Double sided foam tape, silastic adhesive or screw.

Installation


Knob side of door, 1500 mm (60") to top of sign and 50 mm (2") over from door frame.

Recommendations

This sign is for rooms that do not require long or large text.




Message Layout A

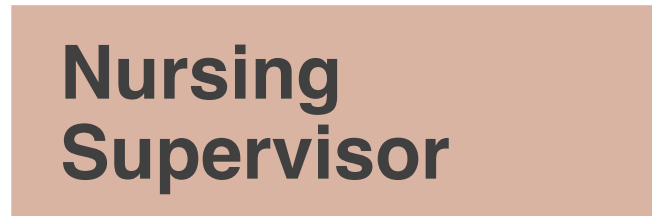


Message Layout B




Message Layout C

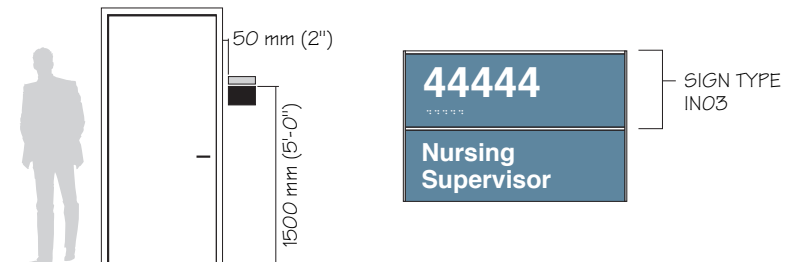


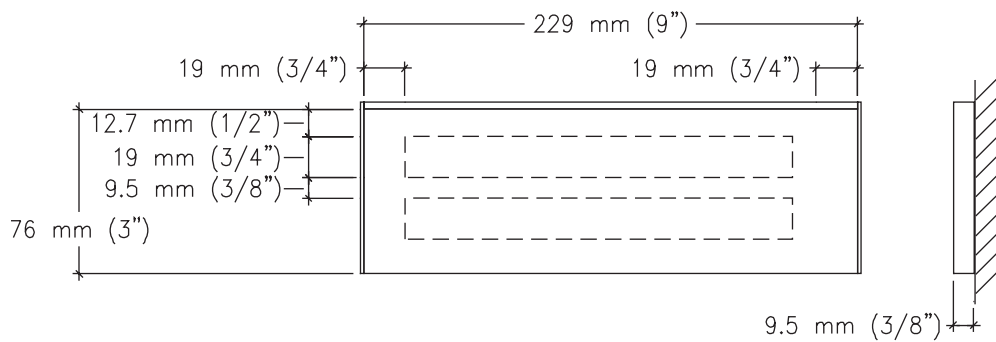


Message Layout A

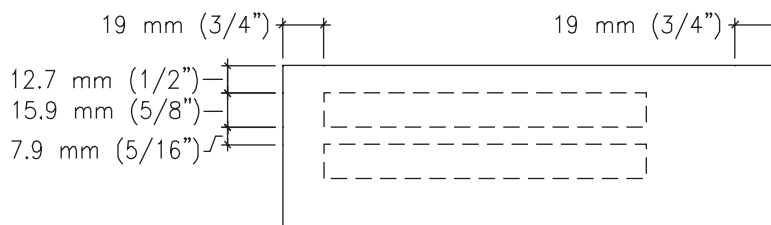

Message Layout B

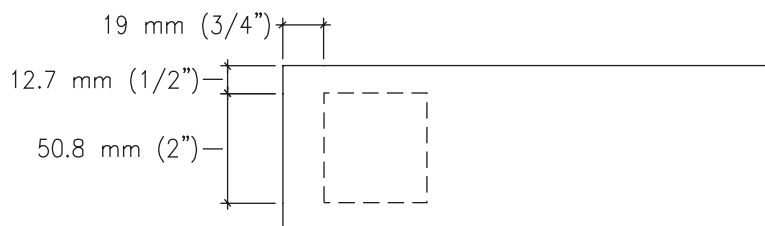

Message Layout C

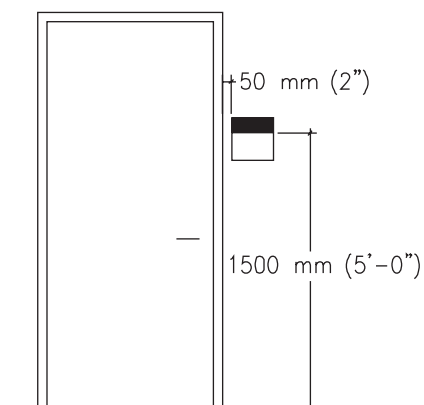

IN-08.01-4

Interior Signs

Prohibit, Instructional & Control Signs

Size

229 mm H x 229 mm W
(9" H x 9" W)

Description & Use

Use these signs to inform in a bold manner.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic plaque.

Graphic Process

Silk-screened or surface applied vinyl.

Colors

Text: Refer to Color Chart.

Symbol: Red - B3 and White - T1

Background : Refer to Color Chart

Typography

Helvetica Medium

Mounting

Double sided foam tape or silastic adhesive.

Installation

On wall or door 1575 mm (63") to top of sign and on door, center.

Recommendations


This sign is for use when a strong communication of information is necessary. IN08.4 should be used carefully as it may have a negative reaction on the part of patients and visitors.



IN-08.01




IN-08.02





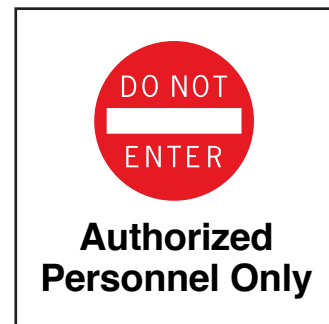


IN-08.03



IN-08.04

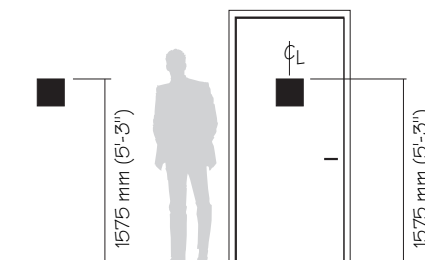

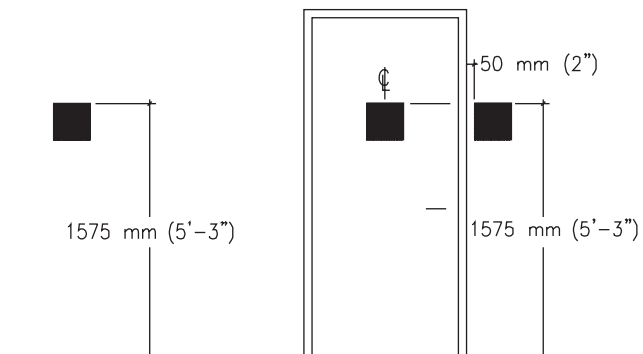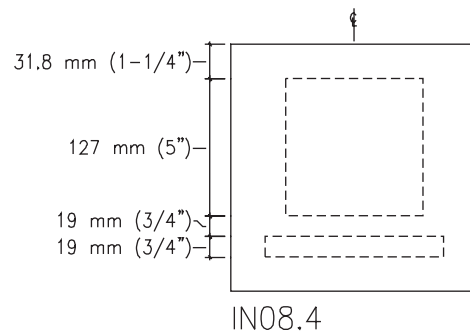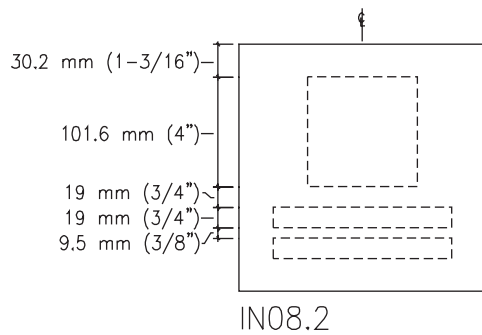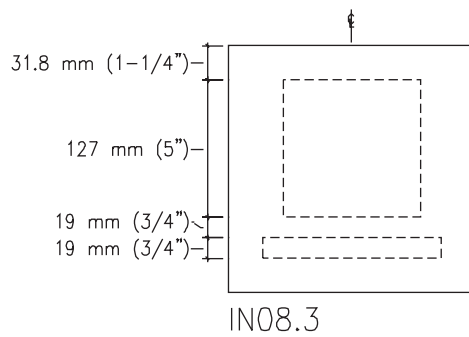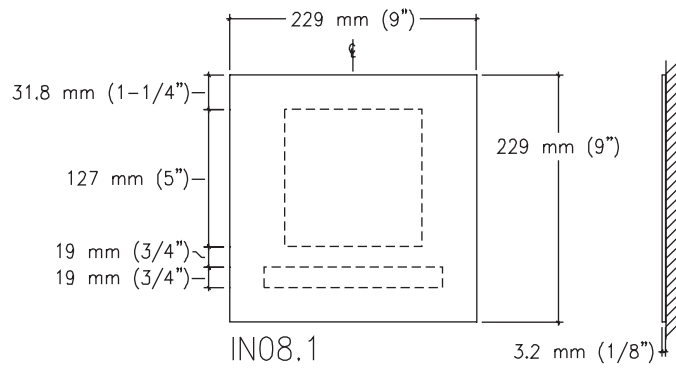

IN-09.01-7

Interior Signs

Pictogram & Symbol Signs

Size

229 mm H x 229 mm W
(9" H x 9" W)

Description & Use

Use these signs to inform with a symbol as well as text.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Etched sign plaque face laminated to acrylic backing plaque.

Graphic Process

Tactile symbol and text with accompanying Braille.

Colors

Text: Refer to Color Chart.
Background & Accent Bar: Refer to Color Chart

Typography

Helvetica Medium
Grade 2 Braille

Mounting



Double sided foam tape or silastic adhesive.

Installation

On wall or door 1575 mm (63") to top of sign and on door, center.

Recommendations

These signs are for use on restrooms or stair doors or under a Type IN-03 sign.

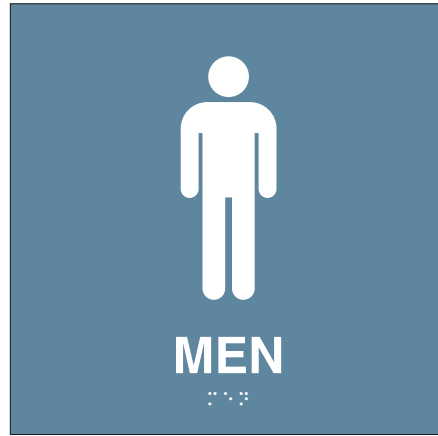

IN-09.01



IN-09.02



IN-09.03



IN-09.04




IN-09.05



IN-09.06




IN-09.07

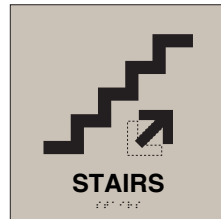

IN-03

IN-09.06



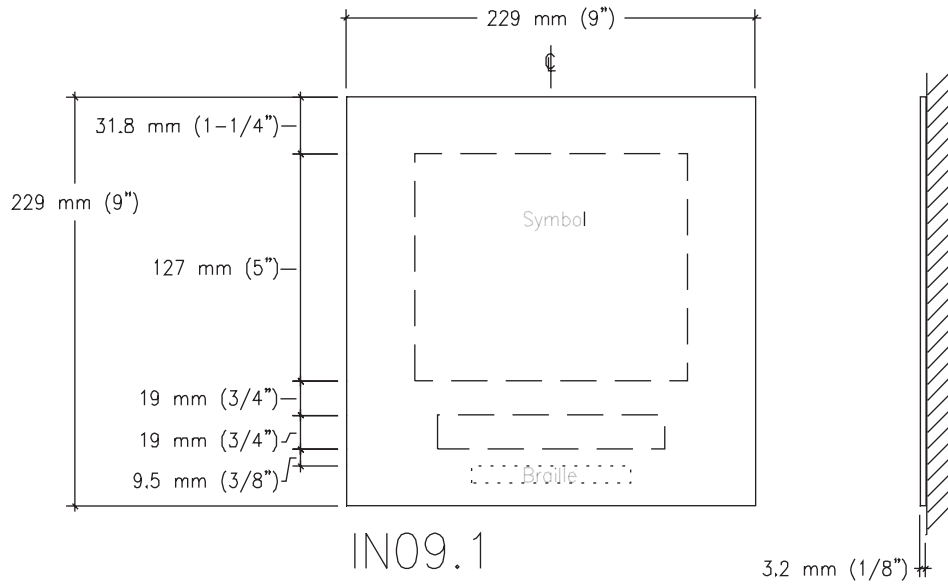

IN09.1

IN09.2

IN09.3


IN09.4

IN09.5

IN09.6

IN09.7

ARROW: Refer to standards for arrow positioning relative to text.

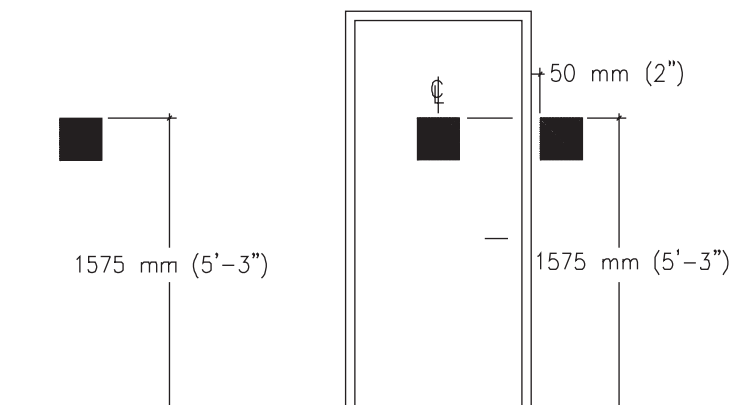

Pictogram & Symbol Signs**Size**

229 mm H x 229 mm W
(9" H x 9" W)

Description & Use

Use these signs to inform with a symbol as well as text.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic plaque.

Graphic Process

Silk-screened or surface applied vinyl.

Colors

Text: Refer to Color Chart.
Background & Accent Bar: Refer to Color Chart

Typography

Helvetica Medium

Mounting

Double sided foam tape or silastic adhesive.

Installation




On wall or door 1575 mm (63") to top of sign and on door, center.

Recommendations

These signs are for use when a symbol will help communicate.

**IN-09.08****IN-09.09**

Pictogram & Symbol Signs

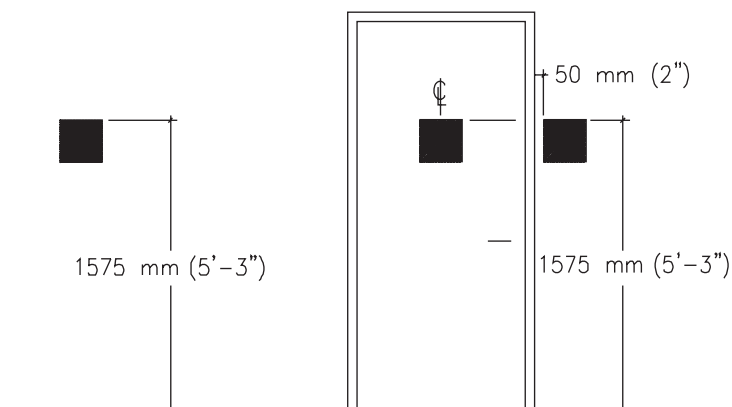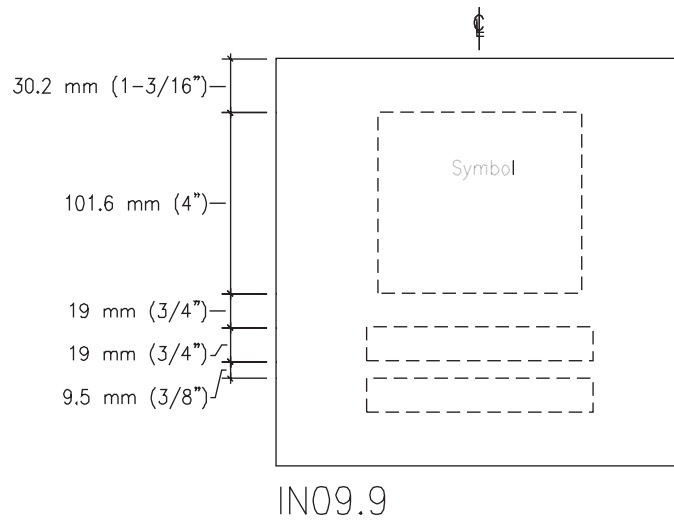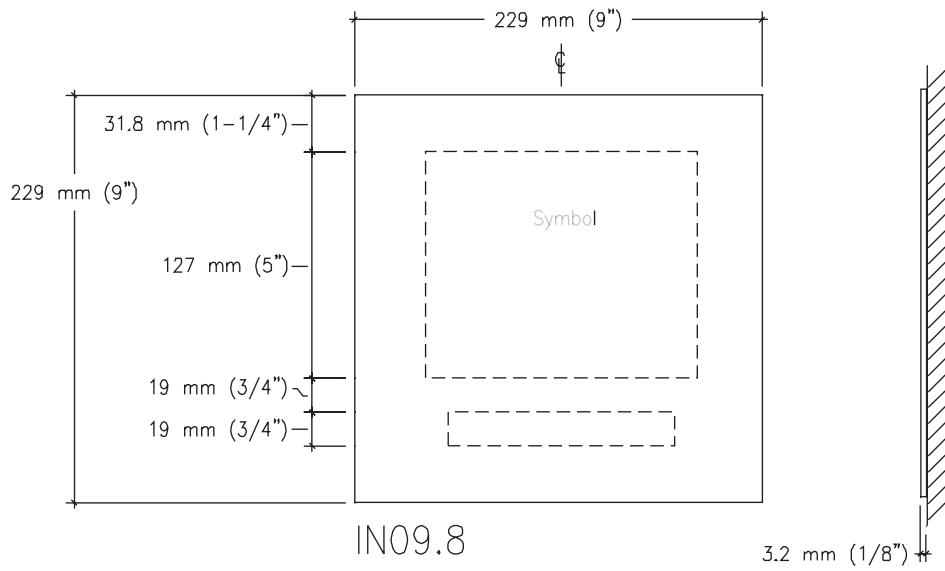

Size

229 mm H x 305 mm W
(9" H x 12" W)

Description & Use

Use this sign for messages to be communicated in corridors on the wall, above doors.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)
Layout A is for symbols and title / informational text. Layout B is for directional information. Layout C is for a department name.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps, Extruded Aluminum Bracket

Graphic Process

Surface applied vinyl.

Colors

Text & Symbols: Refer to Color Chart.
Background & Accent Bar: Refer to Color Chart

Typography

Helvetica Medium Condensed

Mounting

Wall mount with screws.



Installation

Install on wall above the height of doors, 2100 mm (84") minimum to bottom of sign.


Recommendations

This sign is for use when the service or department is a high traffic area or the service or department is hard to find.


Perpendicular (Flag) Mount Sign

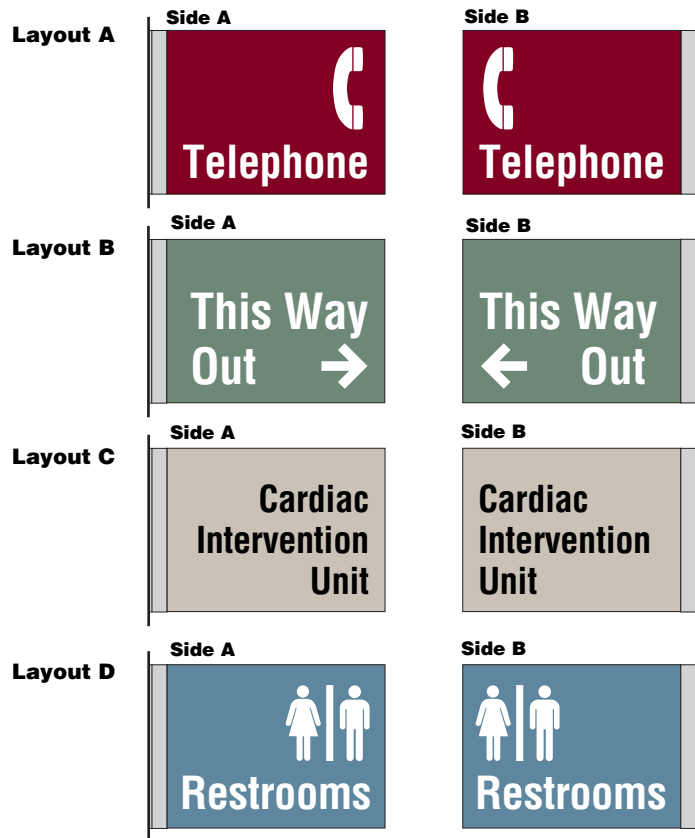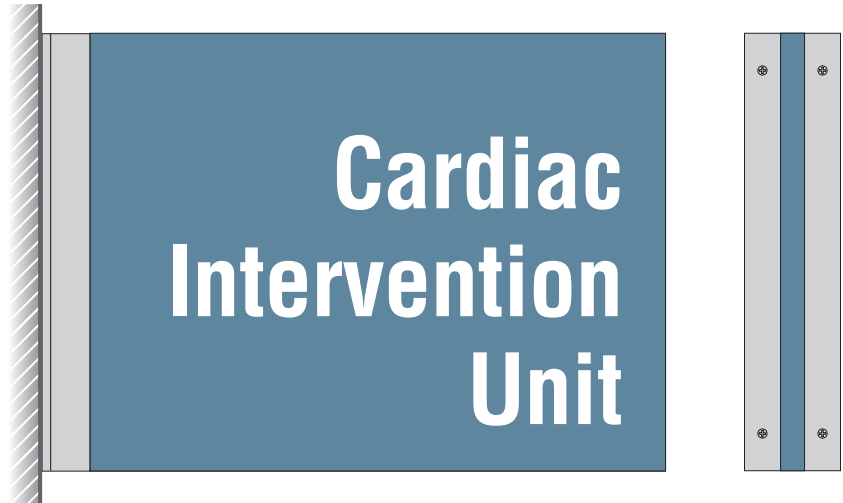


Perpendicular (Flag) Mount Sign

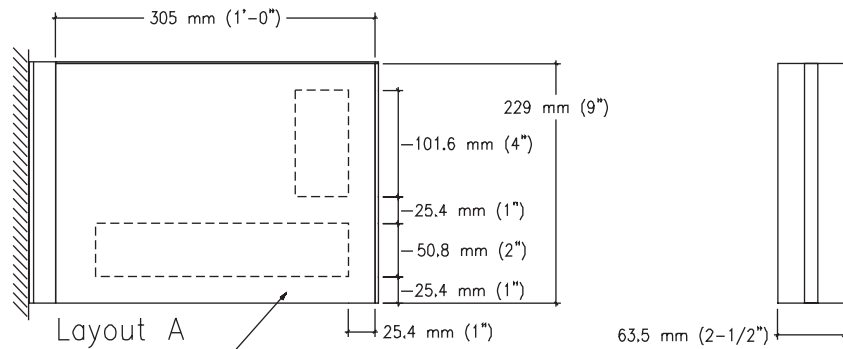


Type and Symbols
to be justified
opposite of bracket
and mirror matched.

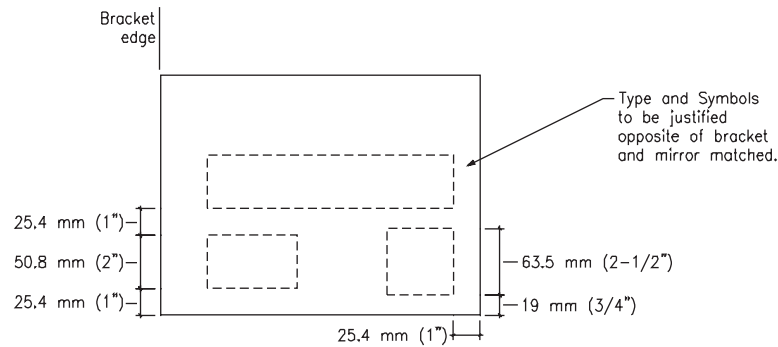

Type and Symbols
to be justified
opposite of bracket
and mirror matched.

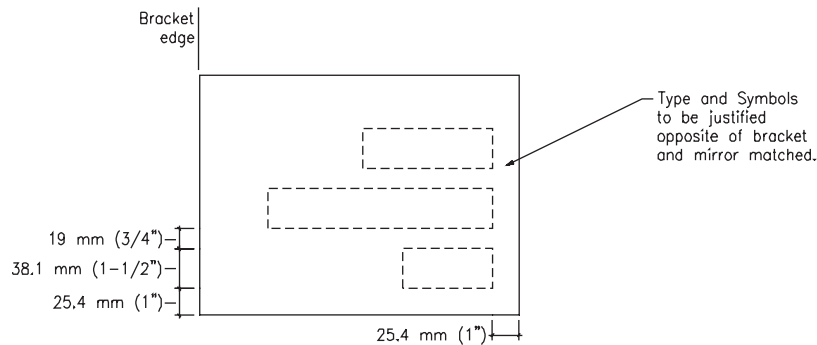

Type and Symbols
to be justified
opposite of bracket
and mirror matched.

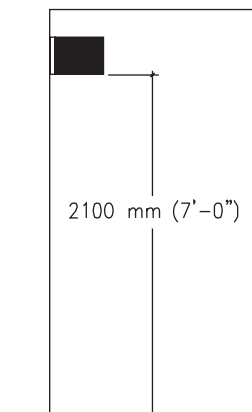

IN-14.01-5

Interior Signs

Wall Directional Sign

Size

IN-14.01

610 mm x 508 mm
(24" x 20")

IN-14.02

762 mm x 508 mm
(30" x 20")

IN-14.03

914 mm x 508 mm
(36" x 20")

IN-14.04

457 mm x 508 mm
(18" x 20")

IN-14.05

305 mm x 508 mm
(12" x 20")

Sign Use & Application

Use this sign for directional information.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

Text & Arrows: Refer to Color Chart.

Background & Accent Bar: Refer to Color Chart

Typography

Helvetica Medium

Mounting


Double sided foam tape, silastic adhesive or screw.

Installation


On wall.

Recommendations


This sign is for use in corridors to direct patients and public through the building.

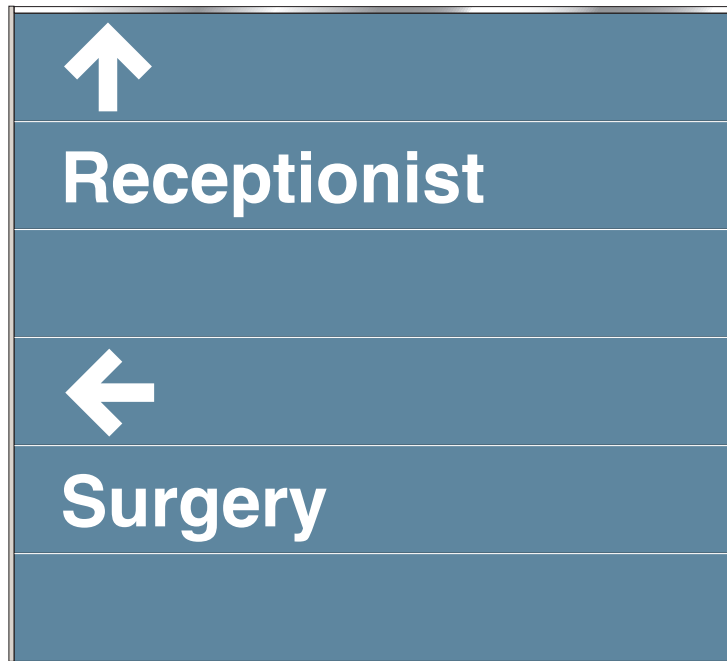


IN-14.01

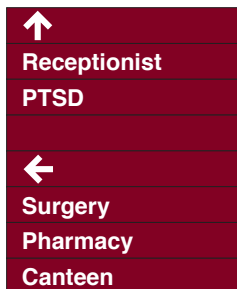


IN-14.02

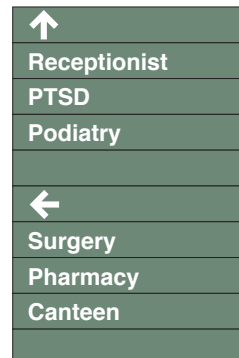



IN-14.03

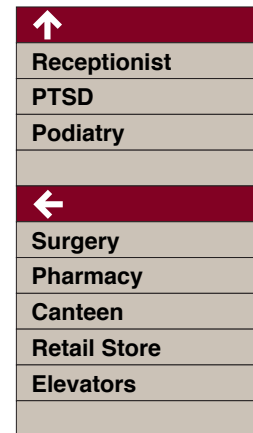


IN-14.04

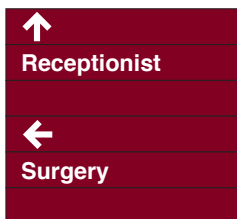


IN-14.05

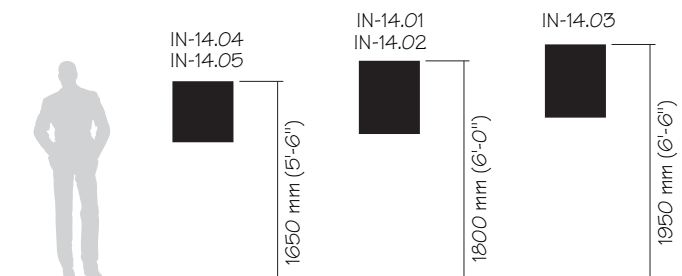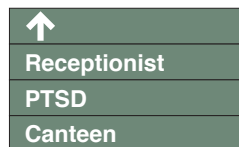

Wall Directional Sign

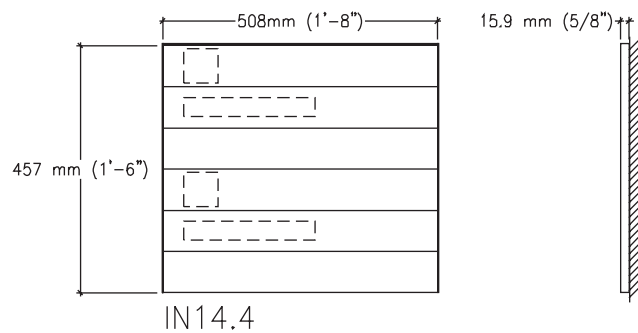


IN14.4

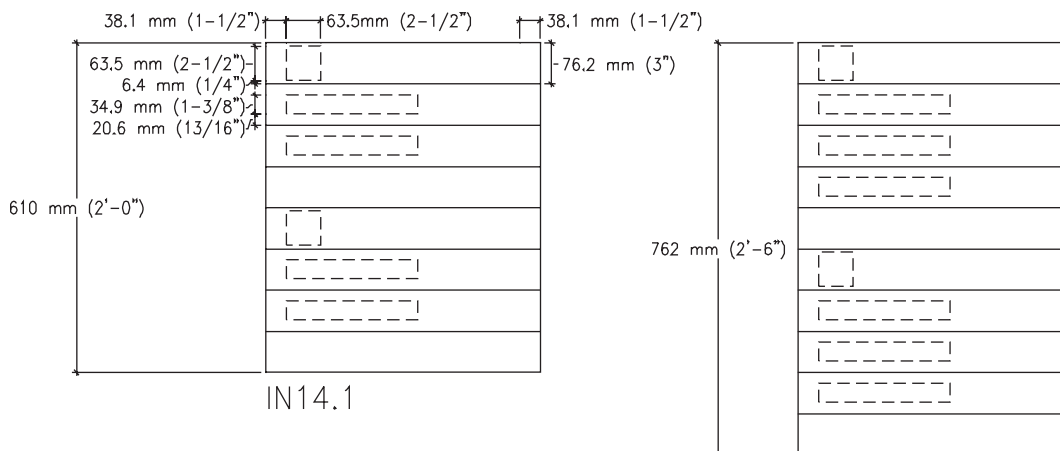


IN14.1

IN14.2

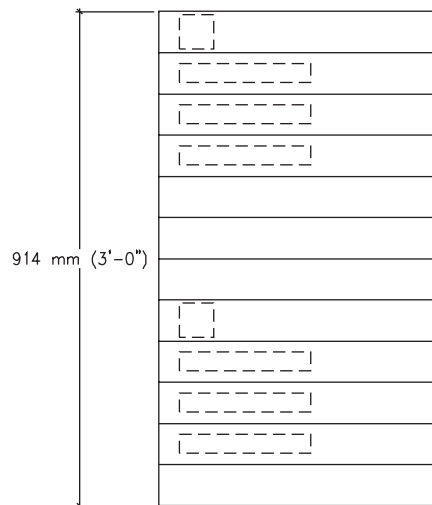


IN14.3

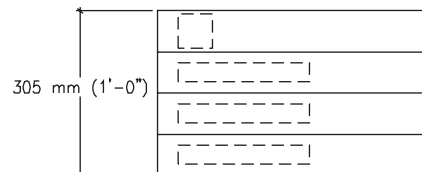

IN14.5

ARROW: Refer to standards for arrow positioning relative to text.

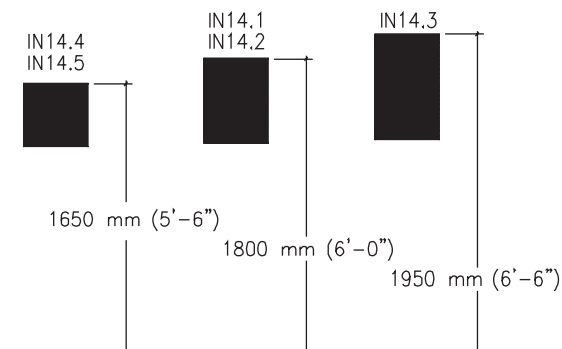

IN-15.01-4

Interior Signs

Size


IN-15.01
152 mm x 1016 mm
(6" x 40")

IN-15.02
305 mm x 1016 mm
(12" x 40")

IN-15.03
457 mm x 1016 mm
(18" x 40")

IN-15.04
305 mm x 1016 mm
(12" x 40")

Ceiling Mounted Directional Sign

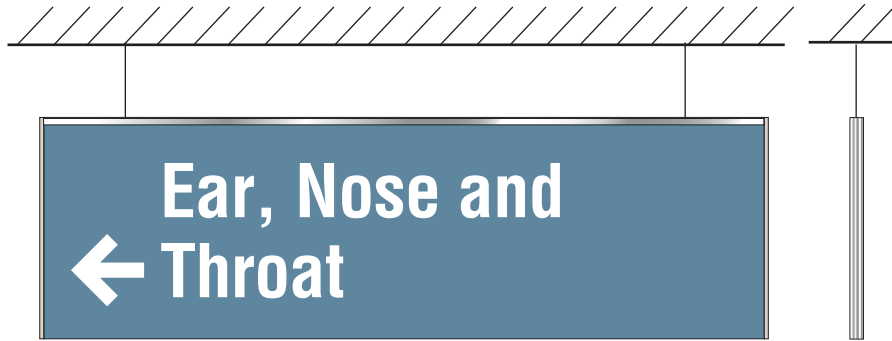

Description & Use

Use this sign for directional information that needs to be communicated overhead. Sign is double sided and both sides can be used for messages.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

Text & Arrows: Refer to Color Chart.
Background & Accent Bar: Refer to Color Chart

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting

Braided stainless steel wire or rod.
Sign must not be attached directly to "T Grid" or lift out ceiling tile.

Installation

From the ceiling.

Recommendations

This sign is for use in corridors to direct patients and public through the building. Because of required letter height there is a limit to the length of messages and limited number of messages.

IN-15.01

↑ Canteen

IN-15.02


↑ Canteen
← Spinal Rehab

IN-15.03






↑ Emergency
← Spinal Rehab
← Canteen

IN-15.04

Outpatient
← Registration

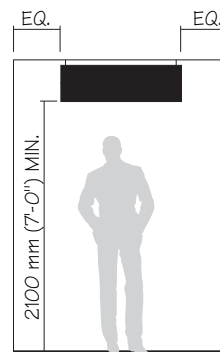

Ceiling Mounted Directional Sign

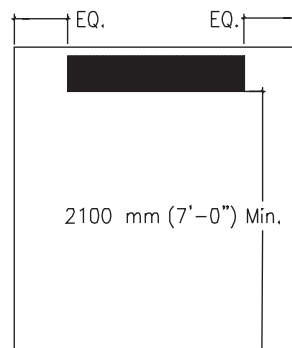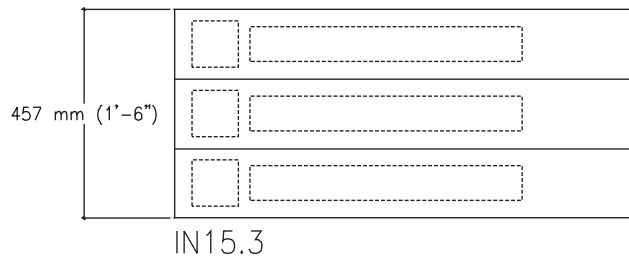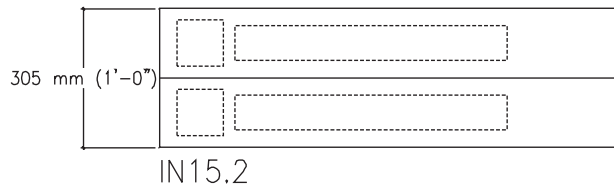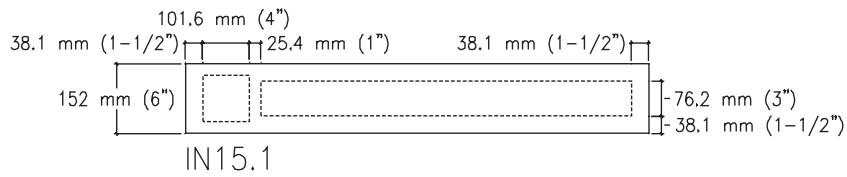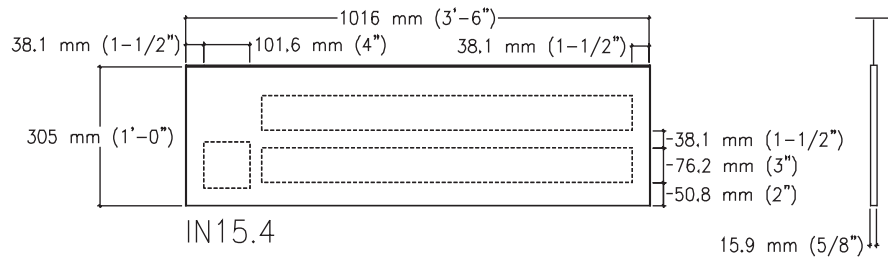

ARROW: Refer to standards for arrow positioning relative to text.