

0
three inches = one foot
1
one and one half inch = one foot
2
one inch = one foot
three-quarters inch = one foot
three-quarters inch = one foot
4
one-half inch = one foot
three-eighths inch = one foot
one-quarter inch = one foot
one-eighth inch = one foot
one-eighth inch = one foot

PATIENT ROOM DOOR MODIFICATIONS (PERRY POINT AND BALTIMORE VAMC)


EXISTING CENTER PIVOT DOOR AND FRAME ASSEMBLY TO BE REMOVED

INSTALL NEW SINGLE SWING DOOR SYSTEM. SYSTEM TO INCLUDE:

- a. INSTALL NEW FLUSH JAMB DOOR FRAME
- b. INSTALL CONTINUOUS GEARED HINGE W/HOSPITAL TOP. DOOR TO SWING INTO CORRIDOR AND MUST FULLY OPEN 180 DEGREES. INSTALL FLOOR MOUNTED DOOR STOP AT FULL OPEN TO PREVENT DAMAGE TO WALL.
- c. INSTALL NEW WOOD DOOR - 3/0 X 7/0 WITH GLASS VISION PANEL AND RECESSED ANTI-LIGATURE CUP PULL
- d. INSTALL MAGNET CATCH WITH 5 POUND PULL AT TOP OF DOOR FRAME (SEE SAMPLE PHOTO DETAIL). CATCH TO PRESENT NO ANCHOR POINTS FOR LIGATURE RISK
- e. INSTALL FLOOR MOUNTED SHEAR ALINING MAG LOCK SYSTEM (1000# LOCKING FORCE). SELF ALINING STRIKE TO BE MORTISED INTO BOTTOM OF DOOR
- f. INSTALL NEW "TOP DOOR ALARM" ADHESIVE TAPE SWITCH ON TOP OF DOOR (BOTH SIDES) AND RE-CONNECT TO EXISTING ALARM SYSTEM. (CONTACT DOOR CONTROL SERVICES, BEN WHEELER TEXAS, 800-356-2025 FOR REQUIREMENTS)

INSTALL NEW DOOR LOCK CONTROL SYSTEM

- a. CORRIDOR SIDE OF DOOR - INSTALL KEY SWITCH WITH FOLLOWING FEATURES
 - LOCK - ACTIVATE MAG LOCK FROM CORRIDOR (INSIDE ROOM UNLOCK CONTROL TO OVERRIDE)
 - UNLOCK - DOOR UNLOCKED. IN THIS SETTING, DOOR CANNOT BE LOCKED FROM INSIDE ROOM
- b. INSIDE ROOM CONTROL
 - PROVIDE ROCKER SWITCH - LOCK/UNLOCK CONTROL
 - PROVIDE TOUCH SENSITIVE PUSH PLATE INSIDE DOOR TO ALLOW FOR ONE MOTION EGRESS FROM ROOM
- c. NURSE'S STATION
 - INSTALL CONTROL SYSTEM THAT PROVIDES FOR REMOTE MONITORING OF STATUS OF EACH DOOR (LOCKED/UNLOCKED/OPENED/CLOSED) AND PROVIDE REMOTE CONTROL TO LOCK OR UNLOCK CLOSED DOOR. NOTE - LOCAL DOOR CONTROLS TO OVERRIDE

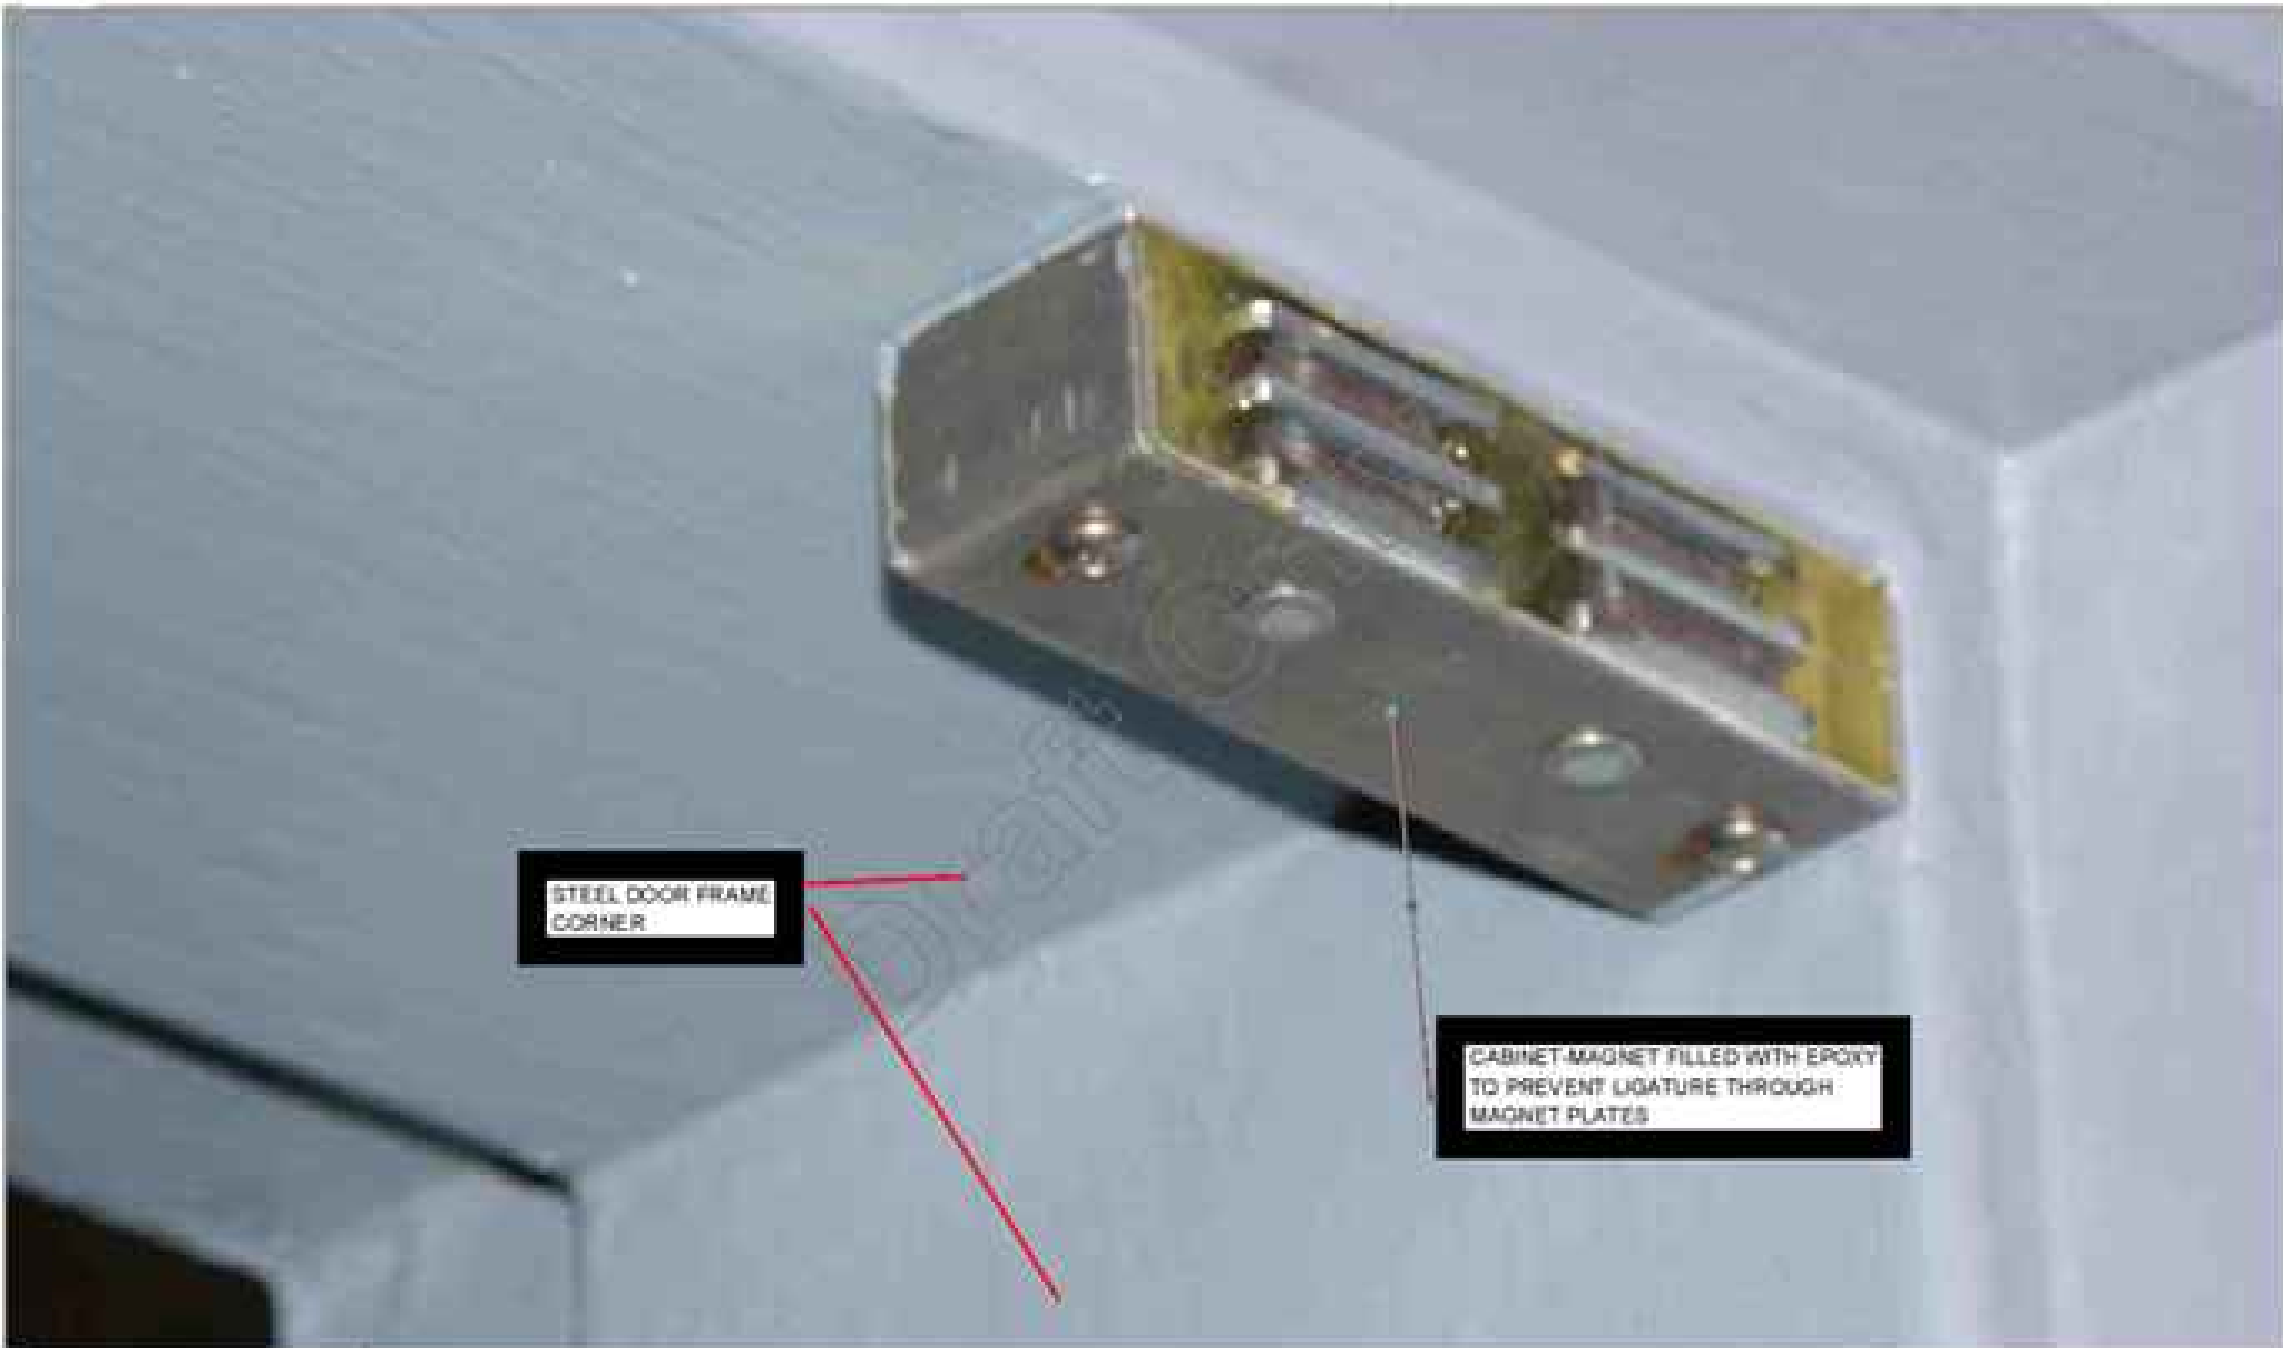


SAMPLE MAGNET CATCH (FROM ANOTHER VAMC)

PATIENT BATHROOM DOOR MODIFICATIONS (PERRY POINT AND BALTIMORE VAMC)

INSTALL FULL LENGTH COVER PLATES OVER BOTH HINGE-SIDE FACES TO COVER HINGE NUCKLE OPENINGS. PLATES TO BE ATTACHED TO EXISTING HINGES VIA FASTENERS, WELDING, OR APPROVED ADHESIVE SYSTEM. PLATES TO BE BEVELED TO MATCH EXISTING HINGES AND SHALL NOT CREATE ANY ANCHOR POINTS.



LEFT AND ABOVE IMAGES:
EXISTING BATHROOM DOOR HINGES (TYPICAL OF PERRY POINT AND BALTIMORE VAMC)

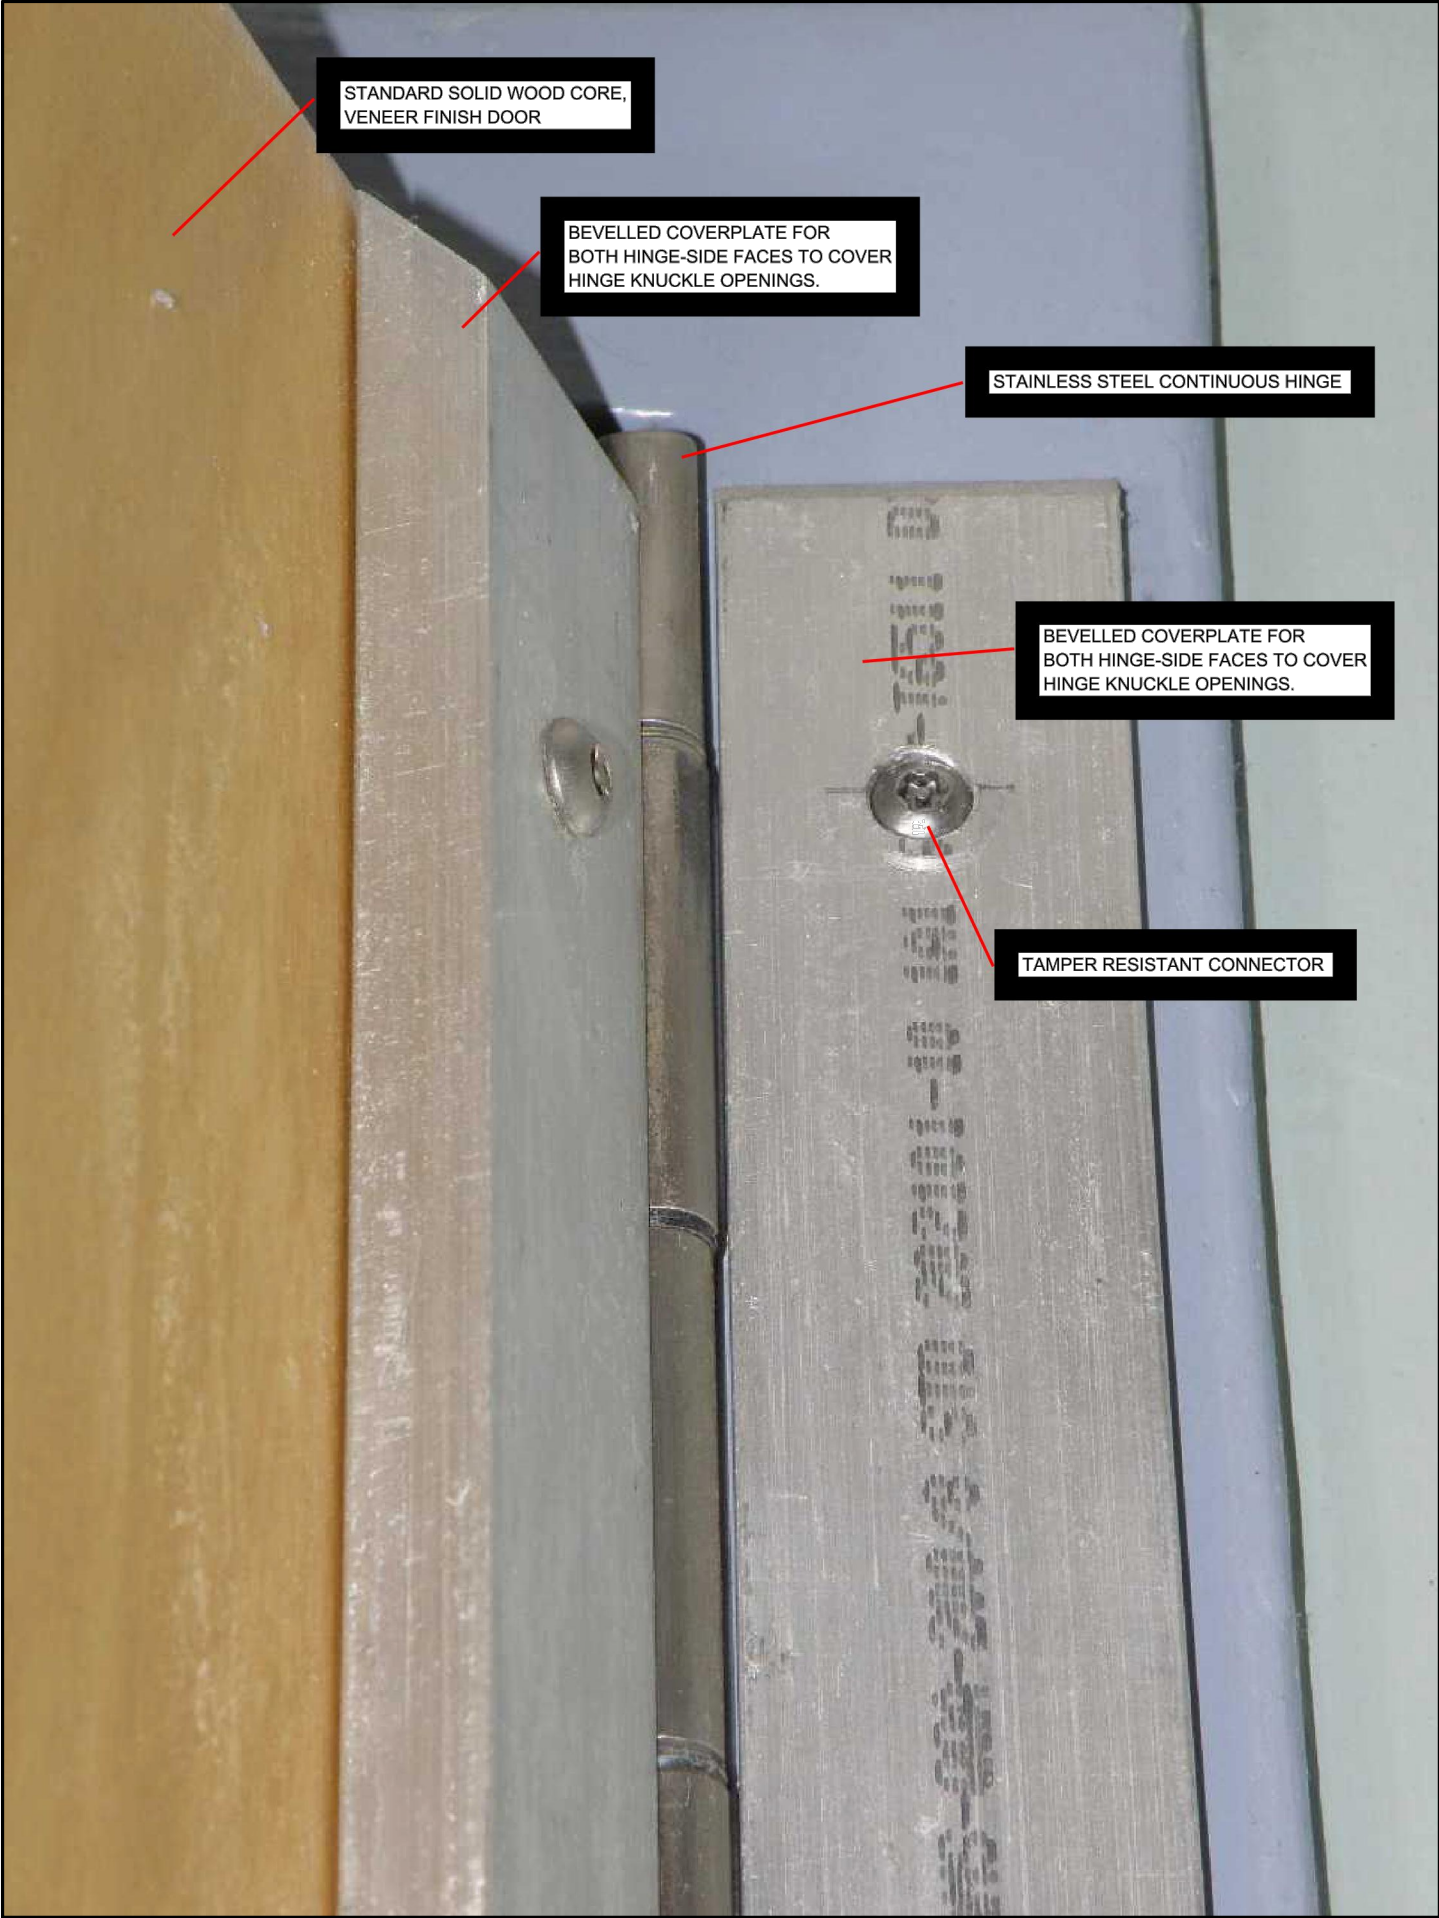

SIMILAR HINGE REPAIR AT ANOTHER VA MEDICAL CENTER (PROVIDED FOR INFORMATION)

NOTE: CONTRACTOR SHALL INSTALL ONE COMPLETE OPERATIONAL (LOCAL – NOT REQUIRING CENTRAL CONTROL PANEL) SYSTEM MOCK-UP FOR MENTAL HEALTH REVIEW BEFORE PROCEEDING WITH THE OTHER DOORS.

DOOR MODIFICATION DETAILS PLAN

<div><div>Additions:</div><div>Revisions:</div></div>	<div>Date:</div>				<div>Drawing Title:</div> <div>DOOR MODIFICATION DETAILS PLAN</div>	<div>Project Title:</div> <div>CORRECT MENTAL HEALTH PATIENT SAFETY ISSUES</div>	<div>Date:</div> <div>3/30/13</div>	<div>DEPARTMENT OF VETERANS AFFAIRS</div>			
					<div>Approved: Associate Director for Operations:</div>	<div>Scale:</div> <div>NONE</div>	<div>Building No:</div> <div>VARIES</div>		<div>Checked:</div> <div>ERJ</div>	<div>Drawn:</div> <div>MHD/RTW</div>	<div>Project No:</div> <div>512A5-13-304</div>
					<div>Approved: Director, Medical Center:</div>	<div>Location:</div> <div>VAMHCS PERRY POINT, MD 21902 10 N. GREENE ST. BALTIMORE, MD 21201</div>	<div>DRAWING NO:</div> <div>A1-10</div>		<div>SHEET NO:</div> <div>11 OF 11</div>		